

Manuals.plus /
› RemotesReplaced /
› RemotesReplaced Replacement Remote Control for UNITED LED42HS72A9 User Manual

RemotesReplaced LED42HS72A9

User Manual
REMOTESREPLACED REPLACEMENT REMOTE CONTROL

Model: UNITED LED42HS72A9

Introduction

This manual provides instructions for the RemotesReplaced replacement remote control, designed to be electronically identical and fully compatible with the original UNITED LED42HS72A9 television remote control. It offers all the same functionalities without requiring any complex setup.



Figure 1: Front view of the RemotesReplaced replacement remote control. This image displays the full layout of buttons, including power, channel, volume, navigation, and special function keys.

Setup

- 1. Unpack the Remote Control:** Carefully remove the remote control from its packaging.

2. **Install Batteries:**

- Locate the battery compartment on the back of the remote control.
- Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
- Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
- Close the battery compartment cover securely.



Figure 2: Back view of the remote control, highlighting the battery compartment. The compartment cover is visible at the bottom, ready for battery insertion.

3. **Initial Use:** No setup codes are required. The remote control is pre-programmed for the UNITED LED42HS72A9 television. Simply point the remote control at your television and begin use.

Operating Instructions

This remote control provides full functionality for your UNITED LED42HS72A9 television. Below is a general guide to common button functions:

Button	Function
POWER	Turns the television on or off.
MUTE	Mutes or unmutes the television sound.
TV/SAT/DVD/AUX	Selects the input source (Television, Satellite, DVD, Auxiliary).
MENU	Accesses the television's main menu.
EXIT	Exits the current menu or on-screen display.
SHIFT	May activate secondary functions for certain buttons (refer to your TV's manual).

Button	Function
0-9 (Number Buttons)	Direct channel selection.
SOURCE	Cycles through available input sources.
-/--	Used for entering two-digit or three-digit channel numbers.
GUIDE	Displays the electronic program guide (EPG).
VOL +/-	Adjusts the volume level.
CH +/-	Changes the television channel.
Navigation (Up/Down/Left/Right/OK)	Navigates through menus and confirms selections.
BACK	Returns to the previous screen or menu.
SLEEP	Sets a sleep timer for the television.
TV/DTV	Switches between analog and digital TV modes.
INFO	Displays information about the current program or input.
EPG	Electronic Program Guide.
FAV	Accesses favorite channels list.
NET TV / SMART	Accesses smart TV features or internet applications.
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions within menus or smart TV applications.
Playback Controls (Play, Pause, Stop, Rewind, Fast Forward)	Controls media playback on connected devices or smart TV apps.

Note: Specific button functions may vary slightly depending on your television's firmware and connected devices. Refer to your television's original manual for detailed function descriptions.

Maintenance

- **Battery Replacement:** Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote.
- **Storage:** Store the remote control in a dry place, away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

Troubleshooting

- **Remote Control Not Responding:**
 - Ensure the remote control is pointed directly at the television's infrared sensor.
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA batteries.

- Remove any obstructions between the remote control and the television.
- **Certain Buttons Not Working:**
 - This remote is designed to replicate all original functions. If a specific button does not work, ensure your television supports that function.
 - Clean the remote control, especially around the non-working buttons, to remove any debris.
 - Try replacing the batteries.
- **Short Operating Range:**
 - Replace the batteries. Weak batteries can reduce the remote's effective range.
 - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.

Specifications

Brand: RemotesReplaced
Model Number: LED42HS72A9
Special Feature: Ergonomic design
Battery Type: 2 x AAA batteries (not included)
Item Weight: 120 Grams
Manufacturer: Linkwebb
Country of Origin: China



Figure 3: Side profile of the remote control, illustrating its ergonomic shape for comfortable handling.

Warranty

This RemotesReplaced remote control is guaranteed for 1 year from the date of purchase against manufacturing defects. This warranty covers normal use and does not apply to damage resulting from misuse, accidents, unauthorized modifications, or battery leakage.

Support

For further assistance or if you encounter issues not covered in this manual, please refer to the original television manual for specific functions or contact the retailer where you purchased this replacement remote control.

© 2023 RemotesReplaced. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09TBBYL55>

More documents and user manuals: <https://manuals.plus/>