

Bosch EasyMower 18V-32-200

Bosch EasyMower 18V-32-200 Cordless Lawn Mower

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Bosch EasyMower 18V-32-200 Cordless Lawn Mower. This manual provides important information for the safe and efficient operation, maintenance, and troubleshooting of your new lawn mower. Please read these instructions carefully before first use and keep them for future reference. The Bosch EasyMower 18V-32-200 is designed for maintaining small to medium-sized lawns, offering cordless convenience and ease of use.

2. SAFETY INFORMATION

General Safety Warnings for Power Tools:

- Always wear appropriate personal protective equipment, including safety glasses, sturdy footwear, and hearing protection.
- Keep children and bystanders away while operating the lawn mower.
- Do not operate the mower in wet conditions or rain.
- Inspect the area to be mowed and remove any objects that could be thrown by the blade.
- Never lift or carry the mower while the motor is running.
- Disconnect the battery before cleaning, adjusting, or performing maintenance.
- Ensure all guards and safety devices are in place and functioning correctly before use.
- Use only Bosch original batteries and chargers specified for this model.

For detailed safety instructions, refer to the separate Safety Information document provided with your product.

3. PRODUCT OVERVIEW

The Bosch EasyMower 18V-32-200 is a lightweight and powerful cordless lawn mower designed for ease of use and efficient lawn care.



Image 3.1: Overview of the Bosch EasyMower 18V-32-200 Cordless Lawn Mower.

Key Features:

- **Syneon Technology:** Regulates energy consumption for optimal efficiency and extended battery runtime.
- **Easy Grass Collection:** Features a 31-liter grass box and integrated grass combs for clean edges.
- **Adjustable Cutting Height:** Three settings (20, 40, and 60 mm) for versatile lawn care.
- **Compact Design:** Foldable top handle for space-saving storage.
- **Lightweight:** Weighs only 7.5 kg, making it easy to maneuver.



Image 3.2: Key features of the EasyMower 18V-32-200, including Syneon Technology, easy grass collection, and adjustable cutting height.

Included Components:

- EasyMower 18V-32-200 Lawn Mower
- 1 x PBA 18V 4.0 Ah Battery
- 1 x AL 1830 Charger
- Grass Box

4. SETUP


The Bosch EasyMower 18V-32-200 requires some assembly before first use. Follow these steps carefully.

4.1 Handle Assembly

Unfold the handle and secure it in place using the provided fasteners. Ensure the handle is firmly locked to prevent movement during operation.

4.2 Battery Installation and Charging

1. Charge the battery fully before first use. Connect the AL 1830 charger to a power outlet and insert the PBA 18V 4.0 Ah battery. The indicator light on the charger will show the charging status.
2. Once charged, slide the battery into the designated battery compartment on the lawn mower until it clicks into place. Ensure it is securely seated.

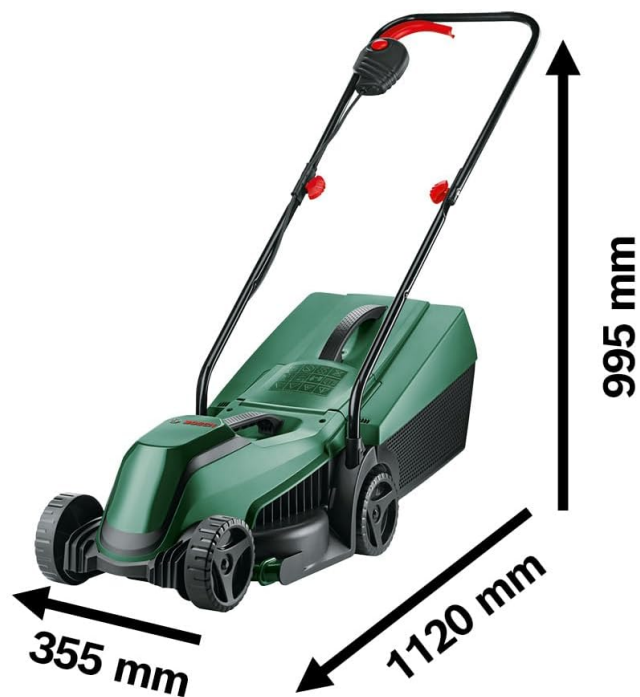

Leggero e potente

7,5 kg con elevate prestazioni di taglio grazie al sistema di trasmissione a cinghia.



Image 4.1: Correctly inserting the battery into the lawn mower.

4.3 Cutting Height Adjustment

The cutting height can be adjusted to three positions: 20 mm, 40 mm, and 60 mm.

1. Ensure the mower is switched off and the battery is removed before adjusting the cutting height.
2. Locate the height adjustment lever or mechanism on the mower deck.
3. Move the lever to select the desired cutting height. Refer to the markings for each position.



Image 4.2: Adjusting the cutting height of the mower blade.

5. OPERATING INSTRUCTIONS

5.1 Starting and Stopping the Mower

1. To start: Press and hold the safety button, then pull the switch lever towards the handle.
2. To stop: Release the switch lever. The blade will stop rotating.

5.2 Mowing Techniques

- Mow in straight, overlapping lines for an even cut.
- For best results, avoid cutting more than one-third of the grass height at a time.
- Utilize the integrated grass combs for precise cutting along edges and near walls.



Image 5.1: A user operating the Bosch EasyMower 18V-32-200 to cut grass.



Image 5.2: The mower's design allows for clean cutting along lawn edges.

5.3 Emptying the Grass Box

Regularly check and empty the grass box to maintain optimal cutting performance and prevent clogging.

1. Switch off the mower and remove the battery.
2. Lift the grass box from the rear of the mower.
3. Empty the grass clippings into a suitable container.
4. Reattach the grass box securely before resuming operation.



6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Bosch EasyMower 18V-32-200.

6.1 Cleaning

- Always remove the battery before cleaning.
- Clean the mower deck and grass box after each use to prevent grass buildup. Use a brush or cloth; avoid using water jets directly on electrical components.
- Ensure ventilation openings are clear of debris.

6.2 Blade Care

- Regularly inspect the blade for wear, damage, or dullness. A sharp blade ensures a clean cut and reduces strain on the motor.
- If the blade is damaged or excessively dull, it should be replaced by a qualified service technician.

6.3 Storage

The foldable handle allows for compact storage.

1. Clean the mower thoroughly before storing.
2. Remove the battery and store it in a cool, dry place, away from direct sunlight.
3. Fold the handle for compact storage.
4. Store the mower in a dry, secure location, out of reach of children.



Image 6.1: The mower's handle folds for compact storage in small spaces.



Image 6.2: The lightweight design allows for easy transport and storage.

7. TROUBLESHOOTING

If you encounter issues with your Bosch EasyMower 18V-32-200, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Mower does not start	Battery not inserted correctly or discharged; Safety button/switch lever not engaged.	Ensure battery is fully charged and correctly inserted. Engage safety button and pull switch lever simultaneously.
Poor cutting performance	Dull or damaged blade; Grass box full; Cutting height too low for grass length.	Inspect and replace blade if necessary. Empty grass box. Adjust cutting height to a higher setting.
Mower stops during operation	Battery discharged; Overload protection activated (e.g., very thick grass).	Recharge battery. Reduce load by raising cutting height or mowing smaller sections.
Excessive vibration	Damaged or unbalanced blade.	Remove battery and inspect blade for damage. Replace damaged blade immediately.

If the problem persists after attempting these solutions, please contact Bosch customer support.

8. SPECIFICATIONS

Specification	Detail
Brand	Bosch
Model Number	06008B9D00

Specification	Detail
Product Type Name	Bosch Cordless Lawn Mower
Power Source	Battery Powered (18V System)
Material	Plastic
Item Weight	7.5 Kilograms
Cutting Width	32 Centimeters
Operating Mode	Automatic
Product Dimensions (DxWxH)	35.5P x 112l x 99.5H cm
Min Adjustable Cutting Height	20 Millimeters
Max Adjustable Cutting Height	60 Millimeters
Number of Cutting Positions	3
Assembly Required	Yes
Country of Origin	Hungary

9. WARRANTY AND SUPPORT

9.1 Manufacturer Warranty

This Bosch EasyMower 18V-32-200 comes with a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

9.2 Customer Support

For technical assistance, spare parts, or warranty service, please contact Bosch customer support. You can find contact information on the official Bosch website or through your local retailer.

EU Spare Part Availability: 1 Year