

Severin HV 7152

Severin HV 7152 Cordless 2-in-1 Stick Vacuum Cleaner Instruction Manual

Model: HV 7152

1. INTRODUCTION

Thank you for choosing the Severin HV 7152 Cordless 2-in-1 Stick Vacuum Cleaner. This manual provides important information regarding the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

The Severin HV 7152 is a versatile 2-in-1 cordless vacuum cleaner designed for general floor cleaning, quick clean-ups, car interior cleaning, and above-floor tasks like furniture and ceiling cobweb removal. It features a high-speed rotating brush with LED lighting and offers up to 40 minutes of runtime.



Image 1.1: The Severin HV 7152 Cordless 2-in-1 Stick Vacuum Cleaner in its upright position, charging.

2. SAFETY INFORMATION

- Read all instructions before using the appliance.
- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the appliance. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- Turn off the appliance before connecting or disconnecting the battery charger.
- Use only the charger supplied by the manufacturer.
- Store the appliance indoors in a cool, dry place.

3. SETUP AND ASSEMBLY

The Severin HV 7152 is designed for easy assembly. Follow these steps to prepare your vacuum cleaner for first use:

3.1 Unpacking and Component Identification

Carefully remove all components from the packaging. Ensure all parts listed below are present:

- Main unit (motor and dust container)
- Extension tube
- Motorized floor brush with LED lights
- Crevice tool
- Upholstery brush / 2-in-1 brush
- Wall mount (if included)
- Charging adapter



Image 3.1: Included accessories: crevice tool and upholstery brush.

3.2 Initial Charging

Before first use, fully charge the battery. Connect the charging adapter to the main unit and plug it into a power outlet. The battery indicator lights will show the charging status. A full charge takes approximately 5 hours.

3.3 Assembling the Stick Vacuum

1. Attach the extension tube to the main unit until it clicks into place.
2. Attach the motorized floor brush to the other end of the extension tube until it clicks into place.

Your stick vacuum is now assembled. For handheld use, detach the extension tube and attach desired accessories directly to the main unit.

Your browser does not support the video tag.

Video 3.2: An overview of the cordless vacuum cleaner, demonstrating its features and assembly.

4. OPERATING INSTRUCTIONS

The Severin HV 7152 offers flexible cleaning options with its 2-in-1 design and multiple power levels.

4.1 Power On/Off and Suction Levels

Press the power button on the main unit to turn the vacuum cleaner on. The appliance has 3 power levels. Press the power button repeatedly to cycle through the suction levels (low, medium, high). The battery level indicators will show the remaining charge.

4.2 Using as a Stick Vacuum

For floor cleaning, use the assembled stick vacuum with the motorized floor brush. The brush features 3 LED lights to illuminate dark areas, making dirt more visible.



Image 4.1: The motorized floor brush with LED lights in action.

4.3 Using as a Handheld Vacuum

To convert to a handheld vacuum, press the release button to detach the extension tube from the main unit. Attach the desired accessory (crevice tool or upholstery brush) directly to the main unit.



Image 4.2: Using the handheld vacuum with the crevice tool for hard-to-reach areas.



Image 4.3: Cleaning a car interior with the handheld vacuum and upholstery brush.

Your browser does not support the video tag.

Video 4.4: Practical product illustration showing various uses and features of the vacuum cleaner.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Severin HV 7152.

5.1 Emptying the Dust Container

The dust container has a capacity of 500 ml. Empty it regularly to maintain suction power.

1. Ensure the vacuum cleaner is turned off.
2. Press the release button on the dust container to open the bottom flap and empty contents into a waste bin.



Image 5.1: Emptying the dust container.

5.2 Cleaning the Filters

The vacuum cleaner uses a cartridge filter. Clean the filters regularly to prevent clogging and maintain suction.

1. Ensure the vacuum cleaner is turned off.
2. Remove the dust container from the main unit.
3. Twist and pull out the filter assembly from the dust container.
4. Separate the individual filter components.
5. Tap the filters to remove loose dust. If heavily soiled, rinse them under running water. Ensure they are completely dry before reassembling and placing back into the vacuum cleaner.



Image 5.2: Removing the filter from the dust container.

5.3 Cleaning the Rotating Brush

Periodically check the motorized floor brush for tangled hair or debris.

1. Ensure the vacuum cleaner is turned off and disconnected from the extension tube.
2. Locate the release mechanism on the side of the brush head.
3. Remove the brush roller.
4. Use scissors or a brush to remove any tangled hair or fibers.
5. Reinsert the brush roller until it clicks into place.



Image 5.3: Underside of the motorized floor brush, showing the brush roller.

Your browser does not support the video tag.

Video 5.4: Detailed view of product features, including maintenance aspects like filter cleaning.

6. TROUBLESHOOTING

If you encounter issues with your Severin HV 7152, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is discharged.	Charge the battery fully.
Low suction power.	Dust container is full.	Empty the dust container.
Low suction power.	Filters are clogged.	Clean or replace the filters.
Low suction power.	Brush roller is tangled.	Clean the brush roller.

Problem	Possible Cause	Solution
Motorized brush does not rotate.	Brush roller is jammed or tangled.	Clean the brush roller and check for obstructions.
Battery does not charge.	Charger not properly connected.	Ensure charger is securely connected to both the vacuum and the power outlet.
Battery does not charge.	Faulty charger or battery.	Contact customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Severin
Model Name	HV7152
Model Number	HV 7152
Special Feature	Bagless
Filter Type	Cartridge
Recommended Surfaces	Upholstery, General floor cleaning, Quick cleaning, Car interiors, Above-floor cleaning (furniture, cobwebs)
Power Source	Battery Powered
Capacity	500 Milliliters
Color	White
Noise Level	75 Decibels
Number of Speeds/Power Levels	3
Portable	Yes
Indoor/Outdoor Use	Indoor
Finish Type	Glossy
Cordless	Yes
Item Weight	1.42 Kilograms
Item Dimensions (L x W x H)	28L x 15W x 68H cm
Control Type	Manual Control, Touch
Form Factor	Stick Vacuum
Included Components	Crevice nozzle

Feature	Detail
Voltage	22.2 Volts
Wattage	120 Watts
Battery Charge Time	5 Hours
Battery Life/Runtime	Up to 40 Minutes
Connectivity Technology	USB

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Severin appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

8.2 Customer Support

For technical assistance, spare parts, or any questions regarding your Severin HV 7152, please contact Severin customer support. Contact details can typically be found on the official Severin website or on the product packaging.