

[manuals.plus](#) /› [JBL](#) /› **JBL Clip 4 Portable Bluetooth Speaker User Manual**

JBL Clip 4

JBL Clip 4 Portable Bluetooth Speaker User Manual

Model: Clip 4 | Brand: JBL

INTRODUCTION

The JBL Clip 4 is an ultra-portable, waterproof, and dustproof Bluetooth speaker designed for on-the-go audio. It delivers surprisingly rich JBL Original Pro Sound with punchy bass from its compact size. Featuring a redesigned integrated carabiner, the Clip 4 can be easily attached to a belt, strap, or buckle, making it ideal for travel, outdoor activities, and home use. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your JBL Clip 4 speaker.



Image: Front view of the JBL Clip 4 speaker, showcasing the JBL logo and accessible control buttons.

WHAT'S IN THE BOX

Upon unboxing your JBL Clip 4, please ensure all components are present:

- 1x JBL Clip 4 Portable Bluetooth Speaker
- 1x USB-C Cable for charging
- 1x Quick Start Guide
- 1x Safety Sheet
- 1x Warranty Card
- 1x LED Flashlight Key Chain (Bonus item, color may vary)





Image: The JBL Clip 4 speaker in its retail packaging, illustrating the included items.

SETUP

1. Charging the Battery

Before first use, fully charge your JBL Clip 4. The speaker provides up to 10 hours of playtime on a single charge, but initial charging ensures optimal performance.

1. Connect the provided USB-C cable to the charging port on the bottom of the speaker.
2. Connect the other end of the USB-C cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status. It will turn off once fully charged.



Image: Bottom view of the JBL Clip 4, highlighting the USB-C charging port.

2. Power On/Off

- To power on, press the power button located on the side of the speaker.

- To power off, press and hold the power button until the speaker turns off.

3. Bluetooth Pairing

The JBL Clip 4 supports wireless Bluetooth streaming from compatible devices.

1. Power on the JBL Clip 4. It will automatically enter pairing mode if not connected to a device. The Bluetooth indicator light will flash.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Select "JBL Clip 4" from the list of available devices.
4. Once connected, the Bluetooth indicator light will remain solid.



Image: The JBL Clip 4 speaker positioned next to a smartphone, demonstrating the Bluetooth pairing process.

OPERATING INSTRUCTIONS

Volume Control

- Press the + button to increase volume.
- Press the - button to decrease volume.

Music Playback

- Press the Play/Pause button (triangle symbol) once to play or pause music.
- Press the Play/Pause button twice to skip to the next track.



Image: Angled view of the JBL Clip 4, clearly showing the volume control buttons and the play/pause button.

Using the Integrated Carabiner

The JBL Clip 4 features a redesigned integrated carabiner for enhanced portability.

- Open the carabiner by pressing the spring-loaded gate.
- Attach the speaker to a backpack, belt loop, or other secure point.
- Ensure the gate is fully closed to prevent accidental detachment.





Image: Side view of the JBL Clip 4, emphasizing its integrated carabiner for easy attachment.

Waterproof and Dustproof (IP67)

The JBL Clip 4 is rated IP67, meaning it is fully waterproof and dustproof. This allows for use in various environments, including by the pool, at the park, or in the shower.

- The speaker can be immersed in water up to 1 meter (3.3 feet) for up to 30 minutes.
- Ensure the USB-C charging port cover is securely closed before exposing the speaker to water or dust.
- After exposure to water, allow the speaker to dry completely before charging.



Image: The JBL Clip 4 speaker clipped to a backpack, demonstrating its portability and suitability for outdoor use.

MAINTENANCE

Proper care ensures the longevity and performance of your JBL Clip 4 speaker.

- **Cleaning:** Use a soft, damp cloth to clean the speaker's exterior. Avoid using harsh chemicals or abrasive cleaners.
- **Drying:** If the speaker has been exposed to water, gently shake off excess water and allow it to air dry completely before charging or storing.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging Port:** Keep the USB-C charging port clean and free of debris. Ensure the port cover is sealed when not charging.

TROUBLESHOOTING

If you encounter issues with your JBL Clip 4, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on	Low battery	Charge the speaker using the provided USB-C cable.
Cannot pair via Bluetooth	Speaker not in pairing mode; device Bluetooth off; interference	Ensure speaker is on and Bluetooth indicator is flashing. Turn Bluetooth off/on on your device. Move closer to the speaker. Forget "JBL Clip 4" on your device and re-pair.
No sound or low volume	Volume too low; device not connected; audio source issue	Increase volume on both the speaker and your connected device. Verify Bluetooth connection. Check audio playback on your source device.
Short battery life	High volume usage; aging battery	Reduce volume to extend playtime. Ensure speaker is fully charged before use. If battery life significantly degrades, contact support.
Charging issues	Faulty cable/adapter; dirty charging port	Try a different USB-C cable and power adapter. Clean the charging port gently. Ensure the speaker is dry before charging.

SPECIFICATIONS

Detailed technical specifications for the JBL Clip 4 Portable Bluetooth Speaker:

- **Model Name:** Clip 4
- **Speaker Type:** Outdoor
- **Special Feature:** Waterproof, Dustproof (IP67)
- **Connectivity Technology:** Bluetooth (Wireless Communication Technology: Bluetooth)
- **Bluetooth Range:** 10 Meters
- **Compatible Devices:** Smartphone, Tablet, Laptop
- **Power Source:** Battery Powered
- **Speaker Maximum Output Power:** 5 Watts
- **Audio Output Mode:** Stereo
- **Audio Driver Type:** Dynamic Driver
- **Control Method:** App (via connected device)

- **Product Dimensions (D x W x H):** 2" x 5" x 3"
- **Item Weight:** 0.41 Kilograms (approximately 14.4 ounces)
- **Material:** Plastic, Paper/Polypropylene (Likely)
- **Color:** Red
- **Mounting Type:** Tabletop Mount (also portable via carabiner)



Image: The JBL Clip 4 speaker with its approximate dimensions labeled for reference.

WARRANTY INFORMATION

The JBL Clip 4 comes with a Limited Warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration of coverage. This warranty typically covers manufacturing defects and workmanship under normal use. For warranty claims or detailed information, please retain your proof of purchase and contact JBL customer support.

SUPPORT

For further assistance, technical support, or to view frequently asked questions, please visit the official JBL support website:

[Visit JBL Support](#)

You may also find helpful resources and contact information on the JBL brand store page on Amazon:

[JBL Store on Amazon](#)

© 2026 JBL. All rights reserved.