

[Manuals.plus](#) /

> [VGR](#) /

> VGR V-062 Professional Rechargeable Hair and Beard Trimmer Instruction Manual

VGR V-062

VGR V-062 Professional Rechargeable Hair and Beard Trimmer Instruction Manual

Model: V-062

INTRODUCTION

Thank you for choosing the VGR V-062 Professional Rechargeable Hair and Beard Trimmer. This device is designed for precise and efficient hair and beard trimming. To ensure optimal performance and safety, please read this instruction manual carefully before using the product and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Do not immerse the trimmer in water or other liquids.
- Keep the device away from children.
- Ensure the charging cable is not damaged before use.
- Do not use the trimmer if the blades are damaged, as this may cause injury.
- Only use the provided charging cable and accessories.
- Unplug the trimmer before cleaning or maintenance.
- Store the trimmer in a dry place when not in use.

PACKAGE CONTENTS

Verify that all items are present in the package:

- VGR V-062 Hair Trimmer
- Head Guard
- Charging Cable (USB)
- Lubricating Oil
- Cleaning Brush
- Guide Combs (2mm, 3mm, 4mm)
- User Manual



Image: The VGR V-062 trimmer displayed with its full set of accessories, including guide combs, charging cable, oil, brush, and protective cap, alongside its retail packaging.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your VGR V-062 trimmer.





Image: Front and side views of the VGR V-062 trimmer, highlighting its golden casing and silver blade assembly.



Image: A detailed close-up of the VGR V-062 trimmer's metal blade, showing the fine teeth for precise cutting.

ONE-KEY SWITCH

Easy operation



Image: A close-up of the VGR V-062 trimmer's one-key power switch, indicating its easy operation.



Image: The VGR V-062 trimmer and some accessories, including guide combs, arranged on a dark surface.

SETUP AND INITIAL USE

Charging the Trimmer

1. Before first use, fully charge the trimmer.
2. Connect the USB charging cable to the trimmer's charging port and to a suitable USB power adapter (not included) or computer USB port.
3. The LED display will indicate the charging status. A full charge takes approximately 120 minutes.
4. Once fully charged, the trimmer provides up to 180 minutes of operating time.

Attaching Guide Combs

The VGR V-062 comes with 2mm, 3mm, and 4mm guide combs for different trimming lengths.

1. Select the desired guide comb.
2. Align the comb with the trimmer blade and push it firmly until it clicks into place.
3. To remove, gently pull the comb away from the blade.



Image: The VGR V-062 trimmer shown alongside its three guide combs (2mm, 3mm, 4mm), illustrating how they attach to the blade.

OPERATING THE TRIMMER

Turning On/Off

- To turn on the trimmer, slide the power switch to the "ON" position.
- To turn off, slide the power switch to the "OFF" position.

Trimming Hair and Beard

1. Ensure your hair or beard is clean and dry before trimming.

- 2. Attach the desired guide comb for the preferred length. For a closer trim, use without a comb.
- 3. Hold the trimmer with the blade flat against the skin or at a slight angle, moving against the direction of hair growth.
- 4. Use slow, controlled strokes for an even trim.
- 5. Regularly check the LED display for battery level.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your trimmer.

Cleaning the Blades

- 1. Turn off the trimmer and disconnect it from the power source.
- 2. Remove any attached guide comb.
- 3. Use the provided cleaning brush to remove loose hairs from the blades.
- 4. For a more thorough clean, the blades can be rinsed under running water. Ensure the trimmer body does not get wet. Dry the blades completely before reattaching or storing.

Oiling the Blades

- 1. After cleaning and drying, apply 1-2 drops of the lubricating oil to the blades.
- 2. Turn on the trimmer for a few seconds to distribute the oil evenly.
- 3. Wipe off any excess oil with a soft cloth.
- 4. Oil the blades regularly (e.g., after every few uses) to maintain cutting efficiency and prevent rust.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or no charge.	Charge the trimmer fully.
Trimmer pulls hair or cuts poorly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If problem persists, blades may need replacement.
Trimmer makes unusual noise.	Blades are obstructed or not properly aligned.	Clean the blades thoroughly. Ensure blades are correctly seated.
Battery life is shorter than expected.	Battery not fully charged or aging battery.	Ensure full charge cycle. Over time, battery capacity may decrease.

SPECIFICATIONS

Model: V-062
Brand: VGR
Power Source: Battery Powered (Rechargeable)
Battery Type: 1 Lithium Ion battery (included)
Battery Capacity: 1400 mAh

Operating Time: Up to 180 minutes

Charging Time: Approximately 120 minutes

Motor Speed: 5500-7000 RPM

Blade Material: Metal

Product Dimensions: 17 x 5 x 5 cm

Weight: 580 grams

Specific Product Uses: Hair and Beard Trimming

Target Audience: Adults (Unisex)

Hair Type: All

UPC/GTIN: 689176876109

WARRANTY AND SUPPORT

Your VGR V-062 trimmer comes with a comprehensive warranty:

- **30-Day Money-Back Guarantee:** If you are not completely satisfied, you may return the product within 30 days for a full refund.
- **12-Month Warranty:** A 12-month warranty is provided for replacement or repair due to manufacturing defects.

For warranty claims or technical support, please contact your retailer or the manufacturer directly. Please have your purchase receipt and product model number (V-062) ready.

