

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [La Reveuse](#) /

› [La Reveuse Food Processor Electric Food Chopper Model LARB4016 Instruction Manual](#)

## La Reveuse LARB4016

# La Reveuse Food Processor Electric Food Chopper Model LARB4016 Instruction Manual

## 1. INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the La Reveuse Electric Food Processor. This manual provides essential information for the safe and efficient operation of your appliance. Please read all instructions carefully before use and retain for future reference.

### Important Safety Precautions:

- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Keep hands and utensils out of the processing bowl while operating to prevent injury.
- Blades are sharp. Handle with care when assembling, disassembling, and cleaning.
- Do not immerse the motor unit in water or other liquids. Wipe clean with a damp cloth.
- Ensure the lid is securely locked in place before operating the appliance.
- This appliance is for household use only. Do not use outdoors.
- Keep the appliance out of reach of children.

## 2. PRODUCT COMPONENTS

Your La Reveuse Food Processor includes the following parts:

- **300W Power Pod:** The motor unit that drives the blades.
- **7-Cup (1.7L) Glass Bowl:** A durable, BPA-free glass container for processing ingredients.
- **Bi-Level Stainless Steel Chop Blade:** A four-blade system designed for efficient chopping, grinding, and mincing.
- **Whisking Disc:** An accessory for whisking eggs or light batters.
- **Bowl Lid:** Secures the processing bowl and engages the motor unit.
- **Anti-Slip Rubber Mat:** Provides stability during operation.
- **Spatula:** For dislodging ingredients and mixing.
- **User Guide:** This instruction manual.

# How to Use



## Step 1

Install the chop blade or whisking disc.



## Step 2

Fill the ingredients, put on lid.  
Cut food into small pieces of even size  
—about 1.18 inch (3cm)



## Step 3

Install the motor pod in position, plug in.



## Step 4

Press the button (Low or High speed) for pulse chopping, release to stop

Figure 1: Exploded view of La Reveuse Food Processor components and dimensions.


# Gourmet cooking at home



Figure 2: The bi-level stainless steel chop blade for efficient processing.

# Hassle-free Cleanup

Simply rinse with soap and water

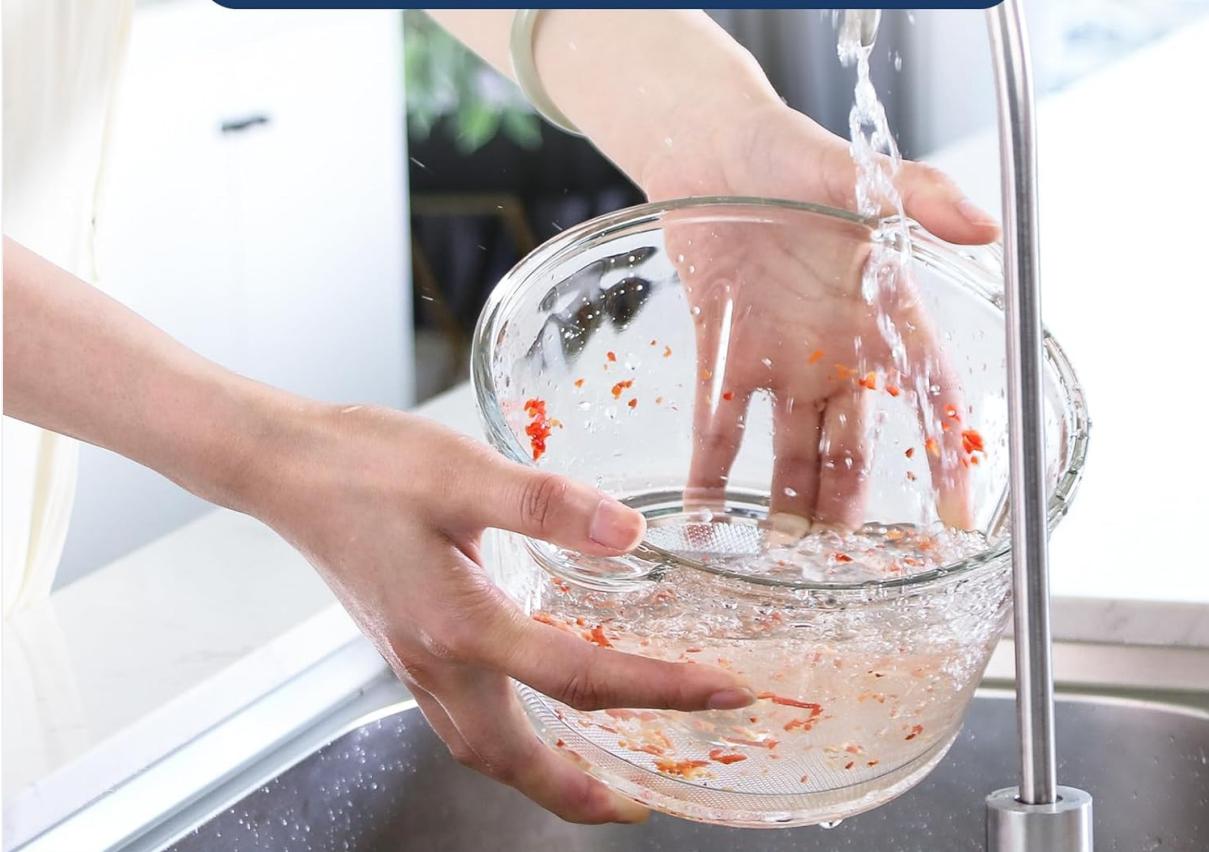

**Note:** All parts of this product are not allowed to be sterilized by hot water over 140°F

Figure 3: The whisking disc accessory.

## 3. SETUP AND ASSEMBLY

Follow these steps to assemble your food processor before use:

- 1. Step 1: Install the Blade or Whisking Disc.** Place the anti-slip rubber mat on a clean, dry surface. Position the 7-cup glass bowl on the mat. Carefully place either the bi-level chop blade or the whisking disc onto the central pin inside the glass bowl. Ensure it is seated correctly.
- 2. Step 2: Add Ingredients and Secure Lid.** Cut food into small, even pieces (approximately 1.18 inches or 3 cm) for optimal processing. Place the prepared ingredients into the glass bowl. Securely place the bowl lid onto the glass bowl, ensuring it aligns properly.
- 3. Step 3: Install Motor Pod and Plug In.** Place the 300W power pod onto the lid, aligning the drive shaft with the blade/whisking disc. Plug the power cord into a suitable electrical outlet.

# WHAT'S THE SIZE



Figure 4: Step-by-step assembly and usage guide.

## 4. OPERATING INSTRUCTIONS

Your food processor features two-speed pulse control for precise processing.

- **Speed I (Low Speed):** Ideal for soft ingredients such as onions, garlic, vegetables, fruits, and baby food. Press and hold the left button for this speed.
- **Speed II (High Speed):** Suitable for harder ingredients like meat and nuts. Press and hold the right button for this speed.

To operate, press and hold the desired speed button. Release the button to stop the processing. Use short pulses for coarse chopping or longer pulses for finer results.



Figure 5: Two-speed pulse control buttons.

### Example Uses:

- **Grinding Nuts:** For grinding nuts to a fine consistency, use Speed II.  
Video 1: Demonstrating the food processor grinding nuts to a fine texture.
- **Making Baby Puree:** For pureeing soft ingredients like pumpkin for baby food, use Speed I.  
Video 2: Demonstrating the food processor making pumpkin baby puree.
- **Whisking:** Attach the whisking disc for light whisking tasks like eggs.



Figure 6: The whisking disc in action, ideal for eggs.

## 5. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your food processor.

- **Disassembly:** The food processor has a fully disassembled structure for easy cleaning. Unplug the power pod, remove the lid, and carefully detach the blade or whisking disc.
- **Hand Washing:** All removable parts (glass bowl, lid, blades, whisking disc, spatula) should be hand washed with warm, soapy water. Rinse thoroughly and dry immediately.
- **Motor Unit:** The 300W power pod should never be immersed in water. Wipe its exterior with a damp cloth and dry thoroughly.
- **Important Note:** Do not sterilize any parts of this product with hot water over 140°F (60°C).



Figure 7: Easy hand washing of the glass bowl.

## 6. TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common solutions:

- **Appliance does not turn on:**
  - Ensure the power cord is securely plugged into a working electrical outlet.
  - Verify that the bowl lid and motor pod are correctly assembled and locked into position. The appliance has a safety mechanism that prevents operation if not properly assembled.
- **Food is not chopping evenly:**
  - Ensure ingredients are cut into small, even pieces before placing them in the bowl.
  - Do not overfill the bowl. Process in smaller batches if necessary.
  - Use the pulse function (short bursts) to achieve desired consistency and redistribute ingredients.
- **Motor pod/blade assembly is tricky to align:**
  - Ensure the blade or whisking disc is fully seated on the central pin in the bowl.
  - When placing the motor pod, gently rotate it until it slots correctly into the lid's mechanism. It should sit flush and feel secure.

## 7. SPECIFICATIONS

- **Brand:** La Reveuse
- **Model Name:** La Reveuse 7-Cup Food Chopper
- **Item Model Number:** LARB4016
- **Power:** 300 Watts
- **Power Source:** AC
- **Number of Speeds:** 2 (Pulse Control)

- **Bowl Capacity:** 7-Cup (1.7 Liters)
- **Bowl Material:** Glass (BPA-free)
- **Blade Material:** Stainless Steel (Bi-Level 4-Blade)
- **Product Dimensions:** 7.4"D x 8.72"W x 8.7"H
- **Item Weight:** 5.15 pounds
- **Color:** Blue
- **Special Features:** Blend, Chop, Mix, Puree, Whisk, Anti-slip rubber mat

## 8. WARRANTY AND SUPPORT

---

For warranty information or product support, please refer to the documentation included with your purchase or contact La Reveuse customer service directly. Keep your purchase receipt as proof of purchase.