

[Manuals.plus](#) /

› [SIUMAL](#) /

› Universal TV Remote Control for Samsung, Sharp, LG, Sony, Panasonic, Toshiba, HAIER, Sanyo, TCL, Hitachi, Hisense Smart TV

SIUMAL Universal TV Remote Control

SIUMAL Universal TV Remote Control User Manual

Model: Universal TV Remote Control

PRODUCT OVERVIEW

The SIUMAL Universal TV Remote Control is designed to operate a wide range of Smart TVs from popular brands including Samsung, Sharp, LG, Sony, Panasonic, Toshiba, HAIER, Sanyo, TCL, Hitachi, and Hisense. This remote offers a convenient replacement or secondary control for your television, featuring an ergonomic design and responsive buttons for comfortable use.



Image: Front view of the SIUMAL Universal TV Remote Control, showcasing its button layout and sleek black design.

SETUP INSTRUCTIONS

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery cover securely.



Image: Close-up view of the remote control's battery compartment with the cover removed, showing where to insert AAA batteries.

2. Initial Setup / Pairing with TV

For LG, Sony, Samsung, and Panasonic TVs, the remote can often be used directly without complex setup. For Sharp, Toshiba, Haier, TCL, Hitachi, and Hisense Smart TVs, a simple setup process is required:

1. Ensure your TV is powered on.
2. Point the remote control directly at your TV.
3. Press and hold the corresponding brand button on the remote (e.g., "SHARP", "TOSHIBA", "HAIER", "TCL", "HITACHI", "HISENSE") for approximately 5 seconds.
4. The LED indicator on the remote will flash three times, indicating that the setting is complete.

5. Test the remote's functions (e.g., power, volume, channel) to confirm successful pairing.

Important Note:

- This remote control is specifically designed for the listed TV brands. It may not be compatible with other TV brands.
- If the remote does not function after the initial setup, repeat the pairing process.

OPERATING INSTRUCTIONS

Once paired, the SIUMAL Universal TV Remote Control functions similarly to your original TV remote. Below are common button functions:

- **Power Button:** Turns the TV on or off.
- **Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Netflix Button:** Direct access to the Netflix application (if supported by your TV).
- **Smart Button:** Accesses your TV's smart hub or app menu.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain TV menus or apps.



Image: A family watching television, with the SIUMAL remote control prominently displayed in the foreground, illustrating its use in a home entertainment setting.



Image: A hand holding the SIUMAL Universal TV Remote Control, demonstrating its comfortable grip and button accessibility.

MAINTENANCE

To ensure the longevity and optimal performance of your SIUMAL Universal TV Remote Control, please follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners, aerosols, or abrasive solvents, as these can damage the remote's surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the LED indicator does not light up. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** While durable, repeated drops can damage the remote. Handle with care.

TROUBLESHOOTING

If you encounter issues with your SIUMAL Universal TV Remote Control, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Remote is not responding.	• Check if batteries are inserted correctly with correct polarity. • Replace old or dead batteries with new AAA batteries. • Ensure there are no obstructions between the remote and the TV's infrared sensor. • Confirm the remote is pointed directly at the TV.
Remote functions are erratic or inconsistent.	• Low battery power; replace batteries. • Interference from other electronic devices or strong light sources. • Re-perform the pairing process for your TV brand.
Remote does not control my TV brand.	• Ensure your TV brand is one of the supported brands (Samsung, Sharp, LG, Sony, Panasonic, Toshiba, HAIER, Sanyo, TCL, Hitachi, Hisense). • Make sure the pairing process for your specific brand was completed successfully (LED flashes three times). • If your TV is not one of the listed brands, this remote may not be compatible.
Specific buttons (e.g., Netflix, Smart) do not work.	• These functions depend on your TV's capabilities. Ensure your TV supports these features. • Some smart features may require an internet connection on your TV.

If the problem persists after trying these solutions, please contact SIUMAL customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7.09 x 1.77 x 0.79 inches (18cm x 4.5cm x 2cm)
Item Weight	1.44 ounces (approx. 80g)
Material	High-quality ABS
Battery Required	2 x AAA batteries (not included)
Remote Range	Around 10 Meters
Connectivity Technology	Infrared (IR)
Compatible Devices	Television (Samsung, Sharp, LG, Sony, Panasonic, Toshiba, HAIER, Sanyo, TCL, Hitachi, Hisense Smart TV)
Max Number of Supported Devices	1 (per remote)
Special Feature	Universal compatibility for specified brands



Image: Diagram showing the dimensions of the SIUMAL Universal TV Remote Control: 17.5cm/6.88in length, 4.5cm/1.77in width, and 2cm/0.78in thickness.

CUSTOMER SUPPORT

For any questions, concerns, or issues not covered in this manual, please contact SIUMAL customer support. We are committed to providing assistance and ensuring your satisfaction with our product.

Please refer to the contact information provided with your purchase or visit the official SIUMAL website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Is there any way to access Hulu directly or indirectly on my SIUMAL Universal TV Remote Control?

The SIUMAL Universal TV Remote Control does not have a dedicated physical button for Hulu. While it features direct-access buttons for Netflix and Amazon Prime, accessing Hulu must be done through your television's software...

[Read full answer](#)