

LEXiBOOK JG610BAT

LEXiBOOK Batman Electronic Pinball Machine JG610BAT User Manual

Model: JG610BAT

1. INTRODUCTION

Thank you for choosing the LEXiBOOK Batman Electronic Pinball Machine. This manual provides essential information for setting up, operating, and maintaining your new pinball game. Enjoy hours of fun with its exciting sounds, light effects, and challenging obstacles.





Front view of the LEXiBOOK Batman Electronic Pinball Machine.

2. SAFETY INFORMATION

- **Recommended Age:** Suitable for ages 3 years and up.
- **Battery Safety:** Always use the correct type of batteries (3 C batteries). Ensure batteries are inserted with correct polarity (+ and -). Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly. Do not short-circuit battery terminals.
- **Choking Hazard:** Contains small parts (pinball). Not suitable for children under 3 years due to potential choking hazards.
- **Supervision:** Adult supervision is recommended during play.
- **Placement:** Place the pinball machine on a stable, flat surface to prevent tipping.

3. PACKAGE CONTENTS

- 1 x LEXiBOOK Batman Electronic Pinball Machine
- 1 x Score Display Unit
- 2 x Plastic Support Legs
- 1 x Screwdriver (for battery compartment)
- 1 x Metal Pinball

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside of the pinball machine.
2. Using the provided screwdriver, carefully open the battery compartment cover.
3. Insert 3 C batteries (not included) into the compartment, ensuring correct polarity (+ and -).
4. Replace the battery compartment cover and secure it with the screw.

4.2 Assembly

1. Attach the score display unit to the top of the main pinball machine body. It should click securely into place.
2. Insert the two plastic support legs into the designated slots on the back underside of the machine. These legs will slightly elevate the back of the machine, creating the optimal playing angle.
3. Place the assembled pinball machine on a flat, stable surface.



Angled view of the pinball machine, showing the score display and overall design.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- Locate the **ON/OFF** button on the score display unit.
- Press the **ON/OFF** button to power on the machine. The digital score display will light up, and the machine will emit sounds and lights.
- Press the **ON/OFF** button again to power off the machine.

5.2 Playing the Game

1. **Launch the Ball:** Pull back the spring-loaded plunger on the right side of the machine and release it to launch the metal pinball onto the playfield.
2. **Control Flippers:** Use the two flipper buttons on the sides of the machine to control the flippers and keep the ball in play.
3. **Score Points:** Hit the various obstacles and bumpers on the playfield to score points. The digital display will automatically update your score. The machine features 5 luminous obstacles that light up and produce sounds when hit.
4. **Reset Game:** To start a new game or reset your score, press the **RESET** button on the score display unit.



A child engaged in playing the electronic pinball machine.

5.3 Video Demonstration

Watch this video for a general demonstration of an electronic pinball game's operation and features.

Your browser does not support the video tag.

Video demonstrating the functionality of an electronic pinball game, including lights, sounds, and flipper action.

6. MAINTENANCE

- **Cleaning:** Wipe the surface of the pinball machine with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the machine in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the machine will not be used for an extended period, remove the batteries to prevent leakage and damage.

7. TROUBLESHOOTING

- **No Power:** Ensure batteries are correctly installed and not depleted. Replace with fresh C batteries if necessary.
- **No Sound/Lights:** Check battery power. If sounds or lights are intermittent, batteries may be low.
- **Ball Not Launching/Flippers Not Working:** Check for any obstructions on the playfield or around the flipper mechanisms. Ensure the spring-loaded plunger is functioning correctly.
- **Score Display Issues:** Try pressing the RESET button. If the issue persists, replace batteries.

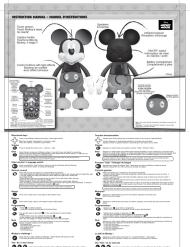
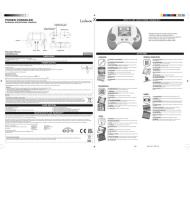
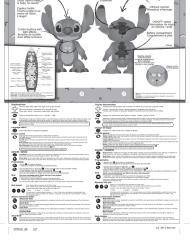
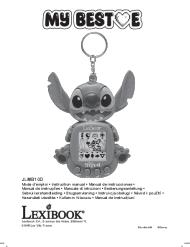
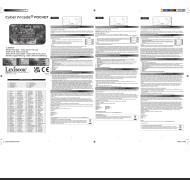
8. SPECIFICATIONS

Feature	Detail
Product Dimensions	10.24 x 21.06 x 8.66 inches
Item Weight	1.55 pounds
Item Model Number	JG610BAT
Manufacturer Recommended Age	3 years and up
Batteries Required	3 C batteries (not included)
Release Date	February 25, 2022
Manufacturer	Lexibook

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your LEXiBOOK Batman Electronic Pinball Machine, please refer to the contact information provided on the product packaging or visit the official LEXiBOOK website. Keep your purchase receipt as proof of purchase.

Related Documents - JG610BAT

	<p><u>Lexibook Mickey Mouse Interactive Toy: Instruction Manual & Features</u> Detailed instruction manual for the Lexibook Mickey Mouse interactive toy (Model MCH01i1). Learn about its features, remote control functions, programming, games, battery requirements, maintenance, and safety guidelines.</p>
	<p><u>Lexibook JLMB10D Stitch Handheld Game - Instruction Manual</u> Discover the Lexibook JLMB10D Stitch handheld game with this comprehensive instruction manual. Learn about gameplay, caring for Stitch, games, and features for this fun electronic toy.</p>
	<p><u>Lexibook Power Console® JCG100i1series Instruction Manual</u> User manual for the Lexibook Power Console® JCG100i1series, a bilingual educational handheld game console. This guide covers setup, usage, power supply, care, maintenance, warranty, and details the various language, mathematics, logic, general knowledge, and games activities available on the device.</p>
	<p><u>Stitch Interactive Robot Toy - Instruction Manual and Features</u> Detailed instruction manual for the Lexibook Stitch interactive robot toy. Learn about its features, controls, programming, interaction modes, battery installation, maintenance, and warranty.</p>
	<p><u>Lexibook JLMB10D Stitch Handheld Game Console - Instruction Manual</u> Comprehensive instruction manual for the Lexibook JLMB10D Stitch handheld game console, detailing setup, battery replacement, button functions, game rules, care instructions for Stitch, game descriptions, maintenance, and warranty information.</p>
	<p><u>Cyber Arcade® POCKET JL1895SP - Portable Handheld Game Console User Manual</u> Official instruction manual for the Lexibook Cyber Arcade® POCKET (JL1895SP) handheld game console. Learn about setup, battery installation, game controls, safety warnings, maintenance, and warranty information.</p>

