

[Manuals.plus](#) /

› [NEQUARE](#) /

› NEQUARE S180 Corded Stick Vacuum Cleaner User Manual

NEQUARE S180

NEQUARE S180 Corded Stick Vacuum Cleaner

USER MANUAL

1. Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

2. Package Contents

Please check the package contents carefully to ensure all items are present and in good condition:

- Main Motor Unit

- Extension Wand
- Motorized Floor Head with LED Lights
- Crevice Tool
- Small Brush (for hard surface furniture, curtains, etc.)
- Power Cord
- User Manual

600W High-powered Motor

Provides unprecedented power suction



Image: NEQUARE S180 Vacuum Cleaner fully assembled, showing the main components.

3. Product Overview

Familiarize yourself with the different parts of your NEQUARE S180 vacuum cleaner.

3.1. High-Powered Motor and Suction System



Image: The 600W high-powered motor and cyclone system, generating 20,000Pa suction.

The NEQUARE S180 features a 600W motor designed to generate up to 20,000Pa of suction power, effectively picking up various types of debris from multiple surfaces.

3.2. Dual-HEPA Filtration System

Double HEPA Filtration

Captures dust and expels cleaner air



Image: Detailed view of the 4-stage filtration system, including cyclone, metal mesh, and dual HEPA filters.

This vacuum incorporates a 4-stage filtration system:

1. **Cyclone Filtration:** Separates larger particles and reduces bulk.
2. **Metal Mesh Filtration:** Captures finer debris.
3. **HEPA Filtration (Primary):** Traps microscopic dust and allergens.
4. **2nd HEPA Filtration (Secondary):** Ensures only clean air is expelled.

This system is designed to capture dust and expel cleaner air, preventing obstructions and maintaining suction efficiency.

4. Setup and Assembly

Follow these steps to assemble your NEQUARE S180 vacuum cleaner:

1. **Attach the Extension Wand:** Insert the extension wand into the main motor unit until it clicks securely into place.
2. **Connect the Floor Head:** Attach the motorized floor head to the other end of the extension wand, ensuring it locks firmly.

3. **Optional Attachments:** For handheld use, you can directly attach the crevice tool or small brush to the main motor unit.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

600W High-powered Motor

Provides unprecedented power suction



Image: The NEQUARE S180 vacuum cleaner fully assembled and ready for operation.

5. Operating Instructions

5.1. Powering On/Off

Plug the vacuum cleaner into a power outlet. Press the power button on the main unit to turn the vacuum on. Press it again to turn it off. The vacuum will remain on without needing to hold the button.

5.2. Using the Motorized Floor Head

LED Multi-tasker Power Head



Image: The LED motorized floor head illuminating dust and dirt for effective cleaning.

The motorized floor head is equipped with LED lights to illuminate dust and debris on the floor, making cleaning more efficient. The stiff nylon bristles are designed to agitate carpet pile for deep cleaning without scratching hard floors.


5.3. Rotatable Floor Brush Head

Rotatable Floor Brush Head

Easily to clean any corner



90°

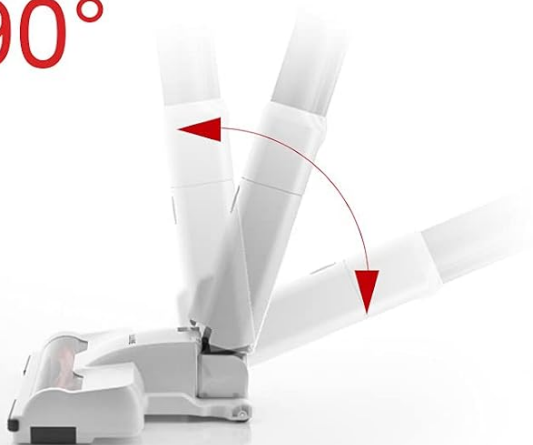

180°



Image: The rotatable floor brush head demonstrating its 90° and 180° maneuverability for reaching tight spaces.

The 180° rotatable design of the floor brush head allows for easy maneuverability around furniture and into tight corners, ensuring thorough cleaning.

5.4. Self-Standing Feature



Self-standing

Store and stand the vacuum anywhere you like

Image: The NEQUARE S180 vacuum cleaner utilizing its self-standing feature for convenient storage.

The vacuum cleaner is designed with a self-standing feature, allowing you to store it upright anywhere without needing to lean it against a wall or use a dock.

5.5. Handheld Conversion and Attachments

The NEQUARE S180 quickly converts into a handheld cleaner by detaching the extension wand and floor head. Attach the small brush for cleaning furniture, curtains, or car interiors. Use the crevice tool for narrow spaces, corners, and edges.

5.6. Suction Performance Overview

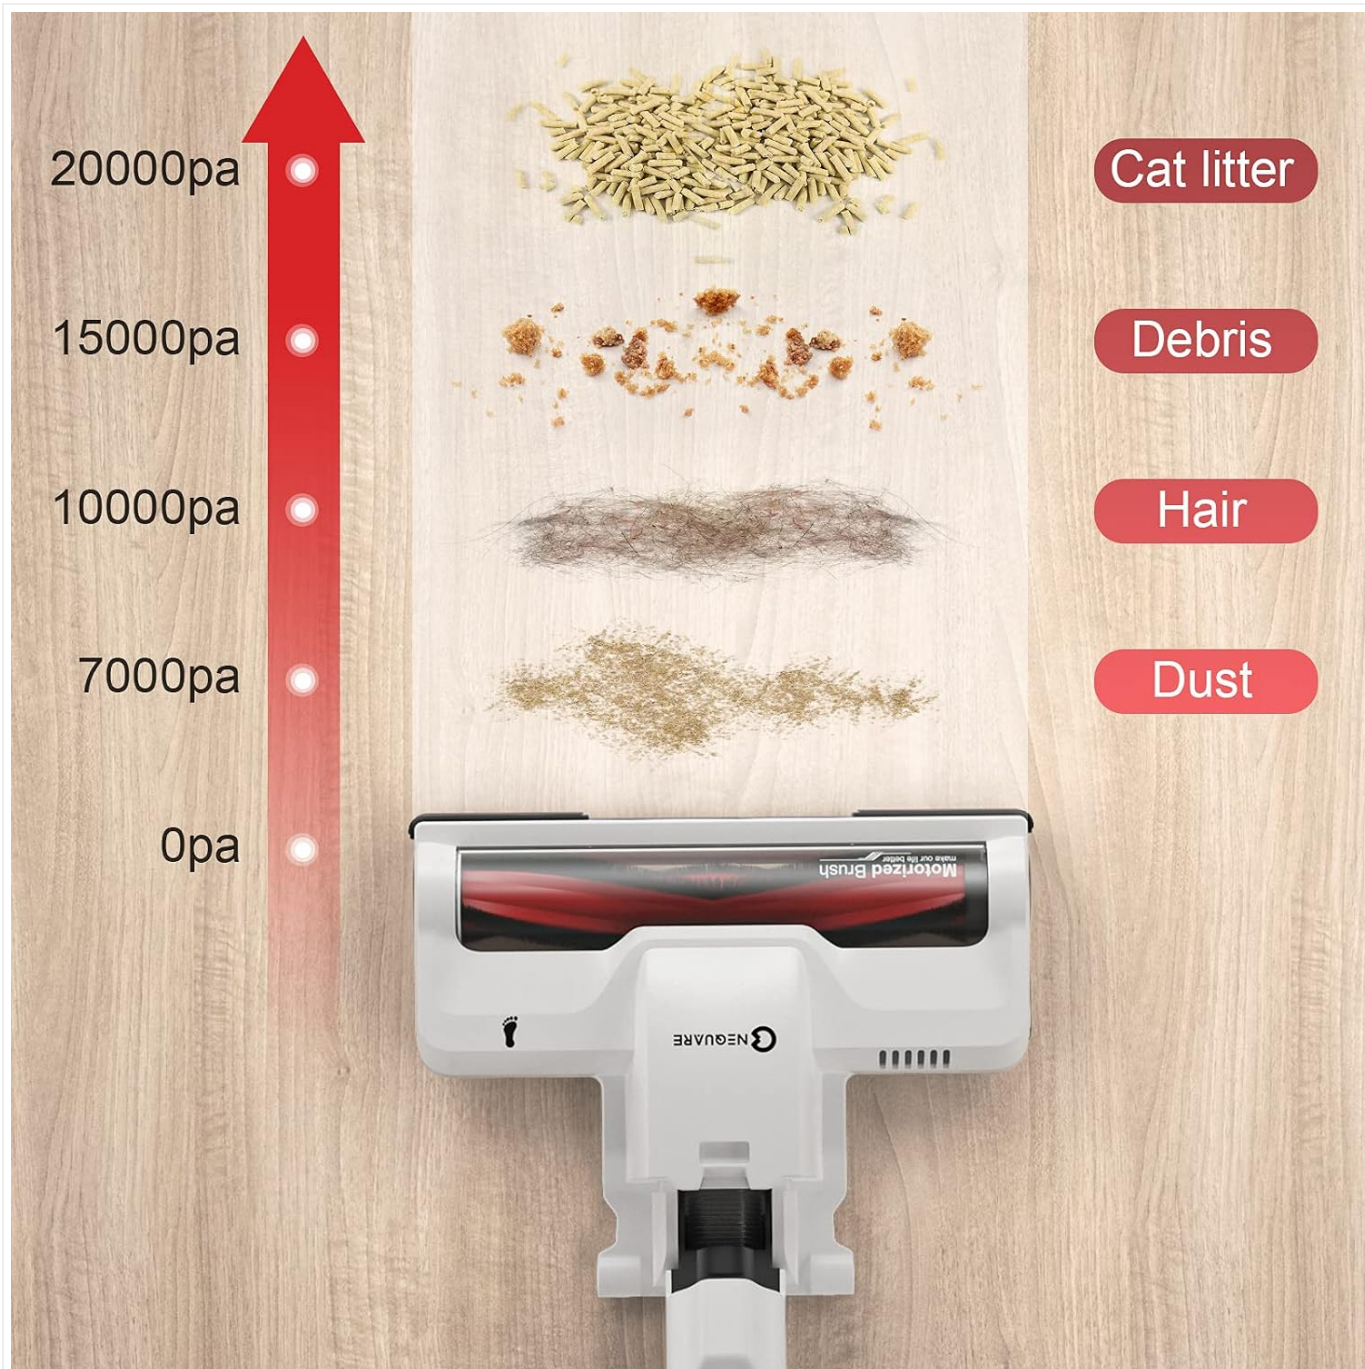


Image: Visual representation of the vacuum's suction capability, from dust (7000Pa) to cat litter (20000Pa).

The vacuum provides varying levels of suction power suitable for different debris types:

- **Dust:** Approximately 7,000 Pa
- **Hair:** Approximately 10,000 Pa
- **Debris:** Approximately 15,000 Pa
- **Cat Litter:** Up to 20,000 Pa

6. Maintenance

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

6.1. Emptying the Dust Cup

Empty the dust cup after each use or when the MAX fill line is reached. To empty, detach the dust cup from the main unit and open the bottom flap over a trash bin. Close the flap securely after emptying.

Double HEPA Filtration

Captures dust and expels cleaner air



Image: The filtration components, including HEPA filters, which require regular cleaning.

The HEPA filters and metal mesh filter should be cleaned regularly, ideally once a month, depending on usage. To clean:

1. Twist and pull to remove the dust cup from the main unit.
2. Remove the internal filter assembly (HEPA filters and metal mesh).
3. Tap off loose dirt over a trash bin.
4. Rinse the filters under cold running water. Do not use detergent.
5. Allow all filter parts to air dry completely for at least 24 hours before reassembling. Do not use the vacuum with wet filters.
6. Reassemble the filters and dust cup, ensuring all parts are securely in place.

6.3. Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris. To clean, turn off and unplug the vacuum. Use scissors to carefully cut away any tangled hair or threads from the brush roll. Ensure the brush roll spins freely after cleaning.

7. Troubleshooting

Problem	Possible Cause	Solution
Vacuum does not turn on	Not plugged in; Power outlet not working; Power button not pressed.	Ensure power cord is securely plugged in; Test outlet with another appliance; Press the power button firmly.
Low suction power	Dust cup full; Filters clogged; Obstruction in nozzle, hose, or brush roll.	Empty dust cup; Clean or replace filters; Remove any obstructions.
Brush roll not spinning	Hair or debris tangled in brush roll; Obstruction in floor head.	Turn off and unplug. Remove tangled hair/debris; Check for and remove obstructions in the floor head.
Vacuum overheats and shuts off	Clogged filters; Blocked airflow; Prolonged use.	Clean filters; Check for and remove any blockages; Allow the vacuum to cool down for at least 30 minutes before restarting.

8. Specifications

Feature	Detail
Brand	NEQUARE
Model	S180
Power Source	Corded Electric
Wattage	600 watts
Voltage	280 Volts
Suction Power	Up to 20,000 Pa
Item Weight	1.1 Kilograms
Form Factor	Handheld, Stick
Filter Type	Cartridge (Dual HEPA)
Special Features	HEPA Filtration, Lightweight, Self-Standing, Rotatable Motorized Floor Head with LED
Surface Recommendation	Carpet, Hard Floor

9. Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact NEQUARE customer service through their official website. Please have your model number (S180) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09TF8TVN2>

More documents and user manuals: **<https://manuals.plus/>**