

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA A7 Action Camera Camcorder User Manual

ASHATA cf4b360e-39c6-45cc-8979-10bb4f6688ca

ASHATA A7 Action Camera Camcorder User Manual

Model: cf4b360e-39c6-45cc-8979-10bb4f6688ca

1. INTRODUCTION

This user manual provides detailed instructions for the ASHATA A7 Action Camera Camcorder. Please read this manual thoroughly before using the product to ensure proper operation and to maximize its performance and lifespan. This camera is designed for capturing high-quality video and photos in various environments, including outdoor sports and underwater activities.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Ultra HD Camera:** Features a 2-inch 1080P LCD HD screen for clear review and quick operation.
- **Wide Angle Lens:** Equipped with a 140° high-resolution wide-angle lens.
- **Waterproof Capability:** Special waterproof case allows for a maximum waterproof depth of 30 meters.
- **Long Battery Life:** 900mAh large capacity battery provides approximately 20 minutes of continuous recording at 1080P.
- **Versatile Shooting Modes:** Supports single shot and self-timer (2s/5s/continuous shoot) modes.
- **USB 2.0 Port:** Supports data transfer and charging, allowing recording while recharging.
- **Expandable Storage:** Supports external TF card up to 32GB (not included).

2.2 Package Contents

Verify that all items listed below are included in your package:

- 1 x Action Camera
- 1 x Waterproof Case
- 1 x User Manual
- 1 Pack x Cable Ties
- 1 x Micro USB Cable
- 1 x Helmet Base
- 1 Pack x Bracket

-
- The image displays a variety of GoPro accessories. At the top left is the GoPro camera itself, encased in a clear protective housing with a black front plate that features a lens and a '1080P' label. To its right is a black USB cable with a standard USB-A connector on one end and a GoPro-specific connector on the other. Below the camera are several mounting components: two black mounting tabs with threaded ends, a black mounting bracket, a black mounting plate with a central hole, a black mounting bracket with a ball joint, a black mounting plate with a central hole, a black mounting bracket with a ball joint, a black mounting plate with a central hole, a black mounting bracket with a ball joint, a black mounting plate with a central hole, a black mounting bracket with a ball joint, and a black mounting plate with a central hole. At the bottom right is a red user manual with the text 'User Manual v3.0' at the top and several icons at the bottom representing different features like 'FPV', 'Car recorder', 'Action sports', 'Adventure sports', 'Diving', and 'Night vision'.

3. SETUP

1. Connect the Micro USB Cable to the camera's USB 2.0 port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light will change or turn off.
4. A full charge typically takes approximately 2-3 hours.

3.2 Inserting a Micro SD Card

The camera supports external TF (Micro SD) cards up to 32GB. A memory card is required for recording videos and taking photos.

1. Locate the Micro SD card slot on the side of the camera.
2. Insert the Micro SD card with the gold contacts facing the back of the camera until it clicks into place.
3. To remove the card, gently push it in until it clicks, then release, and it will eject.

3.3 Attaching the Waterproof Case

The waterproof case is essential for underwater use and protection against dust and impacts.

1. Ensure the camera is clean and dry before placing it into the waterproof case.
2. Open the latch on the top of the waterproof case.
3. Carefully insert the camera into the case, ensuring it sits snugly.
4. Close the latch firmly until it clicks, ensuring a watertight seal.
5. Before first use underwater, it is recommended to test the waterproof case without the camera inside to ensure no leaks are present.



Figure 3.3.1: The ASHATA A7 Action Camera securely enclosed within its transparent waterproof housing, ready for use in wet conditions.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- **Power On:** Press and hold the Power/Mode button (usually on the front or top) for a few seconds until the screen illuminates.
- **Power Off:** Press and hold the Power/Mode button again for a few seconds until the screen turns off.



Figure 4.1.1: Front view of the ASHATA A7 Action Camera showing the lens and power/mode button, alongside the rear view displaying the 2-inch LCD screen.

4.2 Switching Modes

Press the Power/Mode button repeatedly to cycle through different modes: Video Recording, Photo Mode, Playback Mode, and Settings Mode.

4.3 Video Recording

1. Switch to Video Recording mode. The video icon will appear on the screen.
2. Press the OK/Shutter button (usually on the top) to start recording. A red dot or recording timer will appear on the screen.
3. Press the OK/Shutter button again to stop recording. The video file will be saved to the Micro SD card.

4.4 Taking Photos

1. Switch to Photo Mode. The camera icon will appear on the screen.
2. Press the OK/Shutter button to take a photo. The photo will be saved to the Micro SD card.

4.5 Playback

1. Switch to Playback Mode.
2. Use the Up/Down buttons (if available) to navigate through your recorded videos and photos.
3. Press the OK/Shutter button to play a video or view a photo in full screen.

4.6 Settings Menu

In Settings Mode, you can adjust various camera parameters:

- **Video Resolution:** 1920*1080, 1280*720, VGA 640*480
- **Picture Resolution:** 2560*1440, 1920*1080, 1280*720, VGA 640*480
- **Shooting Mode:** Single shoot, Self-timer (2s/5s/continuous shoot)
- **Light Source Frequency:** 50Hz / 60Hz
- **OSD Language:** English, German, French, Spanish, Italian, Portuguese, Traditional Chinese, Simplified Chinese, Japanese, Russian
- Other settings may include Date/Time, Loop Recording, Exposure, White Balance, etc.

Use the Up/Down buttons to navigate and the OK/Shutter button to select options.

5. MAINTENANCE

5.1 Cleaning the Camera and Case

- Use a soft, lint-free cloth to clean the camera body and screen.
- For the lens, use a specialized lens cleaning cloth and solution. Avoid touching the lens with fingers.
- After using the waterproof case in saltwater, rinse it thoroughly with fresh water and allow it to air dry. Ensure the seals are free of sand or debris.

5.2 Battery Care

- Charge the battery fully before first use.
- Avoid completely draining the battery frequently to prolong its lifespan.
- If storing the camera for an extended period, charge the battery to about 50% and store it in a cool, dry place.

5.3 Storage

Store the camera and accessories in a cool, dry place away from direct sunlight and extreme temperatures. Keep it away from dust and moisture.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is drained or not inserted correctly.	Charge the battery. Ensure the battery is properly inserted.
Cannot record video/take photos.	Micro SD card is full, not inserted, or corrupted.	Insert a Micro SD card. Format the card (this will erase all data). Replace the card if corrupted.
Poor video/photo quality.	Lens is dirty, lighting conditions are poor, or incorrect resolution settings.	Clean the lens. Ensure adequate lighting. Adjust video/picture resolution in settings.
Water leakage in waterproof case.	Case not properly sealed, or seal is damaged.	Ensure the latch is firmly closed. Check the rubber seal for debris or damage. Replace case if seal is compromised.

7. SPECIFICATIONS

Feature	Detail
Model	cf4b360e-39c6-45cc-8979-10bb4f6688ca
Brand	ASHATA
Material	Plastic + Metal
Lens	140° High Resolution Wide Angle
Screen	2-inch TFT LCD HD Screen
Video Format	MOV
Picture Format	JPEG
Video Resolution	1920*1080, 1280*720, VGA 640*480
Picture Resolution	2560*1440, 1920*1080, 1280*720, VGA 640*480
Interface	USB 2.0
Waterproof Depth	30m (with waterproof case)
Shooting Mode	Single shoot / Selfie (2s/5s/continuous shoot)
External Storage	Supports TF card up to 32GB (not included)
Light Source Frequency	50Hz / 60Hz
Shooting Time (1080P)	Approximately 20 minutes
Battery Capacity	900mAh
OSD Language	English, German, French, Spanish, Italian, Portuguese, Traditional Chinese, Simplified Chinese, Japanese, Russian
Item Weight	9.1 ounces
Package Dimensions	9.57 x 5.08 x 2.4 inches

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official ASHATA website. Keep your purchase receipt as proof of purchase for any warranty claims. You can also visit the ASHATA Store on Amazon for more information:[ASHATA Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09TFMB8Q8>

More documents and user manuals: **<https://manuals.plus/>**