

Smartby SMTB-BN59-01315J

Universal Samsung TV Remote Instruction Manual

Model: SMTB-BN59-01315J | Brand: Smartby

1. INTRODUCTION

This manual provides essential information for the operation and maintenance of your Smartby Universal Samsung TV Remote, model BN59-01315J. This high-grade remote control is designed as a direct replacement for various Samsung LCD, LED, HDTV, and 3D Smart TVs, including models compatible with BN59-01315A, BN59-01315B, BN59-01315D, BN59-01315E, BN59-01199F, AA59-00666, and AA59-00741A.

It features dedicated shortcut buttons for popular streaming services like Netflix, Prime Video, and Samsung TV Plus, offering convenient access to your favorite content. The remote incorporates an upgraded chip for durable lifespan and stable performance, ensuring a reliable user experience.



Figure 1: Front view of the Smarty Universal Samsung TV Remote, showing all buttons including power, number pad, volume, channel, navigation, and dedicated streaming service buttons.

2. SETUP AND INSTALLATION

The Smarty Universal Samsung TV Remote is designed for immediate use without any complex programming or setup procedures. Simply insert the required batteries, and it will be ready to operate your compatible Samsung TV.

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open the compartment.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. **Note: Batteries are not included.**
4. Close the battery cover by sliding it back into place until it clicks securely.



Figure 2: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for inserting two AAA batteries.

Once batteries are installed, the remote is ready for use. No pairing or code entry is required for compatible Samsung TVs.

3. OPERATING INSTRUCTIONS

This remote provides full functionality for your Samsung Smart TV. Below is a guide to its primary buttons and their functions:

Button	Function
Power	Turns the TV on or off.
Source	Selects the input source (HDMI, AV, etc.).
Number Pad (0-9)	Direct channel selection or numerical input.
VOL +/-	Adjusts the volume level.
CH ^/v	Changes the channel up or down.
Netflix	Direct access to the Netflix application.
Prime Video	Direct access to the Prime Video application.
Samsung TV Plus	Direct access to the Samsung TV Plus application.
Navigation Arrows	Navigates menus and selections.
Enter/OK	Confirms selections.
Return	Goes back to the previous screen or menu.
Exit	Exits the current menu or application.
Guide	Displays the TV program guide.
Settings	Accesses TV settings menu.
Info	Displays information about the current program or input.
CC/VD	Toggles Closed Captions/Video Description.
Media Playback Controls	Play, Pause, Stop, Fast Forward, Rewind.

For optimal performance, ensure a clear line of sight between the remote control and your Samsung TV's infrared receiver.

4. MAINTENANCE

Proper maintenance will extend the lifespan of your remote control.

- Cleaning:** Use a soft, dry cloth to clean the remote's surface. Do not use liquid cleaners or abrasive materials, as they may damage the remote.
- Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries.
- Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place.

5. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**

- Ensure batteries are inserted correctly with the proper polarity (+/-).
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote and the TV's infrared sensor.
- Ensure you are within the effective range of the TV's sensor.

- **Buttons not working:**

- Press the button firmly.
- Clean the remote's surface, especially around the buttons, to remove any dirt or debris that might be obstructing them.
- If only specific buttons are not working, the remote might be damaged and require replacement.

- **Intermittent operation:**

- This often indicates low battery power. Replace the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

If the problem persists after trying these steps, please contact customer support for further assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	SMTB-BN59-01315J
Product Dimensions	7 x 1.7 x 0.7 inches
Item Weight	3 ounces
Color	Black
Power Source	2 x AAA Batteries (not included)
Compatible Devices	All Samsung LCD LED HDTV 3D Smart TVs (including 7 Series and models compatible with BN59-01315A/B/D/E, BN59-01199F, AA59-00666, AA59-00741A)
Special Features	Universal, Ergonomic, No Programming Required, Netflix/Prime Video/Samsung TV Plus Shortcut Buttons

7. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the product packaging or contact the manufacturer, Smartby, directly through their official website or the retailer from whom the product was purchased. Keep your purchase receipt as proof of purchase.

This product is designed for easy replacement and operation, aiming to provide a seamless experience for Samsung TV users.