

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FARI](#) /
- › [FARI Electric Spin Scrubber ANS-8050-US User Manual](#)

FARI ANS-8050-US

FARI Electric Spin Scrubber ANS-8050-US User Manual

Model: ANS-8050-US

1. INTRODUCTION

The FARI Electric Spin Scrubber is a cordless cleaning device designed to simplify various household cleaning tasks. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new scrubber. Please read this manual thoroughly before first use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Read all instructions carefully before using the appliance.
- Keep the main unit away from water and liquids, especially during charging. Do not immerse the main unit in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only the charging cable provided by the manufacturer.
- Do not operate the scrubber if it has been damaged in any way. Contact customer support for assistance.
- Avoid applying excessive pressure during use, as this may reduce motor life or cause damage.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x FARI Electric Spin Scrubber Main Unit
- 1 x Adjustable Extension Rod
- 7 x Replaceable Brush Heads (including flat brush, corner brush, dome brush, scouring pads, sponge pad)
- 1 x USB-C Charging Cable




This image displays the FARI Electric Spin Scrubber, its adjustable extension handle, USB-C charging cable, and the seven included replaceable brush heads, illustrating the complete product package.

4. PRODUCT OVERVIEW

The FARI Electric Spin Scrubber features a powerful motor, a comfortable grip, and an adjustable extension rod for versatile cleaning. It includes an LED battery indicator to show the remaining power level.



2500mA Powerful Lithium Battery
**2 Hours Charging for
90 Mins Using**

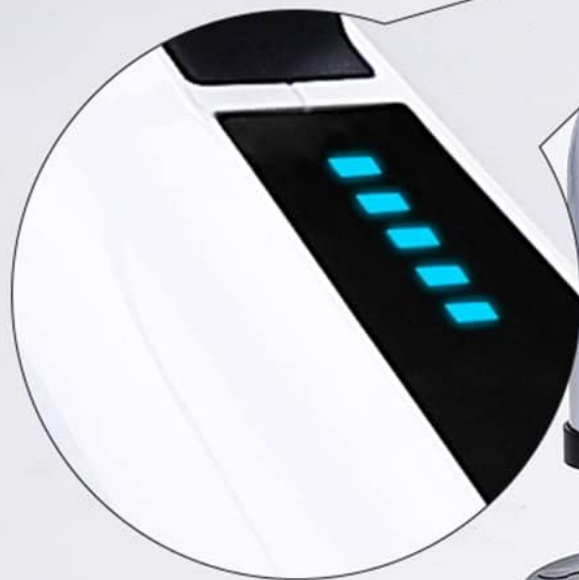

LED battery indicator



A detailed view of the FARI Electric Spin Scrubber's handle, featuring the LED battery indicator lights and the USB-C charging port, illustrating the device's power status and charging capability.

5. SETUP

5.1 Charging the Scrubber

1. Before first use, fully charge the scrubber.
2. Connect the USB-C charging cable to the charging port on the scrubber handle.
3. Plug the other end of the USB-C cable into a compatible USB power adapter (not included).
4. The LED indicator lights will illuminate during charging and show the battery level. A full charge typically takes approximately 3 hours.

5.2 Assembling the Scrubber

1. **Attaching a Brush Head:** Align the desired brush head with the rotating base of the main unit and press firmly until it clicks into place.

2. **Attaching the Extension Rod:** If an extended reach is required, align the extension rod with the main unit's handle and twist to secure. The rod can be adjusted in length by twisting and pulling/pushing the sections.



This image provides a visual representation of the FARI Electric Spin Scrubber's dimensions, showing its length in both handheld (110cm/43.3in) and fully extended (137cm/54in) modes, along with the height of the main unit (30cm/12in).

6. OPERATING INSTRUCTIONS

6.1 Selecting the Correct Brush Head

Choose the appropriate brush head for your cleaning task:

- **Flat Brush:** Ideal for large flat surfaces like floors, walls, and shower doors.
- **Corner Brush:** Designed for tight corners, grout lines, and edges.
- **Dome Brush:** Suitable for curved surfaces such as bathtubs and sinks.
- **Scouring Pads/Sponge Pad:** For specific tasks like polishing, grease removal, or gentle scrubbing on various surfaces.



An infographic illustrating the specific uses for each of the seven included brush heads, such as bathroom cleaning, kitchen cleaning, corner cleaning, polishing, grease cleaning, car cleaning, and window cleaning.

6.2 Powering On and Cleaning

1. Ensure the scrubber is fully charged and the desired brush head is securely attached.
2. Apply your preferred cleaning solution to the surface to be cleaned, or directly to the brush head.
3. Press the power button on the handle to start the scrubber.
4. Gently guide the rotating brush over the surface. Allow the scrubber to do the work; avoid pressing down too hard.
5. To turn off the scrubber, press the power button again.

An Efficient Cleaning Helper
*360 Rotating Cordless
Handheld Scrubber*



Lightweight



Cordless




USB Charging



**90 MINS
Working**



A woman is shown using the FARI Electric Spin Scrubber with its extension handle to clean a floor, demonstrating its ergonomic design for upright cleaning.

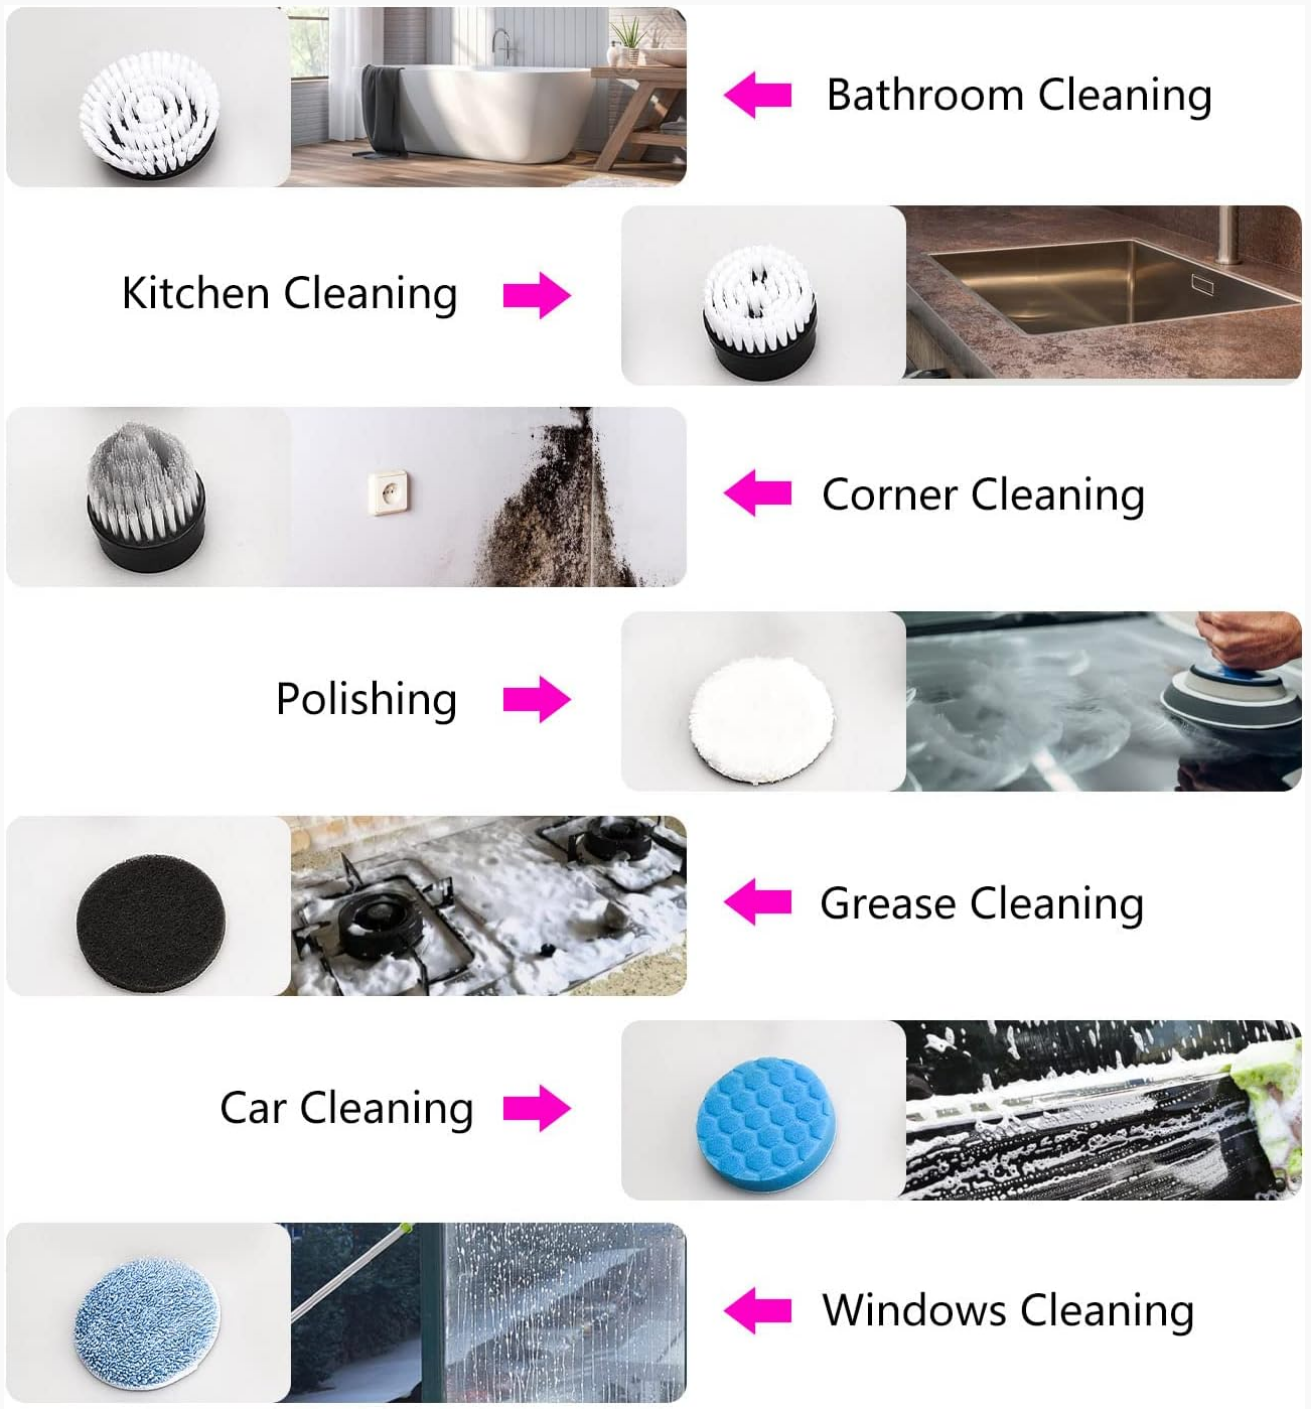

This collage demonstrates the versatility of the FARI Electric Spin Scrubber across different cleaning scenarios, including scrubbing a car, a bathtub, a faucet, and a window, showcasing various brush heads in action.

7. MAINTENANCE

7.1 Cleaning the Scrubber

1. After each use, remove the brush head and rinse it thoroughly under running water to remove any dirt or cleaning solution residue. Allow it to air dry completely before storing.
2. Wipe the main unit and extension rod with a damp cloth. Do not submerge the main unit in water.
3. Ensure the charging port cover is securely closed to prevent water ingress.

7.2 Storage

Store the FARI Electric Spin Scrubber and its accessories in a clean, dry place, away from direct sunlight and

extreme temperatures.

8. TROUBLESHOOTING

If you encounter any issues with your FARI Electric Spin Scrubber, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Scrubber does not turn on.	Battery is depleted.	Charge the scrubber fully (approx. 3 hours).
Reduced cleaning performance.	Brush head is dirty or worn. Battery is low.	Clean or replace the brush head. Recharge the battery.
Brush head stops spinning during use.	Excessive pressure applied. Obstruction in brush head.	Reduce pressure. Check for and remove any obstructions.
Charging indicator lights not working.	Charging cable not properly connected. Faulty cable or adapter.	Ensure cable is securely connected. Try a different USB power adapter.

If the problem persists after attempting these solutions, please contact FARI customer support.

9. SPECIFICATIONS

- **Brand:** FARI
- **Model:** ANS-8050-US
- **Battery:** 1 Lithium Ion (included), 2500mAh
- **Charging Time:** Approximately 3 hours
- **Operating Time:** Up to 90 minutes (fully charged)
- **Product Dimensions (Main Unit):** 14"L x 4"W x 4"H
- **Adjustable Handle Length:** 10-55 inches
- **Item Weight:** 2.6 pounds (1.18 Kilograms)
- **Material:** Plastic
- **Included Components:** Main Scrubber Unit, Extension Rod, 7 Attachment Brush Heads, USB-C Charging Cable
- **Surface Recommendation:** Countertop, Floor, Shower, Sink, Tile, Tub

10. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product packaging or visit the official FARI website. For technical support or any inquiries regarding your FARI Electric Spin Scrubber, please contact FARI customer service through their official channels.

