

Betterhood 22625515

Betterhood 7-Foot Large Teepee Tent Instruction Manual

Model: 22625515

INTRODUCTION

Thank you for choosing the Betterhood 7-Foot Large Teepee Tent. This manual provides essential information for the safe and proper assembly, operation, and maintenance of your teepee tent. Please read these instructions carefully before use and retain them for future reference.

This versatile teepee tent is designed for both indoor and outdoor use, offering a spacious and comfortable area for various activities. Its robust construction and quality materials ensure durability and safety.

PACKAGE CONTENTS

Before assembly, ensure all components are present and undamaged. If any parts are missing or damaged, please contact Betterhood customer support.

- Teepee Canvas Fabric
- Thickened Pine Poles (multiple sections)
- Connecting Joints
- Rope for securing poles
- Carry Bag
- Instruction Manual

SETUP INSTRUCTIONS

Follow these steps to assemble your Betterhood Teepee Tent:

1. **Unpack Components:** Carefully remove all items from the carry bag and lay them out on a clean, flat surface.
2. **Assemble Poles:** Connect the individual sections of the pine poles using the provided connecting joints. Ensure each section is securely fitted to form full-length poles.
3. **Insert Poles into Fabric:** Locate the sleeves along the edges of the teepee canvas fabric. Slide each assembled pole into a sleeve.
4. **Stand Up the Teepee:** Gather the tops of the poles together and stand the teepee upright. Spread the base of the poles evenly to create a stable, wide stance.
5. **Secure Poles:** Use the provided rope to tie the tops of the poles together, ensuring they are tightly bound to prevent shifting.
6. **Adjust and Position:** Adjust the spread of the poles at the base to achieve the desired tent shape and stability. Ensure the fabric is taut and evenly distributed.



Figure 1: Assembled Betterhood Teepee Tent in an indoor setting.

Extra-Large Teepee Tent for 2-3 Adults



Figure 2: The spacious interior of the teepee tent, suitable for families.

OPERATING INSTRUCTIONS

The Betterhood Teepee Tent is designed for versatile use. Here are some guidelines for optimal enjoyment:

- **Indoor Use:** Place the teepee on a soft surface like a rug or carpet. It can serve as a reading nook, play area, or a cozy retreat.
- **Outdoor Use:** The tent is suitable for use in backyards, parks, or beaches. Ensure it is placed on a level surface and secured against wind if necessary. Avoid prolonged exposure to harsh weather conditions.
- **Decoration:** The plain white canvas allows for creative decoration. You can paint, draw, or hang lights and garlands to personalize your teepee.
- **Safety:** Always supervise children when they are playing in or around the teepee. Ensure the tent is stable and free from hazards. Keep away from open flames or heat sources.



Figure 3: Teepee Tent set up for outdoor use on a beach.

Thoughtful Details



**100% cotton
canvas fabric**

Solid Pine Wood

NO Chemical Odors

**Masterful
Craftsmanship**

Figure 4: Teepee Tent in a backyard setting.



PERFECT FOR ANY AGES



Figure 5: Versatile applications of the teepee tent for different occasions.

MAINTENANCE

Proper care will extend the life of your teepee tent:

- **Cleaning Fabric:** The 100% cotton canvas fabric can be spot cleaned with a damp cloth and mild soap. For deeper cleaning, hand wash the fabric in cold water and air dry. Do not bleach or tumble dry.
- **Pole Care:** Wipe wooden poles with a dry cloth to remove dirt. Ensure poles are completely dry before storage to prevent mold or warping.
- **Storage:** When not in use, disassemble the tent and store all components in the provided carry bag in a cool, dry place away from direct sunlight and moisture.



Figure 6: Quality materials and craftsmanship of the teepee tent.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Teepee is unstable or wobbly.	Poles not spread evenly or not tied securely.	Ensure poles are spread wide and evenly at the base. Re-tie the top rope tightly. Check that all pole sections are fully connected.
Fabric sags or wrinkles.	Poles not fully extended or fabric not pulled taut.	Adjust the pole spread to create tension in the fabric. Ensure poles are fully inserted into their sleeves.
Difficulty inserting poles.	Obstruction in sleeve or poles not aligned.	Check sleeves for any fabric bunching. Ensure pole sections are correctly aligned before inserting.

SPECIFICATIONS

Feature	Detail
Brand Name	Betterhood
Model Number	22625515
Item Type Name	tent
Size	Large (7-foot)
Item Dimensions (D x W x H)	50"D x 60"W x 85"H (50 x 60 x 85 inches)
Item Weight	9.9 Pounds
Material Type	100% Cotton Canvas
Frame Material Type	Wood (Thickened Pine)
Color	White
Age Range Description	Kid (Manufacturer Minimum Age: 36 months, Maximum Age: 120 months)
Assembly Required	Yes

WARRANTY INFORMATION

Betterhood products are manufactured to high-quality standards. This product comes with a standard manufacturer's warranty covering defects in materials and workmanship. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact Betterhood customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your Betterhood Teepee Tent, please do not hesitate to contact our customer support team. We are committed to providing excellent service and ensuring your satisfaction.

Please visit the official Betterhood store on Amazon for contact information or to explore other products:

[Betterhood Store](#)