

[Manuals.plus](#) /

› [uleway](#) /

› Uleway G180-Blue 2G Big Button Mobile Phone User Manual

uleway UKG180 Blue

Uleway G180-Blue 2G Big Button Mobile Phone User Manual

Easy-to-Use Mobile Phone for Elderly

1. INTRODUCTION

Thank you for choosing the uleway G180-Blue 2G Big Button Mobile Phone. This phone is specifically designed for ease of use, featuring large buttons, a clear display, and loud audio, making it ideal for elderly users. This manual provides detailed instructions to help you set up, operate, and maintain your new phone.

Please read this manual carefully before using the device to ensure proper function and safety.

2. SAFETY INFORMATION

- Do not attempt to disassemble or modify the phone.
- Keep the phone away from water and moisture.
- Use only original or certified accessories (battery, charger).
- Avoid exposing the phone to extreme temperatures.
- Do not use the phone while driving.
- Consult a medical professional regarding the use of mobile phones near pacemakers or other medical devices.

3. PACKAGE CONTENTS

Please check the box for the following items:

- Uleway G180-Blue Mobile Phone

- Charging Cradle
- USB Cable
- Power Adapter
- Rechargeable Battery (800mAh)
- User Manual



Image: Contents of the uleway G180-Blue phone package. This image displays the phone, charging cradle, power adapter, USB cable, battery, and user manual, all neatly arranged.

4. SETUP

4.1. Battery Installation

1. Remove the back cover of the phone by gently prying it open from the notch at the bottom.

2. Insert the 800mAh battery into the battery compartment, ensuring the gold contacts align with the phone's contacts.
3. Replace the back cover, pressing firmly until it clicks into place.

4.2. SIM Card Installation

This phone supports dual SIM cards (2G). Ensure your SIM cards are compatible with 2G networks.

1. With the back cover and battery removed, locate the SIM card slots.
2. Carefully insert your SIM card(s) into the designated slot(s) with the gold contacts facing down and the cut corner aligned as shown on the phone.
3. Reinstall the battery and back cover.

4.3. Charging the Phone

Before first use, fully charge the phone for at least 4 hours.

1. Connect the USB cable to the power adapter.
2. Plug the power adapter into a wall outlet.
3. You can charge the phone in two ways:
 - **Using the Charging Cradle:** Place the phone into the charging cradle, ensuring it sits securely and the charging contacts align.
 - **Directly via USB:** Plug the USB cable directly into the charging port on the phone.
4. The battery icon on the screen will indicate charging status.



Image: Uleway G180-Blue mobile phone in its charging cradle. This image shows the phone securely placed in its charging dock, ready for charging.



Image: Charging Cradle. This illustration depicts the phone being charged in its cradle, highlighting the ease of use for charging.

4.4. Powering On/Off

- **To Power On:** Press and hold the red 'End Call' button (power button) until the screen lights up.
- **To Power Off:** Press and hold the red 'End Call' button until the power off options appear, then select 'Power Off'.

5. OPERATING INSTRUCTIONS

5.1. Basic Call Functions

- **Making a Call:** Dial the number using the large keypad buttons and press the green 'Call' button.
- **Answering a Call:** When the phone rings, press the green 'Call' button to answer.
- **Ending a Call:** Press the red 'End Call' button.
- **Adjusting Volume:** Use the side volume buttons during a call or in standby mode to adjust the earpiece or ringtone volume.

LARGE VOLUME



Image: Large Volume Speaker. This image highlights the phone's rear speaker, indicating its capacity for loud and clear audio output.

5.2. Sending and Receiving Messages

- Navigate to the 'Message' menu from the main screen.
- Select 'Write Message' to compose a new SMS.
- Enter the recipient's number or select from contacts.
- Type your message using the keypad. Press the '*' key to switch between input modes (e.g., ABC, abc, 123).
- Press 'Send' to dispatch the message.



Image: Phone Menu Icons. This image shows the phone's main menu interface, with clear icons for various functions like messages, call logs, and settings.

5.3. SOS Function

The SOS button is a critical safety feature, allowing quick contact with pre-set emergency numbers.

1. **Setting SOS Numbers:** Go to 'Settings' > 'SOS Settings'. You can set up to 5 emergency contact numbers.
2. **Using the SOS Function:** In an emergency, press and hold the red SOS button on the back of the phone for 3 seconds. The phone will automatically dial the pre-set numbers in sequence until one is answered. It will also send an emergency SMS to these contacts.



Image: SOS Function with 5 Set SOS Call Number. This image illustrates the use of the SOS button and the ability to pre-set up to five emergency contacts for quick dialing.

5.4. Contacts Management

- **Adding a Contact:** Go to 'Contacts' > 'Add New Contact'. Enter the name and phone number, then save.
- **Viewing Contacts:** Select 'Contacts' from the main menu to browse your saved numbers.
- **Speed Dial:** Assign frequently called numbers to speed dial keys (2-9) for quick access.

5.5. Other Functions

- **FM Radio:** Access the FM Radio from the 'Multimedia' menu. Ensure headphones are connected as they act as an antenna.
- **Alarm Clock:** Set alarms via the 'Alarm' menu.
- **Flashlight:** Activate the super bright torch for night activities or in dark environments. This can usually be done by a

dedicated side button or through the 'Tools' menu.



FLASHLIGHT

Image: Flashlight. This image demonstrates the phone's built-in flashlight, showing a bright beam of light for illumination.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's surface. Avoid liquid cleaners.
- **Battery Care:** To prolong battery life, avoid overcharging and fully discharging the battery frequently. If storing the phone for a long period, charge the battery to about 50%.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Phone does not power on	Low battery; Battery not installed correctly	Charge the phone; Reinstall battery, ensuring contacts align
Cannot make/receive calls	No SIM card; SIM card not inserted correctly; No network signal	Insert SIM card; Reinsert SIM card; Move to an area with better signal
Poor call quality	Weak network signal; Obstruction to speaker/microphone	Move to an area with better signal; Ensure speaker/microphone are clear
SOS function not working	SOS numbers not set; Incorrect numbers; No credit	Set SOS numbers in settings; Verify numbers; Ensure sufficient credit
Battery drains quickly	Frequent use; Old battery	Reduce usage; Consider replacing battery if very old

8. SPECIFICATIONS

- **Model:** G180-Blue
- **Network:** 2G GSM (Dual SIM support)
- **Display:** 1.77-inch LCD
- **Resolution:** 128x160 pixels
- **Battery:** 800mAh Rechargeable (C type)
- **Standby Time:** Up to 200 hours
- **Talk Time:** Up to 3-4 hours
- **Internal Memory:** 32 MB RAM, 16 GB storage capacity (likely refers to expandable storage via microSD, as 16GB internal is high for a feature phone)
- **Dimensions:** 11.2 x 5.3 x 1.3 cm
- **Weight:** 220 g
- **Features:** SOS Button, FM Radio, Alarm Clock, Flashlight, Bluetooth, Talking Numbers
- **Languages:** English, Spanish, French, Italian, German



Image: Battery 800 mAh. This image highlights the phone's 800mAh battery, emphasizing its long standby time.



Image: 1.77" Large Screen. This image provides a close-up view of the phone's display, emphasizing its size and clarity.

9. WARRANTY AND SUPPORT

Your uleway G180-Blue mobile phone comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support or customer service, please contact uleway customer support through the retailer where you purchased the product or visit the official uleway website for contact information.

Note: This phone operates on 2G networks. Please be aware that 2G network availability may vary by region and may be phased out in some areas in the future.

© 2024 uleway. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question