

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [VGR](#) /
- > [VGR V-121 Professional Corded Hair Clipper User Manual](#)

## VGR V-121

# VGR V-121 Professional Corded Hair Clipper User Manual

## INTRODUCTION

This manual provides essential instructions for the safe and effective use of your VGR V-121 Professional Corded Hair Clipper. Please read all instructions carefully before operating the device and retain this manual for future reference.



Image: The VGR V-121 Professional Corded Hair Clipper, showcasing its sleek design and corded operation.

## PRODUCT OVERVIEW AND INCLUDED COMPONENTS

---

The VGR V-121 hair clipper is designed for precise and efficient hair trimming. It features durable ceramic blades and an adjustable taper lever for various cutting lengths. The package includes the following items:

- 1 x Professional Hair Clipper
- 8 x Guide Combs (3mm, 6mm, 9mm, 12mm, 16mm, 20mm, Left Taper, Right Taper)
- 1 x Scissor
- 1 x Comb
- 1 x Protective Cover
- 1 x Cleaning Brush
- 1 x User Manual (this document)
- 1 x Lubricating Oil



Image: A complete view of the VGR V-121 hair clipper and all its accompanying accessories, including various guide combs, scissors, and maintenance tools.

## SAFETY INSTRUCTIONS

---

To ensure safe operation and prevent injury or damage, please adhere to the following safety guidelines:

- Always keep the trimmer away from water sources. Do not use near bathtubs, showers, basins, or other vessels containing water.
- Avoid using the clipper on infants.
- Keep the trimming tool away from heat sources to prevent damage to the device.
- Always unplug the trimmer when not in use, before cleaning, or before attaching/detaching parts.
- Always use the protective cover when the clipper is not in use to protect the blades.

- Follow recommended cleaning and maintenance procedures as outlined in this manual.
- Do not operate the clipper with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, contact customer service.

## SETUP

---

Before first use, ensure the clipper is clean and properly lubricated.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the clipper and accessories for any signs of damage.
3. **Clean Blades:** Use the cleaning brush to remove any dust or debris from the blades.
4. **Lubricate Blades:** Apply a few drops of the provided lubricating oil to the blades. Turn on the clipper for a few seconds to distribute the oil evenly. Wipe off any excess oil.
5. **Attach Guide Comb:** Select the desired guide comb for your preferred hair length. Align the comb with the clipper blades and push it firmly until it clicks into place.



Image: Front and back views of the VGR V-121 hair clipper, showing the power cord connection point and model information.

## OPERATING INSTRUCTIONS

---

Follow these steps for effective hair trimming:

1. **Prepare Hair:** Ensure hair is clean and dry. For best results, comb hair in the direction of growth.
2. **Select Length:** Attach the appropriate guide comb for the desired hair length. The clipper comes with 8 guide combs ranging from 3mm to 20mm, including left and right taper combs.
3. **Adjust Taper Lever:** Use the adjustable taper lever located on the side of the clipper to fine-tune cutting lengths between comb settings, or for close cuts down to 0.8mm without a comb. Move the lever up for a

shorter cut and down for a longer cut.

4. **Power On:** Plug the clipper into a suitable power outlet (AC220-240V, 50/60Hz). Press the power switch to turn on the device.
5. **Begin Trimming:** Hold the clipper with the blades pointing upwards and move it against the direction of hair growth. Use smooth, even strokes.
6. **Detailing:** For precise detailing or outlining, remove the guide comb and use the clipper blades directly, adjusting the taper lever as needed.
7. **Power Off:** Once trimming is complete, turn off the clipper by pressing the power switch and unplug it from the outlet.



Image: A close-up view highlighting the adjustable taper lever and the power switch on the side of the VGR V-121 hair clipper, demonstrating control features.

## MAINTENANCE AND CLEANING

---

Regular cleaning and maintenance will prolong the life of your clipper and ensure optimal performance.

1. **Unplug:** Always ensure the clipper is turned off and unplugged before cleaning.
2. **Remove Guide Comb:** Detach any attached guide comb.
3. **Clean Blades:** Use the provided cleaning brush to remove loose hairs from the blades. For a more thorough cleaning, you may carefully remove the blade set (refer to specific instructions if provided in a separate diagram or detailed manual for blade removal).
4. **Lubricate Blades:** After each use or cleaning, apply 1-2 drops of lubricating oil to the blades. Turn on the clipper for a few seconds to allow the oil to spread. This helps maintain the self-sharpening function and smooth operation.
5. **Wipe Body:** Wipe the body of the clipper with a soft, dry cloth. Do not use abrasive cleaners or immerse the clipper in water.

6. **Storage:** Store the clipper in a dry place, away from moisture and direct sunlight. Always use the protective cover over the blades when storing.



Image: A detailed close-up of the VGR V-121 hair clipper's ceramic blade, highlighting its precision cutting edge.

## TROUBLESHOOTING

If you encounter issues with your VGR V-121 hair clipper, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Not plugged in correctly; power outlet issue; damaged cord.	Ensure the clipper is securely plugged into a working power outlet. Check the power cord for any visible damage.
Clipper pulls hair or cuts unevenly.	Blades are dull or dirty; insufficient lubrication; incorrect technique.	Clean and lubricate the blades. Ensure hair is dry and combed. Use smooth, even strokes against hair growth.
Excessive noise or vibration.	Blades not properly aligned; internal component issue.	Ensure blades are correctly seated. If the issue persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	V-121
Power Source	Corded Electric (AC220-240V, 50/60Hz)
Blade Material	Ceramic

Feature	Detail
Recommended Uses	Beard Trimming, Head Hair, Body Hair
Target Audience	Men
Hair Type	All
Item Weight	490 grams
Product Dimensions	22 x 13 x 6 cm
Special Features	Corded operation, Adjustable Taper Lever, Self-sharpening blades
Included Components	Guide combs, Scissor, Comb, Protective cover, Cleaning brush, Lubricating oil

## WARRANTY AND SUPPORT

---

Your VGR V-121 Professional Corded Hair Clipper comes with a 12-month quality warranty.

If you encounter any issues with this product or have questions, please do not hesitate to contact our customer service team. We aim to respond within 24 hours and provide solutions to all your inquiries.

**Contact Email:** [warranty@vgrindia.co](mailto:warranty@vgrindia.co)