

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nostalgia](#) /

› [Nostalgia Retro Countertop Microwave Oven - Model 810061707073 User Manual](#)

Nostalgia 810061707073

Nostalgia Retro Countertop Microwave Oven

Model: 810061707073

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Nostalgia Retro Countertop Microwave Oven, Model 810061707073. Please read these instructions thoroughly before use and retain them for future reference.

The Nostalgia Retro Microwave Oven features 800 watts of cooking power and a 25.4-liter capacity, making it suitable for various cooking and reheating tasks. It includes 12 pre-programmed cooking settings, a digital clock, and convenient controls for optimal food preparation.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.
3. Do not heat liquids or other foods in sealed containers as they are liable to explode.
4. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
5. Do not attempt to tamper with or make any adjustments or repairs to the door, control panel, safety interlock switches, or any other part of the oven.
6. Ensure proper ventilation around the microwave. Do not block any ventilation openings.
7. Never operate the oven when empty.
8. Always use microwave-safe cookware. Metal containers or foil should not be used in the microwave mode.
9. Supervise children closely when the microwave is in use. This model includes a child lock feature for added safety.

SETUP

Unpacking

Carefully remove the microwave oven and all packaging materials. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Keep packaging materials out of reach of children.

Placement

Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food item likely to be cooked in it. Ensure there is adequate space for ventilation: at least 20 cm (8 inches) of space above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side.

Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of the microwave oven.

OPERATING INSTRUCTIONS

Control Panel Overview

The microwave features a digital LED display and various control buttons and a dial for setting cooking parameters.



Image: The microwave interior with a bowl of popcorn, illustrating the 0.9 cubic feet capacity and the digital display showing 12 cooking settings.

Setting the Digital Clock

1. Press the 'PRESET/CLOCK' button once.
2. Use the 'TIME/WEIGHT' dial to set the hour.
3. Press 'PRESET/CLOCK' again.
4. Use the 'TIME/WEIGHT' dial to set the minutes.
5. Press 'PRESET/CLOCK' to confirm the time.

Microwave Cooking

1. Place food in a microwave-safe container inside the oven.

2. Close the door securely.
3. Press the 'MICROWAVE POWER' button repeatedly to select the desired power level (e.g., 100% for full power, 50% for medium).
4. Use the 'TIME/WEIGHT' dial to set the cooking time.
5. Press 'START' to begin cooking.

Pre-programmed Cooking Settings

The microwave offers 12 pre-programmed settings for common food items. Refer to the table below for specific options.

Setting	Food Item	Instructions
P1	Popcorn	Select weight, press START.
P2	Potato	Select quantity, press START.
P3	Pizza	Select weight, press START.
P4	Vegetables	Select weight, press START.
...

To use a pre-programmed setting: Press the 'PROGRAM' button, rotate the 'TIME/WEIGHT' dial to select the desired program, then press 'START'.

Delay Timer

The delay timer allows you to set a cooking program to start at a later time. Consult the full manual for detailed instructions on setting the delay timer.

Child Lock Feature

To prevent unintended use, especially by children, activate the child lock. To activate, press and hold the 'PAUSE/CANCEL' button for 3 seconds. The lock indicator will appear on the display. To deactivate, repeat the process.



Image: A hand pressing the control panel to activate the child lock feature, ensuring safety.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals, as they may damage the finish.

Interior Cleaning

Clean the interior cavity and door seal regularly. For stubborn food splatters, place a bowl of water with lemon slices inside and microwave for 2-3 minutes. The steam will loosen food particles, making them easier to wipe away with a damp cloth.

Turntable Cleaning

The glass turntable and roller ring can be removed for cleaning. Wash them in warm, soapy water or in the dishwasher. Ensure they are completely dry before placing them back in the oven.



Image: A hand carefully placing a bowl of vegetables onto the rotating glass turntable inside the microwave.

TROUBLESHOOTING

If you experience issues with your microwave oven, please refer to the following common problems and solutions before contacting customer service.

- Microwave not starting:** Ensure the power cord is securely plugged in. Check if the door is fully closed. Verify that the child lock is not activated. Check your household fuse/circuit breaker.
- Food not heating:** Confirm that the power level and cooking time are set correctly. Ensure you are using microwave-safe cookware.
- Oven light not working:** The oven light is a user-replaceable part. Refer to the full manual for replacement instructions or contact customer service.
- Unusual noise during operation:** Ensure the turntable and roller ring are correctly positioned. Check for any foreign objects inside the oven cavity.

SPECIFICATIONS

Feature	Detail
Brand	Nostalgia
Model	810061707073
Color	Black

Feature	Detail
Capacity	25 Liters (0.9 Cu. Ft.)
Wattage	800 watts
Voltage	800 Volts (This seems to be an error in the source data, typically voltage is around 220-240V for European appliances, 800V is incorrect for a microwave. Assuming it refers to power output in watts, but listing as provided.)
Product Dimensions (D x W x H)	41.91 x 49.53 x 27.3 cm (16.5 x 19.5 x 10.75 inches)
Item Weight	13.9 kg (30.6 lbs)
Material	Cold steel, plastic, glass
Special Feature	Automatic cooking
Installation Type	Freestanding



Image: The microwave with its compact footprint and labeled dimensions for easy placement.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Nostalgia website. Do not attempt to repair the appliance yourself.