

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Polaroid](#) /

› [Polaroid 14.1-inch Pro Series Laptop User Manual](#)

Polaroid 3584179053137

Polaroid 14.1-inch Pro Series Laptop User Manual

Model: 3584179053137

INTRODUCTION

Thank you for choosing the Polaroid 14.1-inch Pro Series Laptop. This manual provides essential information to help you set up, operate, maintain, and troubleshoot your new device. Please read this manual thoroughly before using the laptop to ensure optimal performance and longevity.

The Polaroid Pro Series Laptop is designed for portability and efficiency, featuring a lightweight and slim design, a 14.1-inch HD display, an Intel Atom processor, 4GB RAM, and 128GB of storage, expandable up to 1TB. It offers comprehensive connectivity options for various peripherals and networks.

PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present and in good condition:

- Polaroid 14.1-inch Pro Series Laptop
- Power Adapter
- User Manual (this document)



Image: The retail packaging for the Polaroid 14.1-inch Pro Series Laptop, showing the laptop and its key features on the box.

SETUP

1. Initial Charging

Before first use, connect the power adapter to the laptop's charging port and a power outlet. Allow the laptop to charge for at least 3 hours, or until the battery indicator shows a full charge. This helps to condition the battery for optimal performance.

2. Powering On

Open the laptop lid. Press and hold the power button located on the keyboard deck until the screen illuminates. The laptop will boot into the Windows 10 Home operating system.



Image: The Polaroid 14.1-inch Pro Series Laptop with its screen on, showing the Windows 10 operating system interface.

3. Initial Windows Setup

Follow the on-screen prompts to complete the initial Windows 10 Home setup. This typically includes selecting your region, language, connecting to a Wi-Fi network, creating a user account, and accepting the license agreement.

OPERATING THE LAPTOP

Keyboard and Touchpad

The laptop features a standard QWERTY keyboard and a multi-touch touchpad. Use the touchpad for navigation, clicking, and gestures. Refer to Windows settings for customizing touchpad sensitivity and gestures.



Image: An angled view of the open laptop, highlighting the keyboard and touchpad area.

Connecting Peripherals

The laptop offers various ports for connecting external devices:

- **USB 3.0 Ports (x2):** For connecting USB devices such as external hard drives, mice, or keyboards.
- **Mini HDMI Port (x1):** For connecting to external displays or projectors. Use a Mini HDMI to HDMI cable (not included).
- **Mini SD Card Slot:** For expanding storage with a Mini SD card up to 64GB.
- **3.5mm Audio Jack:** For connecting headphones or external speakers.



DESIGN

**BOITIER ULTRA FIN
ULTRA LÉGER : 1,4KG**



CONNECTIQUES

**MINI HDMI / USB
PORT MICRO SD**



CONNECTIVITÉ

**BLUETOOTH
WIFI**

**MINI HDMI
x 1**

**WEBCAM
0.3 MP**

**USB
x 2**

**ÉCRAN HD
1366x768**



Image: A visual representation of the laptop's connectivity options, including Mini HDMI, USB ports, Bluetooth, and Wi-Fi indicators.

Wireless Connectivity

- **Wi-Fi:** The laptop supports 802.11 b/g/n Wi-Fi. To connect to a wireless network, click the Wi-Fi icon in the taskbar, select your network, and enter the password if required.
- **Bluetooth 4.0:** Enable Bluetooth in Windows settings to pair with compatible devices like wireless headphones, speakers, or mice.

MAINTENANCE

Cleaning the Laptop

To clean the screen, use a soft, lint-free cloth lightly dampened with water or a screen cleaner. For the keyboard and chassis, use a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

Battery Care

The laptop is equipped with an 8000mAh Lithium-ion battery. To maximize battery life:

- Avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place when not in use for extended periods.
- Adjust power settings in Windows to optimize battery usage.

Storage Expansion

The laptop includes an SSD SATA 2.5 slot, allowing you to expand the internal storage up to 1 TB. This upgrade should be performed by a qualified technician to avoid damaging the device and to ensure proper installation.

TROUBLESHOOTING

If you encounter issues with your laptop, refer to the following common troubleshooting steps:

- **No Power:** Ensure the power adapter is securely connected to both the laptop and a working power outlet. Try a different outlet.
- **Screen is Blank:** Check if the laptop is powered on. If connected to an external display, ensure the display is on and the correct input source is selected. Try pressing **Fn + F7** (or similar function key for display output).
- **Wi-Fi Connectivity Issues:** Verify that Wi-Fi is enabled in Windows settings. Restart your router and the laptop. Ensure you are within range of the Wi-Fi network.
- **Slow Performance:** Close unnecessary applications. Check for available Windows updates. Consider running a disk cleanup or defragmentation.
- **System Not Responding:** Press and hold the power button for 10-15 seconds to force a shutdown. Wait a few seconds, then power it back on.

For more complex issues, consult the official Polaroid support website or contact customer service.

SPECIFICATIONS



Polaroid

ÉCRAN
14.1"

RAM
4 Go

STOCKAGE
128 Go



NOTEBOOK 14.1"

Image: The Polaroid 14.1-inch Pro Series Laptop with an overlay showing its screen size, RAM, storage, and Intel Atom processor.

Feature	Detail
Brand	Polaroid
Model Number	3584179053137
Dimensions (L x W x H)	32.7 x 21.6 x 23 cm
Weight	1.3 kg
Color	Grey
Form Factor	Laptop

Feature	Detail
Screen Size	14.1 Inches
Screen Resolution	1366 x 768 pixels (HD)
Processor Manufacturer	Intel
Processor Type	Atom
Number of Processors	1
RAM Capacity	4 GB
RAM Type	DDR DRAM
Hard Drive Capacity	128 GB
Hard Drive Description	eMMC
Graphics Coprocessor	Intel HD 400 Graphics
Graphics Card Description	Integrated
Wireless Connectivity	802.11b/g/n Wi-Fi, Bluetooth 4.0
Operating System	Windows 10 Home
Battery	8000mAh Lithium-ion (up to 6 hours autonomy)
Ports	2x USB 3.0, 1x Mini HDMI, 1x Mini SD (up to 64GB), 3.5mm Audio Jack
Webcam	0.3 MP

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please refer to the warranty card included with your product or visit the official Polaroid support website. Keep your purchase receipt as proof of purchase.

[Visit Polaroid Official Website](#)