Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- MasterPRO /
- MasterPro Foodies XXL 6L 1800W Oil-Free Air Fryer with LED Touch Screen and Non-Stick Basket | 8-in-1 Functions User

MasterPRO BGMP-9167

MasterPro Foodies XXL 6L Air Fryer User Manual

Model: BGMP-9167

1. PRODUCT OVERVIEW

The MasterPro Foodies XXL 6L Air Fryer is a versatile kitchen appliance designed for healthier cooking. It utilizes 1800W of power and 360° hot air circulation to cook food with significantly less oil, delivering crispy results. Featuring an intuitive LED touch screen and a large 6-liter capacity, it simplifies meal preparation for the whole family.



Image 1.1: The MasterPro Foodies XXL 6L Air Fryer, showcasing its sleek design and digital interface, alongside a smartphone demonstrating its recipe capabilities.

Key Features:

- **Healthy Cooking:** Cook with up to 90% less fat thanks to 1800W power and 360° hot air circulation for crispy results.
- 8-in-1 Functions: Includes presets for fries, ribs, chicken, steak, shrimp, fish, baking, and defrosting.
- Intuitive Digital Interface: LED touch screen for precise control over temperature, time, and cooking mode.
- Easy Cleaning: Features a removable non-stick basket for effortless residue removal.
- Professional Quality: Designed with a commitment to continuous improvement and professional-grade performance.

2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the appliance to prevent injury or damage.

- Always place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for proper air circulation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Keep children and pets away from the appliance during operation.
- · Do not block any air vents.
- Unplug the air fryer from the outlet when not in use and before cleaning.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Use only accessories recommended by the manufacturer.
- Exercise extreme caution when removing the hot basket or disposing of hot grease.

3. SETUP

Follow these steps to set up your MasterPro Foodies Air Fryer for first use.

Unpacking:

- 1. Carefully remove all packaging materials from the air fryer and its accessories.
- 2. Check for any damage during transit. If damaged, do not use and contact customer support.
- 3. Retain the packaging for future storage or transport.

Initial Cleaning:

- 1. Before first use, wipe the exterior of the air fryer with a damp cloth.
- 2. Wash the removable non-stick basket and crisper plate with warm, soapy water. Rinse thoroughly and dry completely.
- 3. Ensure all parts are dry before plugging in the appliance.

Placement:

- 1. Place the air fryer on a flat, stable, and heat-resistant surface.
- 2. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance for proper ventilation.
- 3. Do not place the air fryer near flammable materials or heat sources.



Image 3.1: Side view of the MasterPro Foodies XXL 6L Air Fryer, illustrating its compact design suitable for various kitchen countertops.

4. OPERATING INSTRUCTIONS

Learn how to use your MasterPro Foodies Air Fryer for optimal cooking results.

Powering On:

- 1. Plug the power cord into a grounded electrical outlet. The display will light up briefly.
- 2. Press the power button to turn on the air fryer. The display will show default settings or be ready for selection.

Using the LED Touch Screen:

The digital LED screen allows for precise control of cooking parameters.



Image 4.1: A detailed view of the air fryer's LED touch screen, showing temperature and time settings, and various cooking icons.

- **Temperature Adjustment:** Use the temperature control buttons (usually + and icons) to set the desired cooking temperature.
- Time Adjustment: Use the time control buttons (usually + and icons) to set the cooking duration.
- **Pre-set Functions:** Select from 8 different pre-configured cooking modes by tapping the corresponding icon on the display. These include:
 - Fries
 - Ribs
 - Chicken
 - Steak
 - Shrimp
 - Fish
 - Baking



Image 4.2: The air fryer's control panel highlighting the 8 distinct cooking functions available for various food types.

Cooking Process:

- 1. Place food evenly in the non-stick basket. Do not overfill.
- 2. Slide the basket back into the air fryer until it clicks into place.
- 3. Select a pre-set function or manually set the temperature and time.
- 4. Press the start button to begin cooking.
- 5. During cooking, you may pull out the basket to shake or flip food. The air fryer will pause and resume when the basket is reinserted.
- 6. Once cooking is complete, the air fryer will beep. Carefully remove the basket and transfer food to a serving plate.



Image 4.3: The air fryer in action, showing a basket filled with golden, crispy fries, demonstrating its healthy cooking capabilities.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your air fryer.

Cleaning the Non-Stick Basket:

- 1. Always unplug the air fryer and allow it to cool completely before cleaning.
- 2. Remove the non-stick basket and crisper plate.
- 3. Wash them with warm, soapy water using a non-abrasive sponge. For stubborn residue, soak in warm water for a few minutes.
- 4. Rinse thoroughly and dry completely before reassembling or storing. The basket is dishwasher safe, but hand washing is recommended to prolong the non-stick coating.

Cleaning the Exterior:

- Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasives or scouring pads.
- Clean the heating element inside the air fryer with a cleaning brush to remove any food residue.

Storage:

- Ensure the air fryer is clean and dry before storing.
- Store the appliance in a cool, dry place.



Image 5.1: The air fryer with its non-stick basket detached, illustrating the ease of cleaning and maintenance.

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Contact customer support if the issue persists.
Food is not cooked evenly.	Basket overloaded; food not shaken/flipped.	Do not overload the basket. Shake or flip food halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, excess oil may drip into the drawer.
Pre-set program times seem inaccurate.	Food quantity/type varies; personal preference.	Adjust cooking time and temperature manually based on food type, quantity, and desired crispiness.

7. SPECIFICATIONS

Detailed technical specifications for the MasterPro Foodies XXL 6L Air Fryer.

Specification	Value
Brand	MasterPRO
Model Number	BGMP-9167
Color	Silver
Product Dimensions (L x W x H)	30 x 30 x 34 cm (approx. 11.8 x 11.8 x 13.4 inches)
Capacity	6 Liters
Power	1800 Watts
Voltage	240 Volts
Material	Stainless Steel
Automatic Shut-off Function	Yes
Special Features	Adjustable Speed Control, Easy Cleaning, Touch Screen
Item Weight	9 Kilograms (approx. 19.8 lbs)
Recommended Uses	Baking, Dehydration, Oil-free Frying, Roasting

8. WARRANTY AND SUPPORT

MasterPro stands behind the quality of its products.

Warranty Information:

This MasterPro Foodies XXL 6L Air Fryer comes with a**2-year warranty** on spare parts, ensuring peace of mind regarding product durability and support.

Customer Support:

For any questions, technical assistance, or warranty claims, please refer to the contact information provided on the product packaging or visit the official MasterPro website. Please have your model number (BGMP-9167) and purchase details ready when contacting support.

© 2024 MasterPRO. All rights reserved.

Related Documents - BGMP-9167



MasterPRO Air Fryer Instruction Manual

Comprehensive instruction manual for the MasterPRO Air Fryer (Model BGMP-9513-01), covering setup, operation, cleaning, safety, and warranty information.



INSTRUCTIO N MANUAL - GERNAUCHSANWEISUNG INSTRUKCJA O ESEUGI - LIETOSANAS INSTRUKCIJA NAUDOJIMO INSTRUKCIJA - KASUTUSJUHEND



INSTRUCTION MANUAL - MANUAL DE INSTRUCCION

MasterPRO Air Fryer Instruction Manual - BGMP-9456-PL

Comprehensive instruction manual for the MasterPRO Air Fryer, model BGMP-9456-PL, by Bergner Europe S.L. Learn about features, operation, safety, cleaning, and troubleshooting for your kitchen appliance.

Masterero



STRUCTION MANUAL - MANUAL DE INSTRUCCIO ESPRACHEAN WERRING - MANUAL DI REFRIZIO

MasterPRO Dual Air Fryer Instruction Manual

User manual for the MasterPRO Dual Air Fryer (Model BGMP-9178-WH) by Bergner Europe S.L. Provides detailed instructions on operation, safety, cleaning, troubleshooting, and warranty for this kitchen appliance.





INSTRUCTION MANUAL - MANUAL DE INSTRUCCIO GERRALCHEAN WEBLING - MANUALE DI INTRUZ MANUEL D'INSTRUCTIONS - MANUAL DE INSTRUC

MasterPRO Dual Air Fryer Instruction Manual

User manual for the MasterPRO Dual Air Fryer (Model BGMP-9178-BK), providing comprehensive instructions, safety guidelines, cooking tips, troubleshooting, and warranty information for optimal use.

Mastereko



INSTRUCTION MANUAL - MANUAL DE INSTRUCCIONES GERRACHIAN WIRELING - MANUAL DI INTRUZION MANUEL D'ESCRIPCTIONS - MANUAL DE INSTRUCCOS

MasterPRO Dual Air Fryer: Instruction Manual & User Guide

Explore the MasterPRO Dual Air Fryer (BGMP-9178-BK) with this comprehensive instruction manual. Learn about safe operation, cooking tips, troubleshooting, and maintenance for healthy, efficient meal preparation.



Section 1. The control of the contro

MasterPRO ROCKET DUO 900: Ръководство за употреба на фритюрник с горещ въздух

Научете как да използвате вашия фритюрник с горещ въздух MasterPRO ROCKET DUO 900 (BGMP-9178-BK). Това ръководство предоставя основни инструкции за безопасност, употреба, почистване и съвети за готвене за здравословно приготвяне на храна.