

## Solac S91300400

# SOLAC ROBOT PATISSIER 300W Hand Mixer User Manual

Model: S91300400

## INTRODUCTION

---

The Solac Robot Patisserie 300W Hand Mixer is designed to simplify your baking and cooking tasks. With its powerful 300W motor and versatile attachments, it quickly kneads, beats, and mixes ingredients to perfection. This manual provides essential information for safe and efficient operation, maintenance, and troubleshooting of your appliance.

## SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only.

## PRODUCT OVERVIEW

---



The Solac Robot Pâtissier 300W Hand Mixer, shown with both beater and kneading attachments. This image provides a complete view of the product and its primary accessories.



Dimensions of the Solac Robot Patissier 300W Hand Mixer, indicating its compact size for easy handling and storage. The image highlights the length, width, and height of the appliance.

### Key Features:

- **High Performance:** 300W of power for preparing cakes and doughs quickly. Kneads, whips, and mixes efficiently.

- **5 Speeds + Turbo:** Features 5 different speeds to adjust the mixing intensity as needed for various recipes.
- **Turbo Function:** Provides maximum power at the touch of a button, regardless of the selected speed.
- **Two Sets of Rods:** Includes two sets of 19 cm long rods: beaters and kneading hooks.
- **Ergonomic Design:** Hand mixer with an ergonomic handle that fits comfortably in the user's hand, making it easy and comfortable to use.

## SETUP AND ASSEMBLY

---

1. **Unpacking:** Carefully remove the mixer and all accessories from the packaging. Retain packaging for future storage or transport.
2. **Cleaning:** Before first use, wash the beaters and kneading hooks in warm, soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth.
3. **Attaching Accessories:**



A user demonstrating the easy assembly of the attachments. Simply insert the desired beaters or kneading hooks into the designated slots until they click into place.

- Select the appropriate attachments for your task:

- **Beater Hooks:** For whipping cream, egg whites, and mixing light batters.



2  
beaters  
hooks



The Solac hand mixer equipped with beater hooks, ideal for achieving light and airy textures like whipped cream.

- **Kneading Hooks:** For heavier doughs like bread or pizza dough.



2  
kneading  
hooks



The Solac hand mixer with kneading hooks, perfect for mixing and kneading heavier doughs for baking.

- Insert the chosen attachments into the openings on the underside of the mixer until they click securely into place. Ensure both attachments are fully inserted.

## OPERATING INSTRUCTIONS

---

1. **Connecting to Power:** Plug the mixer into a standard electrical outlet.
2. **Selecting Speed:**



**6**  
speeds  
+ **TURBO**



A detailed view of the speed selector dial and the red Turbo button on the Solac hand mixer, allowing precise control over mixing intensity.

- Turn the speed selector dial to your desired speed setting (1-5). Start with a lower speed and gradually increase as needed to prevent splashing.
- For an extra burst of power, press and hold the **TURBO** button. The mixer will operate at maximum speed as long as the button is held down.

### 3. Mixing:



A user demonstrating the Solac hand mixer in action, efficiently beating eggs in a bowl. The image highlights the 300W power capability.

- Place the attachments into the ingredients before turning on the mixer.
- Move the mixer slowly through the ingredients to ensure even mixing.
- Do not operate the mixer continuously for more than 5 minutes. Allow it to cool down for a few minutes before resuming.

4. **Detaching Accessories:** After use, unplug the mixer. Press the release button (usually located near the attachment slots) to eject the beaters or kneading hooks.

The attachments are very easy to mount and dismount by pressing a single button, ensuring maximum speed and comfort.

## MAINTENANCE AND CLEANING

---

Proper maintenance ensures the longevity and optimal performance of your Solac hand mixer.

1. **Always unplug the mixer** from the power outlet before cleaning.
2. **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not immerse the motor unit in water or any other liquid.



### 3. Attachments (Beaters & Kneading Hooks):

- Wash immediately after use to prevent food from drying on them.
- Wash in warm, soapy water. Rinse thoroughly and dry completely before storing.
- **Important:** The accessories are not suitable for dishwashers. Hand wash only.

4. **Storage:** Store the mixer and its attachments in a clean, dry place.

## TROUBLESHOOTING

| Problem                              | Possible Cause   | Solution  |
|--------------------------------------|--|---|
| Mixer does not turn on.              | Not plugged in; power outlet not working; damaged cord/plug.                       | Ensure mixer is securely plugged into a working outlet. Check circuit breaker. Do not use if cord or plug is damaged; contact customer support. |
| Attachments do not stay in place.    | Attachments not fully inserted; release button stuck.                              | Push attachments firmly until they click. Ensure release button is not depressed during insertion.  |
| Motor sounds strained or slows down. | Overloaded with ingredients; too thick mixture; continuous operation for too long. | Reduce quantity of ingredients. Add more liquid if mixture is too thick. Allow mixer to cool down if used continuously for more than 5 minutes. |
| Attachments are difficult to remove. | Release button not fully pressed.  | Ensure the release button is fully depressed while pulling out the attachments.   |

## SPECIFICATIONS

- **Model:** S91300400
- **Brand:** Solac
- **Power:** 300 Watts
- **Voltage:** 240V
- **Number of Speeds:** 5 + Turbo function
- **Material:** Plastic (body), Stainless Steel (attachments)
- **Color:** White
- **Weight:** 1.1 Kilograms
- **Package Dimensions:** 20.5 x 14.7 x 10.5 cm
- **Included Accessories:** 2 x Beater Hooks, 2 x Kneading Hooks (19 cm length each)

## WARRANTY AND SUPPORT





For warranty information and customer support, please refer to the warranty card included with your product or visit the official Solac website. Keep your purchase receipt as proof of purchase for any warranty claims.

**Manufacturer:** Taurus Group

**Country of Origin:** Spain

For further assistance, you may contact Solac customer service through their official channels. Information regarding spare parts availability is currently unavailable.

Related Documents - S91300400

|  |   |
|--|---|
| <div><div></div><div>CP7304</div><div><div>CONSEJOS Y ADVERTENCIAS DE SEGURIDAD<br/>SAFETY ADVICE AND WARNINGS<br/>CONSILII ET AVERTISSEMENTS DE SECURITE<br/>MITSICLASE UND SICHERHEITSWARNUNGSE<br/>CONSILIIOS E AVERTENCIAS DE SEGURANÇA<br/>VEILIGHEIDSAANWIJZINGEN EN WAARSCHUWINGEN<br/>BEZPEČNOSTNÉ UPOVARNENIA A DOPORUČENIA<br/>PORADY I OSTRZEŻENIA DOTYCZĄCE BEZPIECZEŃSTWA<br/>BIZTONSÁG TANÁCSOK ÉS FIGYELMEZTETÉSEK<br/>ČUHAŤ A PŘEDPISY K POUŽITÍ A BEZPEČNOST<br/>RECOMANDĂRI ȘI AVERTIZĂRI PRIVIND SIGURANȚA<br/>تعليمات وتحذيرات الأمان</div></div></div> <td><p><a href="#">Manual de Instrucciones Solac CP7304: Guía de Uso y Seguridad</a></p><p>Guía completa para el uso seguro y eficiente del cortapelos Solac CP7304. Incluye advertencias de seguridad, instrucciones de funcionamiento, especificaciones técnicas y consejos de ecología.</p></td> | <p><a href="#">Manual de Instrucciones Solac CP7304: Guía de Uso y Seguridad</a></p> <p>Guía completa para el uso seguro y eficiente del cortapelos Solac CP7304. Incluye advertencias de seguridad, instrucciones de funcionamiento, especificaciones técnicas y consejos de ecología.</p> |
| <div><div></div><div></div><div><div><div><div>1. Instrucciones de uso</div><div>2. Advertencias de seguridad</div><div>3. Características técnicas</div><div>4. Mantenimiento</div><div>5. Solución de problemas</div><div>6. Información de contacto</div><div>7. Garantía</div><div>8. Índice</div></div><div><div>9. Descripción del producto</div><div>10. Características principales</div><div>11. Instrucciones de uso</div><div>12. Advertencias de seguridad</div><div>13. Mantenimiento</div><div>14. Solución de problemas</div><div>15. Información de contacto</div><div>16. Garantía</div><div>17. Índice</div></div></div></div></div> <div><div></div></div>                                |   |

TASTE SLIM PRO INOX (CE4522)



- 25. Lire attentivement les instructions de sécurité.
- 26. Lire attentivement les instructions de montage.
- 27. Lire attentivement les instructions de nettoyage.
- 28. Lire attentivement les instructions de maintenance.
- 29. Lire attentivement les instructions de conservation.
- 30. Lire attentivement les instructions de transport.
- 31. Lire attentivement les instructions de recyclage.
- 32. Lire attentivement les instructions de démontage.
- 33. Lire attentivement les instructions de destruction.
- 34. Lire attentivement les instructions de recyclage.
- 35. Lire attentivement les instructions de recyclage.
- 36. Lire attentivement les instructions de recyclage.
- 37. Lire attentivement les instructions de recyclage.
- 38. Lire attentivement les instructions de recyclage.
- 39. Lire attentivement les instructions de recyclage.
- 40. Lire attentivement les instructions de recyclage.

Solac

## [Solac Taste Slim Pro Inox CE4522 Safety Instructions](#)

Comprehensive safety instructions and warnings for the Solac Taste Slim Pro Inox espresso coffee maker (Model CE4522), covering safe usage, maintenance, and environmental considerations.