

Manuals.plus /

› DuraPro /

› DuraPro 55-Inch Outdoor 4K UHD LED TV Instruction Manual

DuraPro DP-55

DuraPro 55-Inch Outdoor 4K UHD LED TV Instruction Manual

Model: DP-55 | Brand: DuraPro

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your DuraPro 55-Inch Outdoor 4K UHD LED TV. Please read these instructions thoroughly before installation and use, and retain them for future reference.

The DuraPro 55-Inch Outdoor 4K UHD LED TV is designed for outdoor entertainment in partially shaded areas. It features a 4K display with HDR, 500-nit brightness, and a rugged, weatherproof IP54-rated exterior with tempered glass for protection against environmental elements.

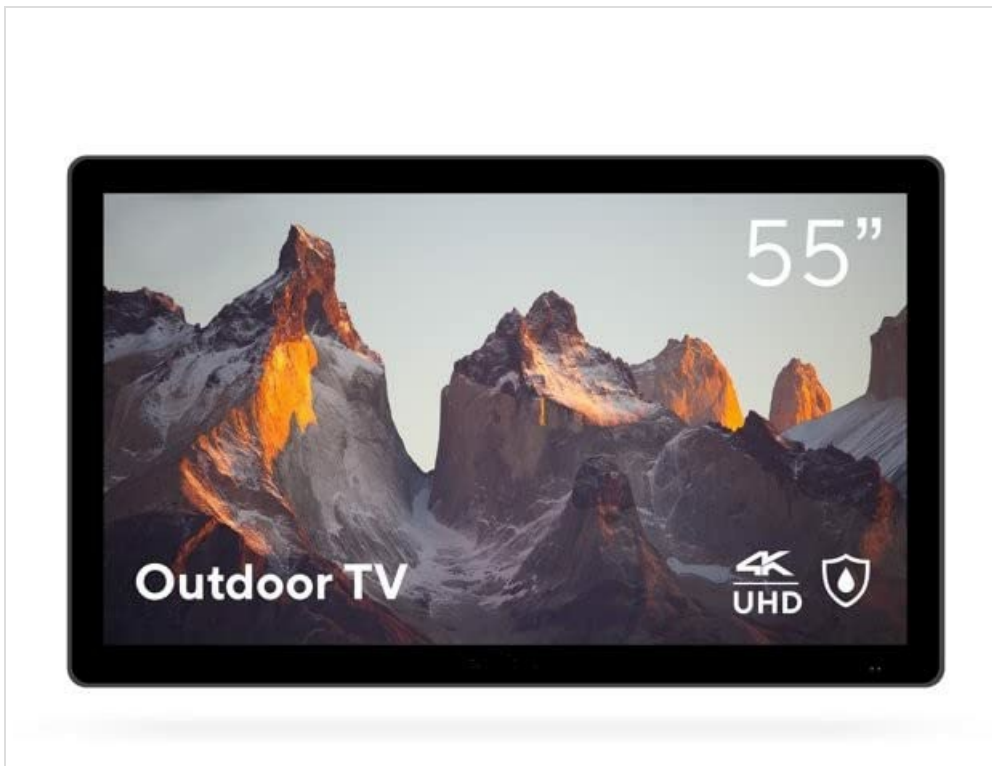 


Image: DuraPro 55-Inch Outdoor 4K UHD LED TV.

Image: DuraPro TV mounted on an outdoor wall, showcasing the WebOS smart platform.

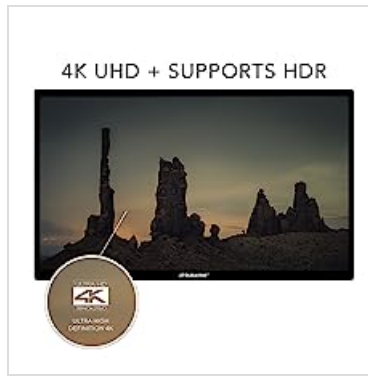 


Image: DuraPro TV displaying 4K UHD and HDR capabilities.



Image: DuraPro TV demonstrating IP54 weatherproof rating with water resistance.

Key Features

- **Optimized for Outdoors:** Designed for use in outdoor spaces like covered patios and gazebos.
- **4K UHD HDR Screen:** Delivers crisp 4K resolution with High Dynamic Range and 500-nit brightness for enhanced clarity.
- **All-Weather Protection:** IP54-rated exterior and tempered glass screen provide protection against rain, dust, and UV rays.
- **Integrated Components:** Includes built-in speakers, an IP55 waterproof remote, and a compatible TV wall mount.
- **User-Friendly Connectivity:** Equipped with 3 HDMI 2.0 inputs (HDCP 2.2 compatible) and 1 USB input for various media sources.

WHAT'S IN THE BOX

Verify that all components are present before proceeding with installation.

- DuraPro 55-Inch Outdoor 4K UHD LED TV
- Power Cable
- IP55 Waterproof Remote Control
- Compatible Wall Mount Bracket

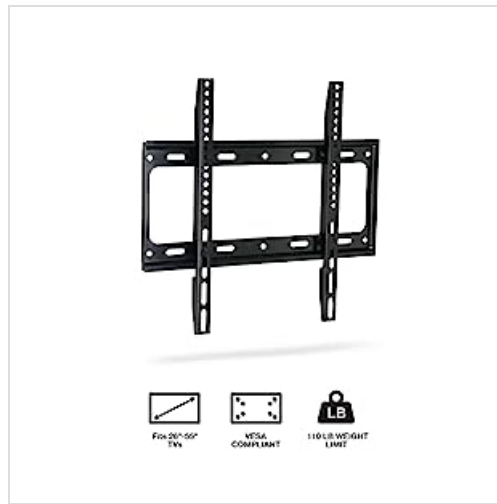 


Image: Included wall mount bracket for DuraPro outdoor TV.

SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons.

- Do not expose the TV to direct sunlight for extended periods. This TV is designed for partially shaded outdoor areas.
- Ensure proper ventilation around the TV. Do not block ventilation openings.
- Use only the power cable supplied with the TV. Connect to a grounded outdoor-rated power outlet.
- Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- Keep the remote control dry. While it is IP55 waterproof, prolonged submersion or exposure to harsh chemicals should be avoided.
- Securely mount the TV using the provided wall mount and follow all installation instructions carefully to prevent injury or damage.

SETUP

1. Wall Mount Installation

The DuraPro 55-Inch Outdoor TV includes a compatible wall mount. Follow the instructions provided with the wall mount for secure installation. Ensure the mounting surface is structurally sound and capable of supporting the TV's weight (approximately 72 pounds).



Image: Rear view of DuraPro TV showing VESA mounting points and rugged exterior.

2. Connecting Devices

Locate the input ports on the back or side of the TV. Connect your external devices (e.g., streaming box, game console) using HDMI cables. The TV supports HDMI 2.0 and HDCP 2.2 for 4K sources. A USB port is also available for media playback.

- **HDMI:** Connect up to three HDMI devices.
- **USB:** Insert a USB drive for viewing photos or playing videos.

3. Power Connection

Connect the supplied power cable to the TV's power input and then to a suitable outdoor-rated, grounded electrical outlet.

4. Initial Power-On and Network Setup

Press the power button on the remote control or on the TV. Follow the on-screen prompts to complete the initial setup, including language selection, time zone, and network connection for smart TV features (WebOS).



Image: DuraPro Outdoor TV with WebOS interface on a patio.

OPERATING INSTRUCTIONS

Using the Remote Control

The included IP55 waterproof remote control allows full functionality of your TV. Familiarize yourself with the button layout for power, volume, channel, input selection, and smart TV navigation.



Image: DuraPro IP55 waterproof remote control with water droplets.

Basic TV Functions

- **Power On/Off:** Press the **Power** button.
- **Volume Control:** Use the **Volume Up/Down** buttons.
- **Input Selection:** Press the **Input** button to cycle through connected sources (HDMI 1, HDMI 2, HDMI 3, USB).

Smart TV Features (WebOS)

Your DuraPro TV is powered by WebOS, providing access to various streaming applications and smart features. Connect the TV to your home Wi-Fi network during initial setup to enable these functions.

- **Home Dashboard:** Access your favorite apps, inputs, and settings from the home screen.
- **App Store:** Download and install additional streaming applications.
- **Network Settings:** Manage your Wi-Fi connection and other network preferences.



Image: DuraPro TV displaying the WebOS smart TV interface.

MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your outdoor TV.

- **Cleaning the Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, dampen the cloth with water or a mild, non-abrasive screen cleaner. Do not spray liquid directly onto the screen.
- **Cleaning the Exterior:** Wipe the TV's exterior casing with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Weather Protection:** While the TV is IP54-rated, it is designed for partially shaded areas. For prolonged periods of

extreme weather (heavy rain, snow, direct intense sunlight), consider using a protective cover (not included) to extend the product's life.

- **Cable Management:** Ensure all cables are securely connected and routed to prevent water ingress or damage.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions before contacting customer support.

Problem	Possible Solution
No power / TV does not turn on.	<ul style="list-style-type: none">• Check if the power cable is securely connected to both the TV and the power outlet.• Ensure the power outlet is functional by testing with another device.• Try pressing the power button on the TV itself, not just the remote.
No picture, but sound is present.	<ul style="list-style-type: none">• Verify the correct input source is selected (e.g., HDMI 1, HDMI 2).• Check the HDMI cable connection between the TV and the external device. Try a different HDMI cable if available.• Ensure the external device is powered on and functioning correctly.
No sound.	<ul style="list-style-type: none">• Increase the volume using the remote control.• Check if the TV is muted.• If using external audio devices, ensure they are properly connected and powered on.
Remote control not working.	<ul style="list-style-type: none">• Replace the batteries in the remote control.• Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi.	<ul style="list-style-type: none">• Ensure your Wi-Fi router is on and functioning.• Check the Wi-Fi password.• Move the TV closer to the router or consider a Wi-Fi extender if the signal is weak.• Restart both the TV and your Wi-Fi router.

SPECIFICATIONS

Feature	Detail
Brand	DuraPro
Model Number	DP-55
Screen Size	55 Inches
Display Technology	LED
Resolution	4K UHD
Refresh Rate	120 Hz
Special Feature	Flat, HDR, Weatherproof (IP54), Tempered Glass
Connectivity Technology	3x HDMI 2.0 (HDCP 2.2), 1x USB
Speaker Type	Built-In
Aspect Ratio	16:9
Product Dimensions (D x W x H)	7 x 45.5 x 28.5 inches
Item Weight	72 pounds
Color	Black
Included Components	Power Cable, Remote, Wall Mount

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official DuraPro website. You may also contact DuraPro customer service directly for assistance with product registration, troubleshooting, or service requests.

Please note: Specific warranty terms and conditions may vary by region and purchase date. Keep your proof of purchase for warranty claims.