

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yaheetech](#) /

› [Yaheetech 300 cm Manual Retractable Awning User Manual](#)

Yaheetech YA-00114005

Yaheetech 300 cm Manual Retractable Awning User Manual

Model: YA-00114005

INTRODUCTION

Thank you for choosing the Yaheetech 300 cm Manual Retractable Awning. This awning is designed to provide adjustable shade and privacy for your balcony, terrace, or garden. Constructed with durable metal and polyurethane-coated polyester fabric, it offers resistance to wear and sun protection. Please read this manual carefully before assembly and use to ensure safe and proper operation.



Image: Yaheetech 300 cm Manual Retractable Awning installed on a house porch.

SAFETY INFORMATION

- Keep out of reach of children during use and assembly.
- Do not use near heat sources or water.
- Ensure the installation surface is flat and stable.
- Close the awning during extreme weather conditions (strong winds, heavy rain, snow) to prevent damage and prolong its lifespan.
- Always ensure all connections are securely fastened before use.

Image: Awning fabric demonstrating water resistance and sun protection, with a warning for extreme weather.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer service.

- Awning Fabric (Polyester with PU coating)
- Upper Support Bar
- Lower Support Bar
- Vertical Support Poles (Adjustable height)
- Horizontal Support Arms
- Crank Handle
- Mounting Hardware (Screws, pins, end caps, bases)



Cadre en acier résistant



Tissu imperméable



Trous de réglage



Patin antidérapant



Manivelle



Une base solide

Image: Detailed view of key components including the steel frame, waterproof fabric, and adjustable parts.

ASSEMBLY INSTRUCTIONS

Assembly typically requires two people. Follow these steps carefully:

Step 1: Prepare the Fabric and Bars

1. Unroll the awning fabric completely on a clean, flat surface.
2. Insert the upper support bar into the top sleeve of the fabric. Secure it with the provided screws.
3. Insert the lower support bar into the bottom sleeve of the fabric. Secure it with the provided screws.

Step 2: Assemble the Vertical Support Poles

1. Connect the sections of the vertical support poles. Ensure the spring pins click into place.
2. Attach the top cap and bottom anti-slip base to each pole.
3. Adjust the height of the poles by extending the sections and securing them with the pins. The installation height should be adjusted according to your specific site.

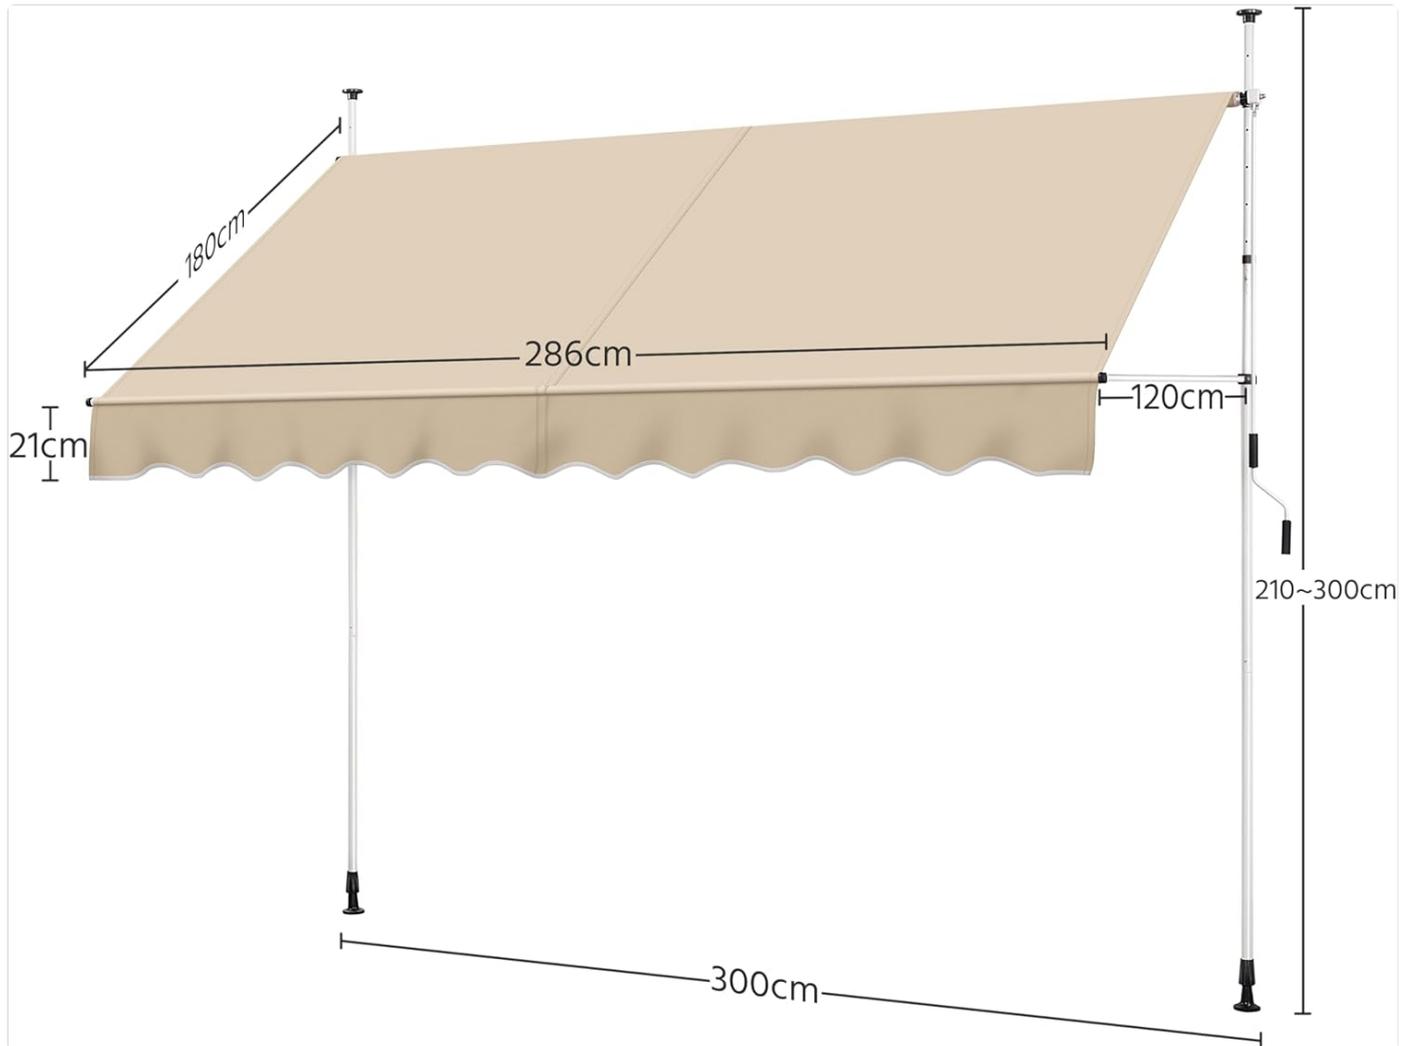


Image: Awning dimensions and adjustable pole height (210-300 cm).

Step 3: Attach Horizontal Support Arms and Crank Mechanism

1. Assemble the crank handle by connecting its sections.
2. Attach the crank mechanism to one end of the lower support bar.
3. Connect the horizontal support arms to the vertical poles using the provided clamps.
4. Attach the other end of the horizontal support arms to the upper support bar.

STORE BANNE 300 X 180 CM

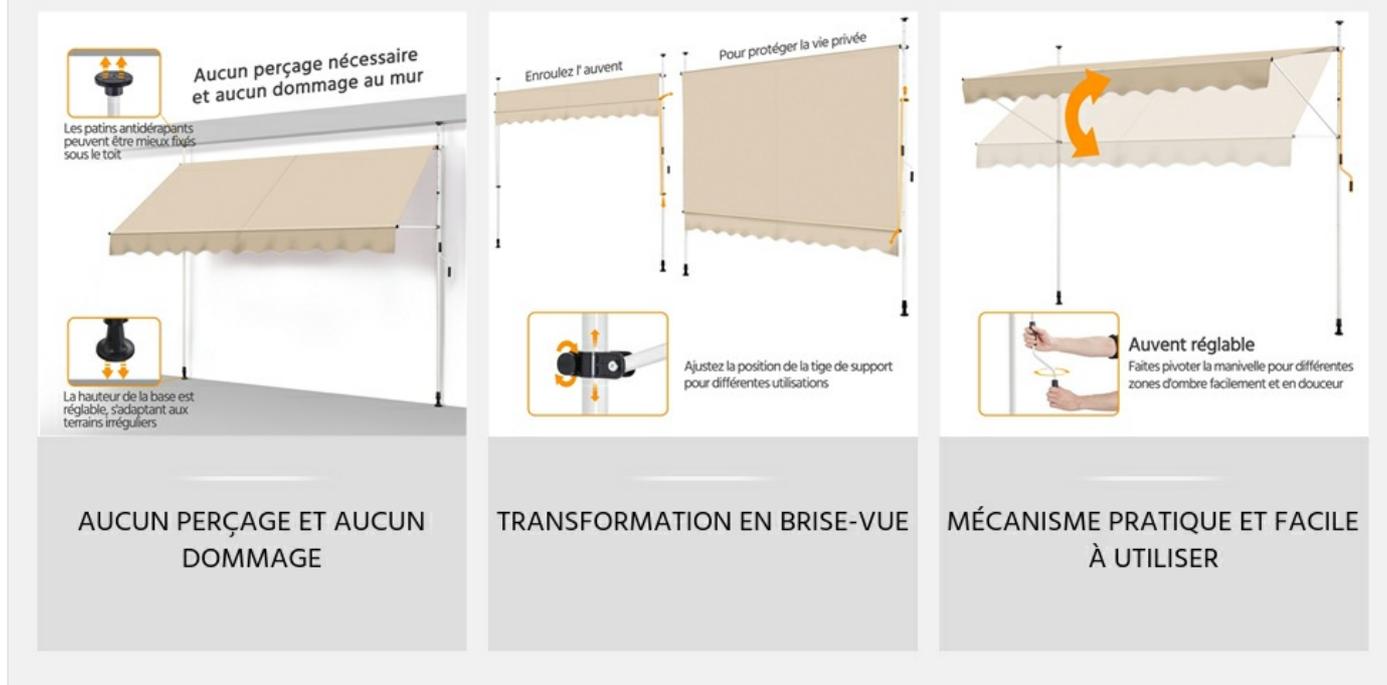


Image: Visual guide for installation, privacy screen transformation, and crank mechanism.

Step 4: Final Installation and Adjustment

1. Position the assembled awning in the desired location. Ensure the vertical poles are firmly pressed against the ceiling and floor.
2. Turn the bottom knob on each vertical pole to slightly adjust the pole height and create tension, ensuring stability. The adjustable height range is 0-3 cm for fine-tuning.
3. Ensure the awning is level and securely installed.

For a visual guide, please refer to the official product video below:

Your browser does not support the video tag.

Video: Step-by-step assembly and installation guide for the Yaheetech Manual Retractable Awning. This video demonstrates how to connect the fabric to the bars, assemble the support poles, attach the crank mechanism, and secure the awning in place. Note: The awning shown in the video is blue and white striped, but the product is beige.

OPERATING INSTRUCTIONS

Extending and Retracting the Awning

- To extend the awning, insert the crank handle into the designated slot on the side and turn it clockwise.
- To retract the awning, turn the crank handle counter-clockwise.
- Adjust the extension as needed to achieve the desired shade.

Adjusting Height and Inclination

- The height of the awning can be adjusted by repositioning the horizontal support arms on the vertical poles. Loosen the clamps, slide the arms to the desired height, and re-tighten the clamps.
- The inclination of the awning is adjusted by the position of the horizontal support arms. Lowering the arms will increase the inclination, providing more vertical shade or privacy.


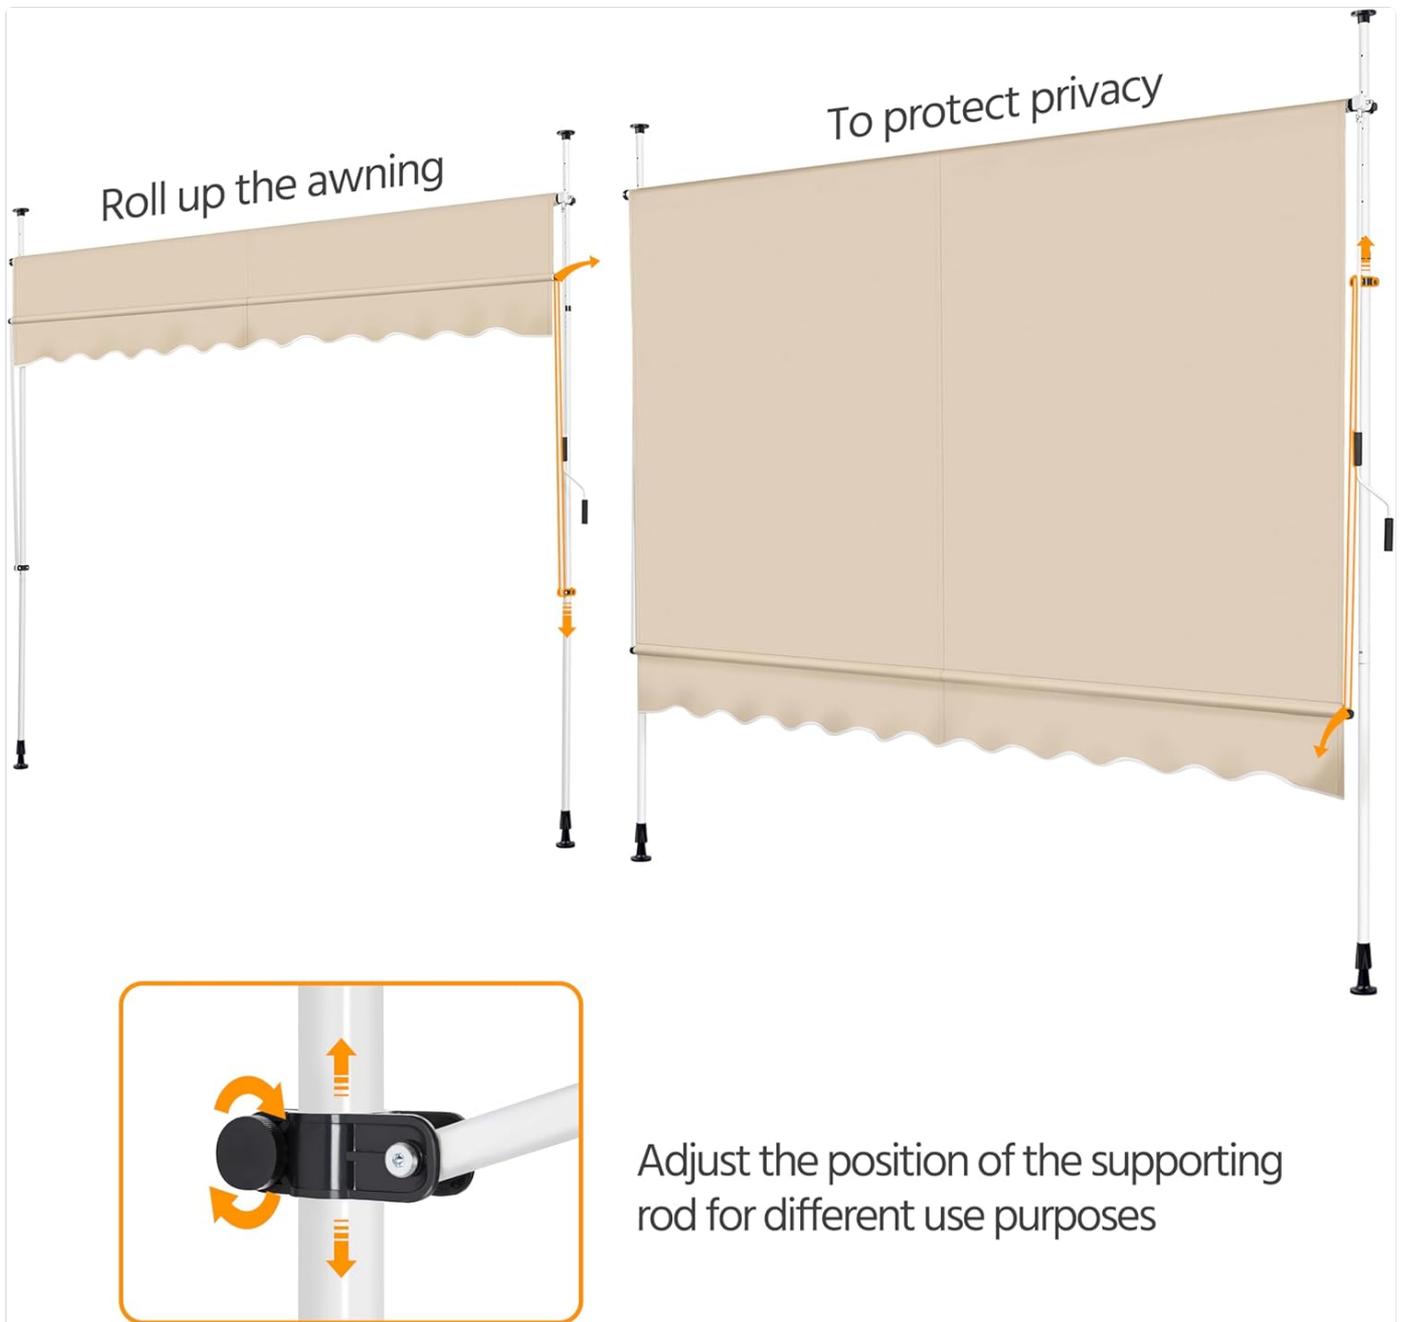


Image: Awning in two configurations: fully extended for shade and lowered to provide privacy.

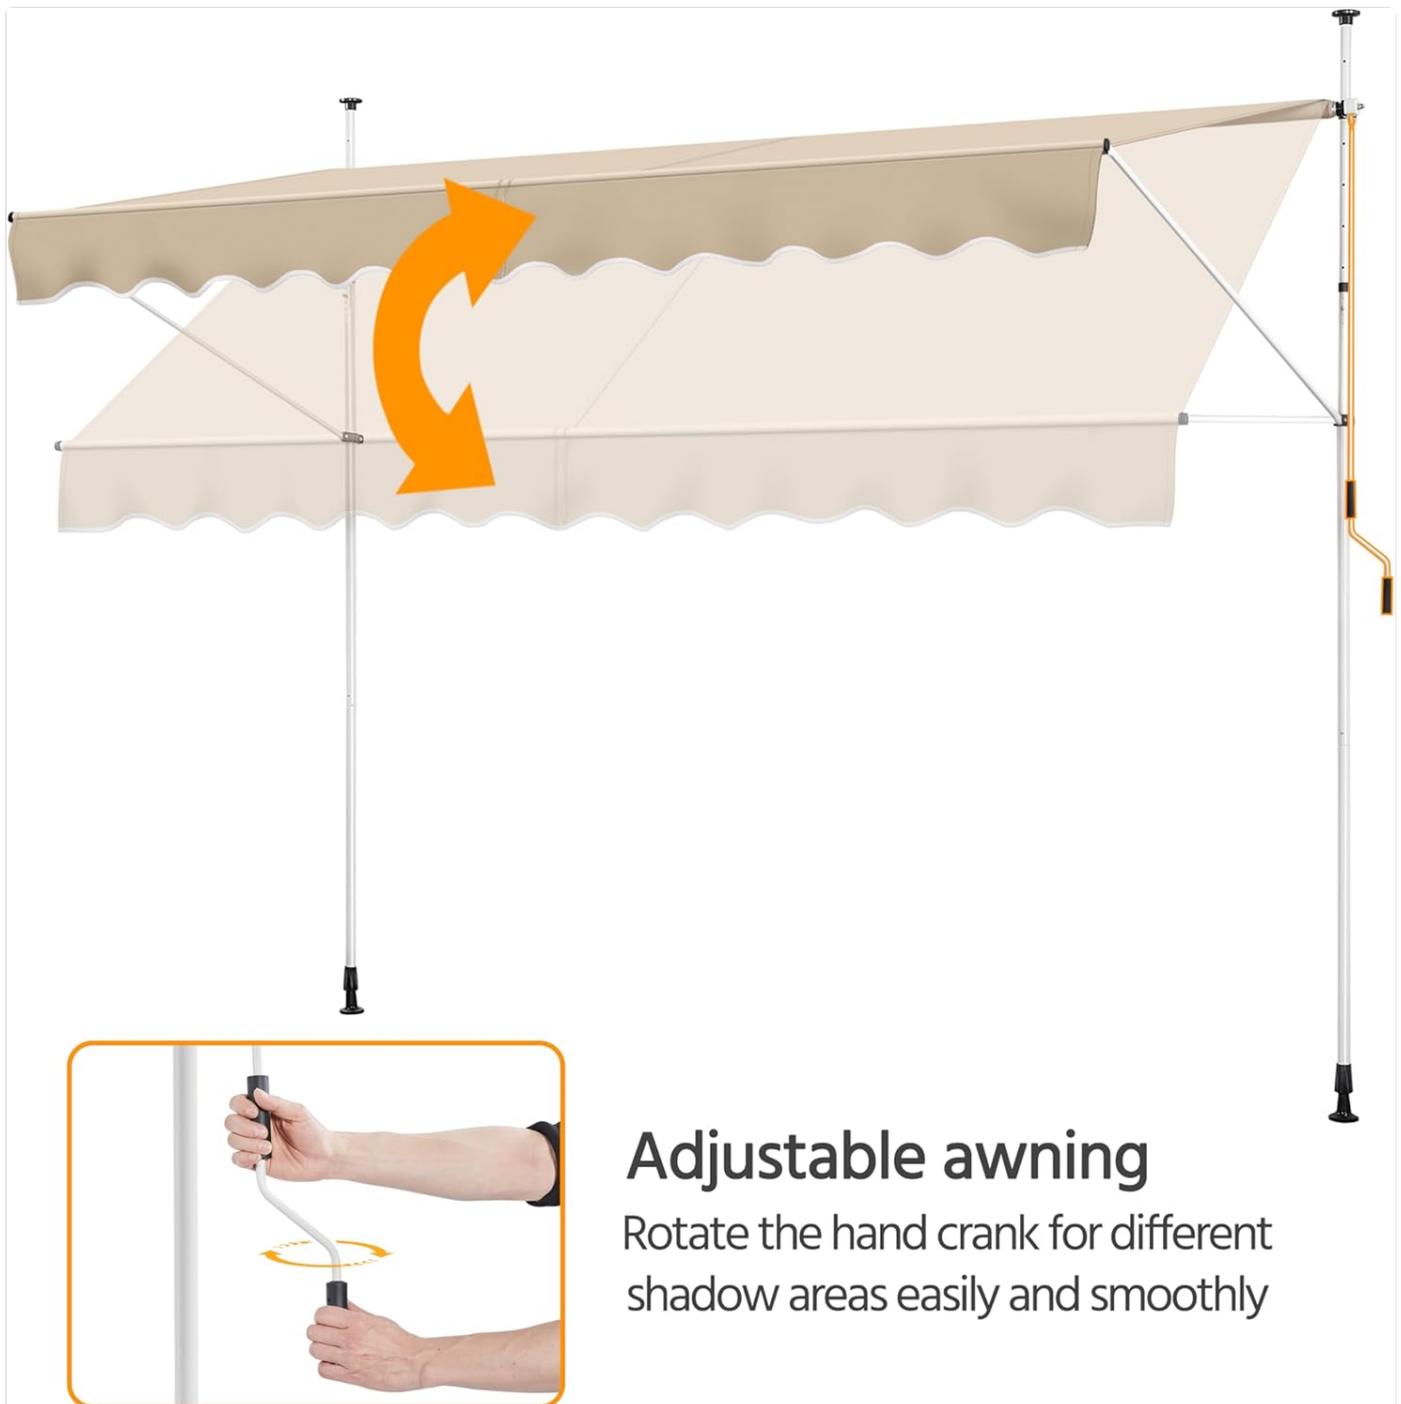

Adjustable awning

Rotate the hand crank for different shadow areas easily and smoothly

Image: Hand operating the crank handle to adjust the awning's extension.

MAINTENANCE

- **Cleaning the Fabric:** The polyester fabric with PU coating is resistant to wear. Clean the fabric with a soft cloth and mild soap solution. Rinse thoroughly with water and allow it to air dry completely before retracting. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** Regularly inspect the metal frame for any signs of rust or damage. Clean metal parts with a damp cloth.
- **Lubrication:** Periodically apply a small amount of lithium grease or similar lubricant to the moving parts of the crank mechanism and support arm joints to ensure smooth operation and extend product life.
- **Seasonal Storage:** For prolonged periods of non-use or during winter months, it is recommended to retract the awning fully and, if possible, store it in a dry, protected area to prevent wear from harsh weather conditions.


TROUBLESHOOTING

- **Awning not stable:** Ensure the vertical support poles are correctly adjusted to create sufficient tension between the floor and ceiling. Check that all screws and pins are securely fastened.
- **Difficulty extending/retracting:** Check for any obstructions in the mechanism or fabric. Apply lubricant to the crank mechanism and moving joints if resistance is felt.
- **Fabric sagging:** Ensure the horizontal support arms are correctly positioned and secured, and the vertical poles are providing adequate tension.

SPECIFICATIONS

Brand	Yaheetech
Model Number	YA-00114005
Dimensions (L x W x H)	300 cm (Width) x 180 cm (Projection) x 210-300 cm (Adjustable Height)
Material	Metal (Frame), Polyester with PU coating (Fabric)
Color	Beige
Item Weight	10 Kilograms
Power Source	Hand-powered
Assembly Required	Yes

SPECIFICATIONS

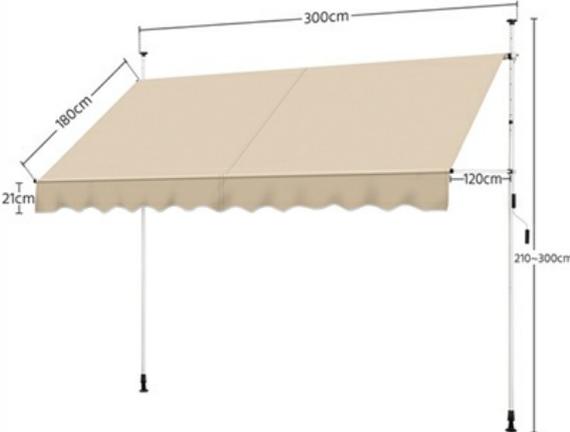

Couleur:	Beige
Matériaux:	Métal, Polyester
Dimensions assemblées:	300 x 180 x 210-300 cm
Poids d'article:	9,5 KG
Poids d'expédition:	10,4 KG

Image: Product specifications table.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Yaheetech customer service directly. Keep your purchase receipt for any warranty claims.

