

## J3 AGIP-3737

# Opus 1 Audio CD Manual

Model: AGIP-3737

Artist: J3 (Justin Lee Schultz, Jamie Leigh Schultz, Jaden Baker)

## INTRODUCTION

This manual provides essential information regarding the "Opus 1" Audio CD by J3, featuring Justin Lee Schultz, Jamie Leigh Schultz, and Jaden Baker. This album showcases a blend of urban R&B and jazz influences, including original compositions and unique arrangements.

The "Opus 1" album is a new arrival from multi-instrumentalist Justin Lee Schultz, who, alongside Jamie Leigh Schultz and Jaden Baker, formed the unit J3 to complete this project. The album features flowing piano, melodic and funky guitars, and an urban R&B sound, including a cover of a Michael Jackson song and a track dedicated to Chick Corea.

## ALBUM OVERVIEW



Image: The official album cover for "Opus 1" by J3. It features the three artists, Justin Lee Schultz, Jamie Leigh Schultz, and Jaden Baker, in a casual outdoor setting, with the album title and artist names prominently displayed.

The "Opus 1" album is an Audio CD, designed for playback on standard CD players, computers with CD-ROM drives, and compatible car audio systems. It contains a collection of musical tracks crafted by J3.

### **Tracklist (Example - actual tracklist not provided)**

1. Track 1: [Title]
2. Track 2: [Title]
3. Track 3: [Title]
4. Track 4: [Title]
5. Track 5: [Title]
6. Track 6: [Title]
7. Track 7: [Title]
8. Track 8: [Title]
9. Track 9: [Title]
10. Track 10: [Title]

*Note: The specific track titles are not available in the provided product information. Please refer to the CD packaging for*

## SETUP AND PLAYBACK

---

To enjoy the "Opus 1" Audio CD, follow these simple steps:

1. **Unpack the CD:** Carefully remove the Audio CD from its packaging. Avoid touching the playing surface (the shiny side) with your fingers to prevent smudges or scratches. Hold the CD by its edges or by placing a finger through the center hole.
2. **Insert into Player:** Open the disc tray or slot of your CD player, computer's CD-ROM drive, or car audio system. Gently place the CD onto the spindle with the label side facing up. Ensure it is seated correctly.
3. **Close Tray/Slot:** Close the disc tray or allow the player to pull the CD into the slot.
4. **Select Play:** Most players will automatically begin playback. If not, press the "Play" button on your device or remote control.
5. **Adjust Volume:** Adjust the volume to your preferred listening level.

For optimal sound quality, ensure your audio system is properly connected and configured.

## OPERATING THE CD

---

Once the CD is playing, you can use the controls on your CD player or remote to navigate the album:

- **Play/Pause:** Temporarily stop or resume playback.
- **Stop:** End playback and reset the CD to the beginning.
- **Skip Track (Forward/Backward):** Move to the next or previous track on the album.
- **Fast Forward/Rewind:** Scan quickly through the current track.
- **Repeat:** Repeat the current track or the entire album.
- **Shuffle/Random:** Play tracks in a random order.

Refer to your specific CD player's manual for detailed instructions on its controls and features.

## MAINTENANCE AND CARE

---

Proper care of your "Opus 1" Audio CD will ensure its longevity and optimal playback quality:

- **Handling:** Always hold the CD by its edges or by the center hole. Avoid touching the shiny playback surface.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Cleaning:** If the CD becomes dirty or smudged, gently wipe the playing surface with a soft, lint-free cloth (e.g., a microfiber cloth). Wipe from the center outwards in straight lines, not in a circular motion. Do not use abrasive cleaners or solvents.
- **Avoid Scratches:** Be careful not to drop the CD or slide it across rough surfaces, as this can cause scratches that may affect playback.

## TROUBLESHOOTING

---

If you encounter issues while playing your "Opus 1" Audio CD, consider the following common solutions:

Problem	Possible Cause	Solution
CD skips or stutters during playback.	Dust, smudges, or scratches on the CD surface.	Clean the CD with a soft, lint-free cloth. Inspect for deep scratches. Try playing on another CD player.
CD does not play or is not recognized.	CD inserted incorrectly; player malfunction; CD is damaged.	Ensure the CD is inserted label-side up. Try restarting the player. Test with another Audio CD to check player functionality.
Poor sound quality (e.g., distorted audio).	Dirty CD; audio system connection issues; player settings.	Clean the CD. Check all audio cable connections to your amplifier or speakers. Verify player's audio settings.

If problems persist, consult the manual for your specific CD player or contact the manufacturer of your audio equipment.

## SPECIFICATIONS

- **Product Title:** Opus 1 Japanese Instruction Manual Included AGIP-3737
- **Artist:** J3 (Justin Lee Schultz, Jamie Leigh Schultz, Jaden Baker)
- **Format:** Audio CD
- **Model Number:** AGIP-3737
- **ASIN:** B09TPR3231
- **Label:** AGATE Silhouette Series
- **Manufacturer:** AGATE Silhouette Series
- **Number of Discs:** 1
- **Package Dimensions:** 5.51 x 4.92 x 0.35 inches
- **Item Weight:** 2.82 ounces
- **Date First Available:** March 15, 2022

## SUPPORT INFORMATION

For inquiries regarding the "Opus 1" Audio CD, please refer to the contact information provided on the CD packaging or the official website of the record label, AGATE Silhouette Series.

General support for Audio CDs and playback devices should be directed to the respective manufacturers of your CD player or audio system.

For information about the artists, J3, Justin Lee Schultz, Jamie Leigh Schultz, and Jaden Baker, please visit their official websites or social media channels.

