

[Manuals.plus](#) /

> [IKEA](#) /

> IKEA OLIVBLAD Plant Stand User Manual - Indoor/Outdoor, Black, 56 cm (Model 304.866.51)

## IKEA 304.866.51

# IKEA OLIVBLAD Plant Stand User Manual

Model: 304.866.51

## 1. INTRODUCTION

---

The IKEA OLIVBLAD Plant Stand, model 304.866.51, is designed to provide a versatile and stylish display solution for your plants. Suitable for both indoor and outdoor environments, this black, 56 cm stand features a multi-tiered design, allowing for creative plant arrangements and optimal light exposure. Its durable construction ensures stability and longevity.



Image: The IKEA OLIVBLAD Plant Stand, showcasing its multi-tiered design and capacity for several potted plants. This stand is suitable for both indoor and outdoor use.

## 2. SAFETY INFORMATION

---

- Ensure the plant stand is placed on a flat, stable surface to prevent tipping.
- Do not overload the shelves. Distribute weight evenly to maintain stability.
- Keep small children and pets away from the stand, especially if it holds heavy or fragile items.
- For outdoor use, consider securing the stand in windy conditions to prevent it from falling over.
- Avoid climbing or standing on the plant stand.

## 3. PACKAGE CONTENTS

---

Before assembly, verify that all components are present. The package should contain:

- Frame components (vertical supports, horizontal bars)
- Shelf panels
- Fasteners (screws, nuts, bolts)
- Assembly tool (e.g., Allen key)

- Instruction manual (this document)

If any parts are missing or damaged, please contact customer support.

## 4. SETUP AND ASSEMBLY

---

The OLIVBLAD Plant Stand requires assembly. Follow these general steps, referring to the included diagrams or video for detailed guidance:

1. **Unpack all components:** Lay out all parts on a clean, soft surface to prevent scratches.
2. **Identify parts:** Match each component to the corresponding labels in the assembly diagram.
3. **Assemble the frame:** Connect the vertical support bars using the provided fasteners. Ensure all connections are secure but do not overtighten initially.
4. **Attach the shelves:** Secure each shelf panel to the frame at the designated positions.
5. **Tighten all fasteners:** Once the stand is fully assembled, go back and tighten all screws and bolts firmly.
6. **Check stability:** Gently shake the assembled stand to ensure it is stable and all parts are securely connected.



Video: An overview of a multi-tiered plant stand, demonstrating its design and potential for displaying various plants. This video provides a visual reference for the product's structure and use.

## 5. OPERATING INSTRUCTIONS

---

- **Placement:** Position the plant stand in a location that receives appropriate light for your plants, whether indoors or outdoors.
- **Plant Arrangement:** Place potted plants on the shelves, distributing their weight to maintain balance. Consider plant height and light requirements when arranging.
- **Watering:** When watering plants on the stand, be mindful of excess water. Use drip trays or ensure proper drainage to protect the stand and surrounding surfaces.
- **Indoor/Outdoor Use:** The stand is designed for both environments. For outdoor use, ensure it is not exposed to extreme weather conditions that could compromise its stability or finish.

## 6. MAINTENANCE

---

- **Cleaning:** Wipe the stand clean with a soft, damp cloth. For stubborn dirt, use a mild soap solution and then wipe dry. Avoid abrasive cleaners or harsh chemicals that could damage the powder coating.
- **Inspection:** Periodically check all fasteners to ensure they remain tight. Retighten if necessary to maintain the stand's stability.
- **Outdoor Care:** If used outdoors, regularly inspect for any signs of rust or wear, especially on metal components. While designed for outdoor use, prolonged exposure to harsh elements may affect its appearance over time.

## 7. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose fasteners; uneven surface; improper assembly.	Ensure all screws and bolts are tightened. Move the stand to a flat, level surface. Review assembly steps.
Missing parts during unboxing.	Packaging error.	Contact customer support with your purchase details and a list of missing parts.
Damage to finish (e.g., scratches, rust).	Rough handling; prolonged exposure to harsh weather (outdoor use).	Minor scratches can be touched up with appropriate paint. For rust, clean and apply rust-inhibiting primer and paint. Consider moving outdoor stands to a sheltered area during extreme weather.

## 8. SPECIFICATIONS

<b>Model Number</b>	304.866.51
<b>Brand</b>	IKEA
<b>Material</b>	Plastic, Alloy Steel
<b>Color</b>	Black
<b>Finish Type</b>	Powder Coating
<b>Mounting Type</b>	Floor Mount
<b>Style</b>	Modern
<b>Approximate Dimensions</b>	56 cm (Height/Width, specific dimension not fully detailed in source)
<b>Assembly Required</b>	Yes

## 9. WARRANTY AND SUPPORT

For warranty information, product support, or to report missing/damaged parts, please refer to your purchase documentation or contact IKEA customer service directly. Keep your proof of purchase for any warranty claims. You can typically find contact information on the official IKEA website or on your sales receipt.