



[Manuals.plus](#) /

› [Lenovo](#) /

› [Lenovo Tab M10 Plus \(3rd Gen\) User Manual](#)

Lenovo TB125FU

Lenovo Tab M10 Plus (3rd Gen) User Manual

Model: TB125FU | Brand: Lenovo

INTRODUCTION

The Lenovo Tab M10 Plus (3rd Gen) is a versatile Android tablet designed for both entertainment and productivity. Its sleek, thin, and lightweight design makes it highly portable, while its powerful performance ensures a smooth user experience. This manual provides essential information for setting up, operating, and maintaining your device.



Figure 1: Front and back view of the Lenovo Tab M10 Plus (3rd Gen).

PRODUCT FEATURES

- **Dazzling Display:** Features a 10.6-inch FHD IPS display with 2000 x 1200 pixel resolution, perfect for streaming and browsing.
- **Immersive Audio:** Equipped with a quad speaker system optimized with Dolby Atmos® for rich, spatial sound.
- **Enhanced Reading Mode:** A special mode designed to make long screen sessions easier on the eyes, mimicking the experience of reading on paper.
- **Eye Comfort:** TÜV Low Blue Light certification helps reduce eye strain during extended use.
- **Powerful Performance:** Powered by an octa-core CPU for smooth multitasking and efficient operation.
- **Long Battery Life:** Enjoy up to 12 hours of video playback on a single charge, ensuring all-day use.
- **Latest Android OS:** Runs on Android 12 or later, with a commitment to three years of security and other updates.
- **Connectivity:** Built-in WiFi and Bluetooth® for seamless internet access and peripheral connections.
- **Cameras:** Features 8MP front and rear cameras for clear photos and video calls.

WHAT'S IN THE BOX

Upon unboxing your Lenovo Tab M10 Plus (3rd Gen), ensure all the following items are present:

- Lenovo Tab M10 Plus (3rd Gen) Tablet

- Charger
- USB-C Cable
- Quick Start Guide
- Safety, Warranty & Quick Start Guide
- SIM Eject Tool (for models with cellular support)



Figure 2: The tablet's home screen, displaying various applications.

SETUP GUIDE

1. Initial Setup

1. **Power On:** Press and hold the Power button (located on the top edge when held horizontally) until the Lenovo logo appears.
2. **Language Selection:** Follow the on-screen prompts to select your preferred language.
3. **Region Selection:** Choose your region for localized settings.
4. **Google Account:** Sign in with your Google account or create a new one. This is essential for accessing the Google Play Store and other Google services.

2. Connecting to Wi-Fi

1. From the home screen, swipe down from the top to open the Quick Settings panel.
2. Tap and hold the **Wi-Fi icon** to open Wi-Fi settings.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted, then tap **Connect**.

3. Inserting a MicroSD Card (Optional)

To expand storage, you can insert a MicroSD card (sold separately).

1. Locate the SIM/MicroSD card tray on the side of the tablet.

2. Insert the provided SIM eject tool into the small hole on the tray and gently push until the tray pops out.
3. Place the MicroSD card into the designated slot on the tray, ensuring it is correctly oriented.
4. Carefully push the tray back into the tablet until it clicks into place.

OPERATING INSTRUCTIONS

1. Power On/Off

- **Power On:** Press and hold the Power button until the Lenovo logo appears.
- **Power Off:** Press and hold the Power button until the power options menu appears, then tap **Power off**.
- **Restart:** From the power options menu, tap **Restart**.

2. Navigating the Interface

- **Home Screen:** The main screen where you can access apps and widgets.
- **App Drawer:** Swipe up from the bottom of the home screen to view all installed applications.
- **Quick Settings:** Swipe down from the top of the screen to access quick toggles for Wi-Fi, Bluetooth, brightness, etc.
- **Notifications:** Swipe down from the top of the screen to view recent notifications.

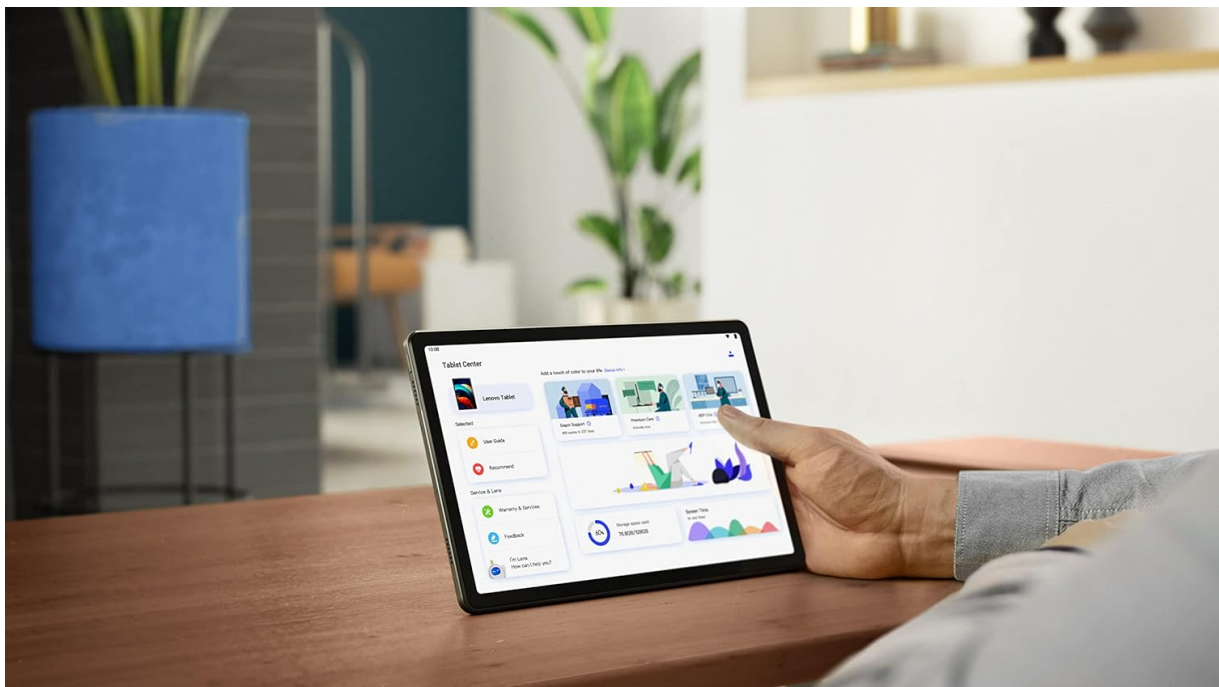


Figure 3: Interacting with the tablet's user interface.

3. Using Reading Mode

Reading Mode adjusts the screen's color and contrast to reduce eye strain, making it ideal for reading e-books or long articles.

1. Open the Quick Settings panel by swiping down from the top of the screen.
2. Tap the **Reading Mode** icon to toggle it on or off.
3. You can also customize Reading Mode settings (e.g., color temperature) in the Display settings.

4. Audio Features

The tablet features a quad speaker system with Dolby Atmos® for an enhanced audio experience.

- **Volume Control:** Use the Volume Up and Volume Down buttons on the side of the tablet to adjust audio levels.
- **Dolby Atmos:** Access Dolby Atmos settings through the Settings app under "Sound & Vibration" to customize audio profiles for movies, music, or dynamic sound.

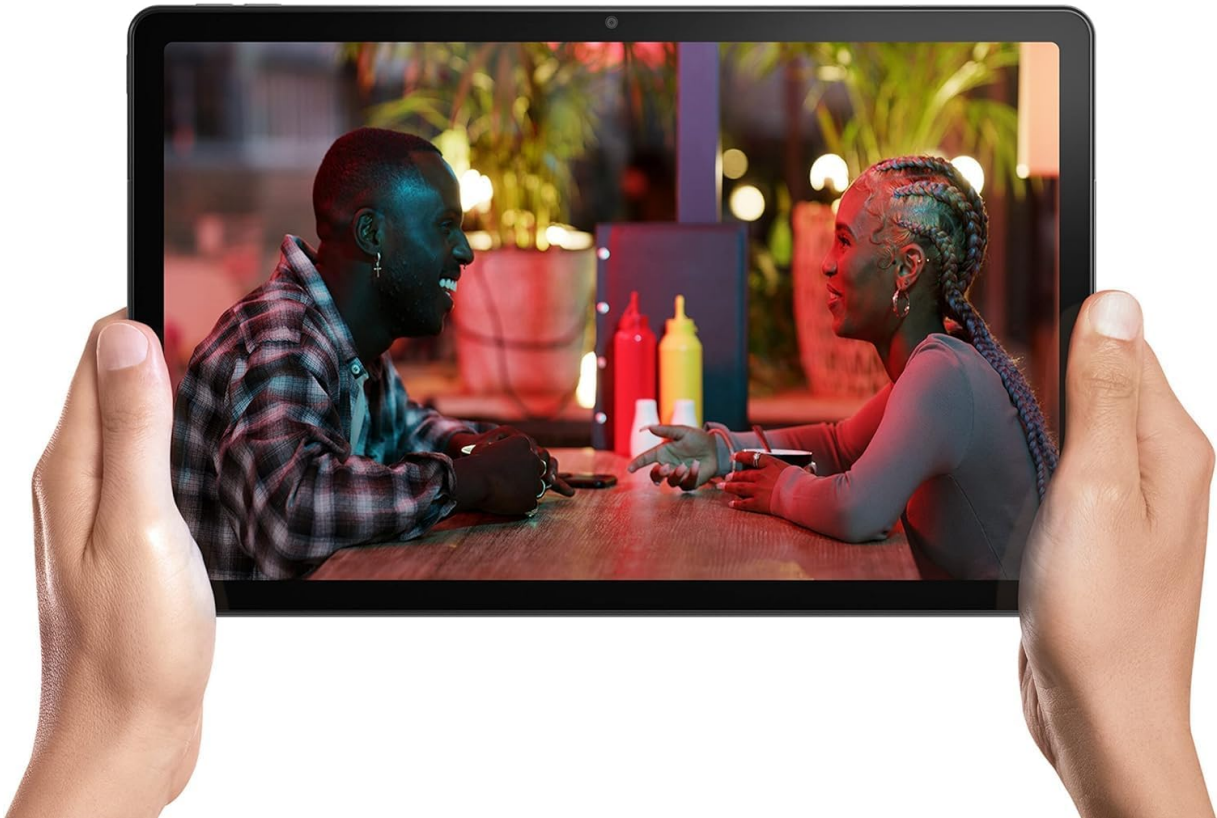


Figure 4: Enjoying multimedia content on the tablet's vibrant display.

MAINTENANCE

1. Cleaning

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- For stubborn smudges, slightly dampen the cloth with water.

2. Software Updates

Keep your tablet's software up-to-date to ensure optimal performance and security.

1. Go to **Settings > System > System update**.
2. Tap **Check for update** and follow the on-screen instructions if an update is available.

3. Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold).
- For optimal battery longevity, try to keep the charge between 20% and 80%.
- Use only the provided charger or a compatible charger to prevent damage.

TROUBLESHOOTING

1. Tablet Not Responding

- Press and hold the Power button for about 10-15 seconds to force a restart.
- If the issue persists, ensure the tablet is charged. Connect it to the charger and try restarting.

2. Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on from the Quick Settings panel.
- Restart your Wi-Fi router.
- Forget the network in Wi-Fi settings and reconnect.

3. Apps Crashing/Freezing

- Close the app and reopen it.
- Clear the app's cache and data: **Settings > Apps > [Select App] > Storage > Clear cache / Clear data.**
- Uninstall and reinstall the app.

SPECIFICATIONS

Feature	Detail
Model Name	Tab M10 Plus 3rd Gen
Item Model Number	TB125FU
Screen Size	10.61 Inches
Max Screen Resolution	2000 x 1200 Pixels
Processor	2 GHz Octa-core (MediaTek)
RAM	4 GB
Flash Memory Size	64 GB
Operating System	Android 12
Rear Webcam Resolution	8 MP
Front Webcam Resolution	8 MP
Average Battery Life	14 Hours (up to 12 hours video playback)
Item Weight	1.04 pounds
Product Dimensions	9.9 x 6.26 x 0.29 inches

WARRANTY AND SUPPORT

Your Lenovo Tab M10 Plus (3rd Gen) comes with a standard manufacturer's warranty. For detailed warranty terms, conditions, and support options, please refer to the warranty card included in your product packaging or visit the official Lenovo support website.

For technical assistance, troubleshooting, or service requests, please contact Lenovo Customer Support.

