

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [My Arcade](#) /

› [My Arcade Go Gamer Classic Portable Electronic Game Console \(Model DGUN-3910\) User Manual](#)

My Arcade DGUN-3910

My Arcade Go Gamer Classic Portable Electronic Game Console

Model: DGUN-3910

INTRODUCTION

Welcome to the My Arcade Go Gamer Classic user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new portable electronic game console. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.

SAFETY INFORMATION

WARNING: Not suitable for children under 3 years old.

Always supervise young children during use. Keep the device away from water and extreme temperatures. Do not attempt to disassemble or modify the device.

WHAT'S IN THE BOX

- Go Gamer Classic Console
- User Guide (this document)



Image: The My Arcade Go Gamer Classic console shown within its purple retail packaging.

FEATURES

- No external console required
- 300 video games built-in
- 2.5-inch color display with LED illuminated buttons
- 3.5mm headphone port for private listening (headphones not included)

- Powered by 3 AAA batteries (not included)
- Compact and portable design, ideal for travel



Image: The back of the product packaging, detailing the console's features and game types.

SETUP

1. Installing Batteries

1. Locate the battery compartment on the back of the Go Gamer Classic.

2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 3 AAA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

2. Powering On/Off

- To power on the device, slide the power switch located on the top edge to the 'ON' position.
- To power off, slide the power switch to the 'OFF' position.



Image: A close-up of the My Arcade Go Gamer Classic, displaying its screen, D-pad, and A/B buttons.

OPERATING INSTRUCTIONS

1. Game Selection

- Once powered on, the device will display a list of available games.
- Use the **D-pad** (directional pad) to navigate through the game list.
- Press the **START** button to select and begin playing a game.

2. In-Game Controls

- Use the **D-pad** for movement or direction.
- Use the **A** and **B** buttons for actions specific to each game (e.g., jump, shoot, confirm).
- Press the **RESET** button to return to the main game selection menu.

3. Volume Control

- A volume control switch is located on the side of the device.
- Slide the switch to adjust the sound level or mute it completely.

4. Headphone Use

- Plug standard 3.5mm headphones (not included) into the headphone port on the top edge of the device for private audio.



Image: A user holding the My Arcade Go Gamer Classic, actively playing a game on its 2.5-inch color screen.

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the console. Do not use liquid cleaners or aerosols.
- Storage:** Store the device in a cool, dry place when not in use. Remove batteries if storing for extended periods to prevent leakage.
- Battery Care:** Replace all batteries at the same time. Do not mix old and new batteries or different types of batteries.

TROUBLESHOOTING

- Device does not power on:** Ensure batteries are correctly installed and are not depleted. Replace with fresh AAA batteries if necessary.
- No sound:** Check the volume control switch on the side of the device. Ensure it is not set to the lowest position or muted.
- Screen is blank or frozen:** Try turning the device off and then on again. If the issue persists, remove and reinsert the batteries.
- Game not responding:** Press the **RESET** button to return to the game selection menu and choose another game.

SPECIFICATIONS

Feature	Detail
Model Number	DGUN-3910
Product Dimensions	5.13" L x 8.13" W x 1.88" H
Item Weight	160 Grams (5.6 ounces)
Screen Size	2.5 Inches
Display Type	LCD, Full Color
Controller Type	Button Control (D-pad, A/B, Reset, Start)
Power Source	Battery Powered
Batteries Required	3 AAA batteries (not included)
Material	Plastic
Form Factor	Handheld
Built-in Games	300
Headphone Port	3.5mm

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official My Arcade website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

For additional information or assistance, visit the [My Arcade Store](#).

© 2026 My Arcade. All rights reserved.