

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY Replacement Remote Control User Manual

ALLIMITY QYSY-AK1-QYSY

ALLIMITY Replacement Remote Control User Manual

Model: QYSY-AK1-QYSY

INTRODUCTION

This manual provides instructions for the ALLIMITY QYSY-AK1-QYSY Replacement Remote Control. This remote is designed to function as a direct replacement for your original remote, covering all essential functions without requiring any programming.

Compatible Models:

- Amiko HD8840, Impulse-SAT, Impulse-T2/C, Micro-HD, Synaps-CHD-3100, Micro Mini-Combo-Extra
- ECO-TC-200, CHD-8270+, HD8140-C-SE, HD8140-T2/C, HD8142-Twin-C, HD8150
- HD8265+, HD8275+, HD8340, SSD-570, SSD-580, STHD-8800, STHD-8820, T60
- HD8155, HD8240, HD8250+, HD8255+, HD8260+, HD8360
- Mini-Combo-HD, Mini-Combo-HD-SE, Mini-HD, Mini-HD-RE, Mini-HD-SE, Mini-HD-T2/C, Mini-HD265
- Mira, SHD-7900, SHD-8000, SHD-8110, SHD-8140 HD-SE
- EVO-TC100, EVO-TC300, Synaps-CHD-3000

SETUP

The ALLIMITY QYSY-AK1-QYSY remote control requires no programming. Simply insert the batteries, and it is ready for use.

1. Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two new **AAA alkaline batteries**, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.







Image: Front view of the ALLIMITY replacement remote control, showing all buttons and layout.

Note: Always replace both batteries at the same time. Do not mix old and new batteries, or different types of batteries.

OPERATING INSTRUCTIONS

This remote control is designed to replicate the functions of your original remote. Point the remote directly at your device (e.g., satellite receiver, set-top box) for optimal performance.

Key Functions Overview

Button	Function
POWER (Red)	Turns the device on or off.
MUTE	Mutes or unmutes the audio.
V.FORMAT	Changes video format settings.
USB	Accesses USB media functions.
F1, F2, F3	Function keys, specific to device model.
FIND	Initiates search function.
Numeric Keypad (0-9)	Direct channel selection or data input.
TV/SAT	Switches between TV and Satellite modes.
TV/RADIO	Switches between TV and Radio modes.
ZOOM	Adjusts screen zoom level.
RECALL	Recalls the previously viewed channel.
MENU	Opens the main menu.
INFO	Displays program information.
Navigation Cluster (Up, Down, Left, Right, OK)	Navigates menus and confirms selections.
EXIT	Exits current menu or screen.
EPG	Opens the Electronic Program Guide.
VOL +/-	Adjusts volume up or down.
REC (Red Dot)	Starts recording.
PAGE +/-	Navigates through pages in menus or EPG.
FOLDER	Accesses media folders.

Button	Function
PAUSE	Pauses playback.
STOP	Stops playback or recording.
PREV (Rewind)	Rewinds media or goes to previous track.
NEXT (Fast Forward)	Fast forwards media or goes to next track.
PLAY	Starts or resumes playback.
PLAY MODE	Changes playback mode (e.g., repeat, shuffle).
AUDIO	Selects audio track or language.
OPTION	Accesses additional options.
TTX	Opens Teletext.
SUBTITLE	Activates or deactivates subtitles.
FAV (Red)	Accesses favorite channels list.
SAT (Green)	Selects satellite input.
Colored Buttons (Red, Green, Yellow, Blue)	Context-sensitive functions, typically indicated on-screen.



Image: Angled view of the ALLIMITY replacement remote control, highlighting the ergonomic design.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always use new alkaline batteries of the specified type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Avoid Moisture:** Keep the remote control away from water and high humidity.
- **Avoid Extreme Temperatures:** Do not expose the remote to direct sunlight or extreme heat/cold.

TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Remote control is not working.	◦ Check if the batteries are inserted correctly with the correct polarity (+/-). ◦ Replace the batteries with new AAA alkaline batteries. ◦ Ensure there are no obstructions between the remote control and the device's infrared sensor. ◦ Make sure you are within the operating range (up to 10 meters) and pointing the remote directly at the device.
Some buttons are not responding.	◦ Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris. ◦ Ensure the remote is compatible with your specific device model. Refer to the "Compatible Models" list. ◦ Replace batteries. Low battery power can sometimes cause inconsistent button responses.
Device responds intermittently.	◦ Check battery level and replace if necessary. ◦ Ensure a clear line of sight to the device's IR receiver. ◦ Minimize strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the IR signal.

SPECIFICATIONS

- **Brand:** ALLIMITY
- **Model Number:** QYSY-AK1-QYSY
- **Connectivity Technology:** Infrared (IR)
- **Battery Type:** 2 x AAA Alkaline Batteries (not included)
- **Maximum Range:** 10 Meters (approx. 33 feet)
- **Special Feature:** No programming required
- **Compatible Devices:** Amiko HD8840, ECO-TC-200, CHD-8270+, HD8140-C-SE, HD8265+, HD8275+, HD8340, SSD-570, T60, HD8155, HD8240, SHD-8110, EVO-TC300, and many more listed in the Introduction.



Image: Another angled view of the ALLIMITY replacement remote control, showing the button layout from a different perspective.

WARRANTY AND SUPPORT

Information regarding warranty and specific support contacts is not available in the provided product details. For any issues or inquiries, please refer to your purchase documentation or contact the retailer where the product was purchased.

© 2023 ALLIMITY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09TQX6GRJ>

More documents and user manuals: <https://manuals.plus/>