

tectake Zola

tectake Zola Electric Height-Adjustable Desk

Model: 404316

1. PRODUCT OVERVIEW

The tectake Zola Electric Height-Adjustable Desk is designed to provide a dynamic and ergonomic workspace. Featuring continuous electric height adjustment, a robust particle board tabletop, and a solid steel frame, this desk offers stability and comfort. Its powerful motor ensures smooth transitions between sitting and standing positions, while the flexible frame design maximizes legroom. The integrated touchpad allows for easy height adjustments and memory function for preferred settings. An anti-collision system enhances safety during operation.



Image 1.1: The tectake Zola Electric Height-Adjustable Desk, showcasing its sleek black design and sturdy construction.



Image 1.2: The desk integrated into a modern office environment, demonstrating its practical use.

2. SAFETY INSTRUCTIONS

- Read all instructions carefully before assembly and use.
- Keep children and pets away from the desk during operation.
- Ensure all screws and bolts are tightened securely before use. Periodically check and re-tighten as necessary.
- Do not overload the desk. The maximum load capacity is 45 kg.
- Keep hands and fingers clear of moving parts during height adjustment. The desk is equipped with an anti-collision system, but caution is still advised.
- Only use the provided power adapter.
- Do not disassemble or modify the motor or control unit. Contact qualified personnel for repairs.
- Place the desk on a level surface. Adjustable feet can compensate for minor unevenness.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Tabletop with integrated drawer and control panel
- Left Leg Assembly
- Right Leg Assembly
- Feet (2x)
- Power Adapter and Cable
- Assembly Hardware (screws, Allen key, etc.)
- Instruction Manual (this document)

4. ASSEMBLY GUIDE

Assembly is required for this product. It is recommended to have two people for easier and safer assembly. Clear a spacious area for assembly and lay out all components.

Step-by-Step Assembly:

1. **Attach Leg Assemblies to Tabletop:** Carefully place the tabletop upside down on a soft, clean surface to prevent scratches. Align the left and right leg assemblies with the pre-drilled holes on the underside of the tabletop. Secure them using the provided screws and Allen key. Ensure the motor cables are not pinched.
2. **Attach Feet to Leg Assemblies:** Slide the feet onto the bottom of each leg assembly. Secure them with the appropriate screws.
3. **Connect Power Cable:** Locate the power input port on the control unit (usually on the underside of the tabletop near the control panel). Connect the power cable firmly.
4. **Position the Desk:** With assistance, carefully flip the desk upright and move it to its desired location. Adjust the plastic feet at the bottom of the legs to ensure the desk is stable and level on uneven floors.
5. **Initial Power-Up:** Plug the power adapter into a wall outlet. The control panel display should light up.

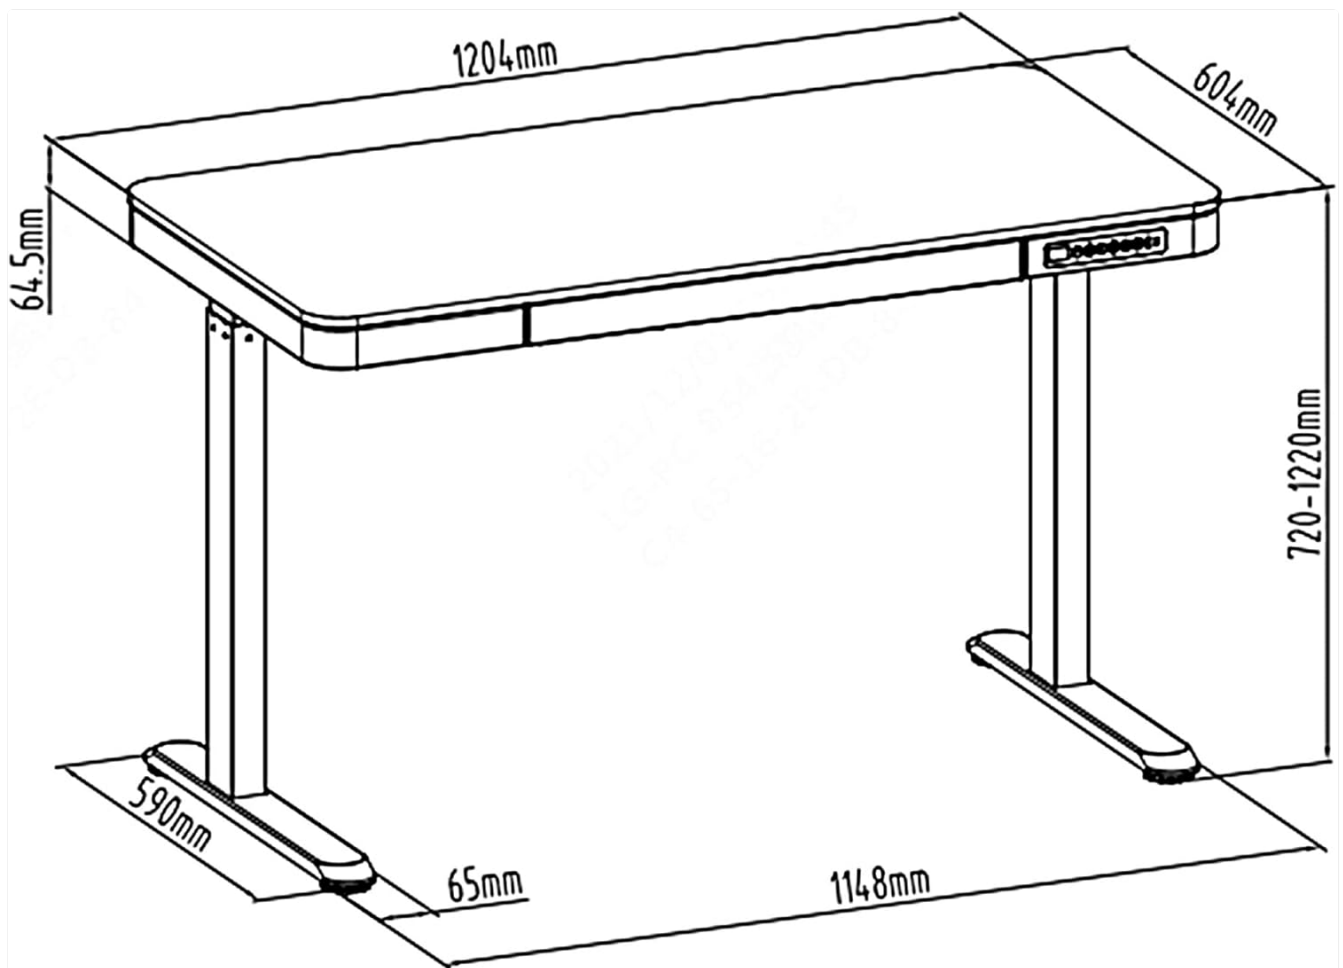


Image 4.1: Dimensional drawing of the desk, useful for planning space and assembly.



Image 4.2: Side view illustrating the robust leg structure and height adjustment mechanism.

5. OPERATION GUIDE

The tectake Zola desk features an intuitive control panel for easy height adjustment and memory functions.

Control Panel Functions:



Image 5.1: The control panel, showing the digital height display and control buttons.

- **Digital Display:** Shows the current height of the desk in centimeters.
- **Up/Down Arrows** (↑ / ↓): Press and hold to continuously adjust the desk height upwards or downwards. Release the button to stop at the desired height.
- **Memory Buttons (1, 2, 3, 4):** These buttons allow you to save and recall up to four preferred height settings.
 1. **To Save a Height:** Adjust the desk to your desired height using the up/down arrows. Press and hold one of the memory buttons (1-4) until the display flashes or beeps, indicating the height has been saved.
 2. **To Recall a Height:** Simply press the corresponding memory button (1-4). The desk will automatically move to the saved height.
- **Anti-Collision System:** The desk is equipped with a sensitive anti-collision system. If the desk encounters an obstruction during height adjustment, it will stop and slightly reverse direction to prevent damage.
- **USB-A and USB-C Ports:** Located on the control panel, these ports can be used to charge small electronic devices.



Image 5.2: Detail of the USB-A and USB-C charging ports for convenient device charging.



Image 5.3: Visual representation of the desk's adjustable height range.

Integrated Drawer:

The desk includes a convenient integrated drawer for storing small office supplies, helping to keep your workspace tidy.



Image 5.4: The desk's integrated drawer, providing discreet storage.



Image 5.5: Detail of the drawer's smooth-gliding mechanism.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the desk surface and legs with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish.
- **Regular Checks:** Periodically inspect all screws and connections to ensure they remain tight. Re-tighten if necessary.
- **Cable Management:** Ensure power cables are not tangled or pinched, which could lead to damage or malfunction.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk does not move.	No power; cable disconnected; motor error.	Check power connection to wall outlet and desk. Ensure all cables are securely connected. Unplug and replug the power cable to reset the system.
Desk moves unevenly or makes unusual noises.	Loose connections; obstruction; uneven load.	Check all assembly screws for tightness. Ensure there are no obstructions under or around the desk. Distribute weight evenly on the tabletop.
Anti-collision system frequently activates.	Obstruction; sensitive setting.	Ensure the path of movement is clear. If the issue persists without clear obstruction, consult customer support.
Memory function not working.	Incorrect saving procedure.	Refer to 'Operation Guide' section 5 for correct saving procedure (press and hold memory button until confirmation).

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	404316
Overall Dimensions (L x W x H)	Approx. 1204 x 604 x 720 - 1220 mm
Tabletop Dimensions (L x W x H)	Approx. 1204 x 604 x 64.5 mm
Inner Drawer Dimensions (L x W x H)	Approx. 60 x 29 x 5 cm
Lifting Columns per Side	2 main columns (approx. 4.5 x 7.5 cm)
Adjustable Feet Range	Approx. 1.2 cm
Motor Noise Level	<50 dB
Lifting Speed	25 mm/s
Motor Power	52.2 W
Input Voltage	100-240 V
Cable Length	Approx. 310 cm
Load Capacity	45 kg
Product Weight	Approx. 32 kg
Materials	Powder-coated steel, particle board, polychloride, ABS plastic

9. WARRANTY AND SUPPORT

Manufacturer: tectake
Brand: TecTake

Documents - tectake – Zola

Liste des opérateurs économiques responsables des produits du vendeur Le Site de la
 Piece Conformment ... VTECH ELECTRONICS 24 all Sablires 78290 EUROPE
 Croissy sur Seine France VULKAN 12 AVENUE EMILE **ZOLA** ZAC DE L AGAVON
 13170 LES PENNES MIRABEAU France VULKAN 12 AVENUE EMILE **ZOLA** ZAC
 DE L AGAVON ...

lang:fr score:9 filesize: 192.81 K page_count: 34 document date: 2024-12-12