

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Remote](#) /

› [Remote Control Instruction Manual for Akai TV Models AKTV4621A and AKTV6021A \(Remote Brand SU4013\)](#)

## Remote SU4013

# Remote Control Instruction Manual

For Akai TV Models AKTV4621A and AKTV6021A

## INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your new Remote brand compatible remote control, model SU4013. This remote is specifically designed and pre-programmed for use with Akai TV models AKTV4621A and AKTV6021A. No additional programming is required before use.

## SETUP

### 1. Battery Installation

The remote control requires two AAA batteries (not included). To install:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

### 2. Initial Use

This remote control is pre-programmed for Akai TV models AKTV4621A and AKTV6021A. Once batteries are installed, it is ready for immediate use. Point the remote control directly at your Akai TV and press any button to confirm functionality.

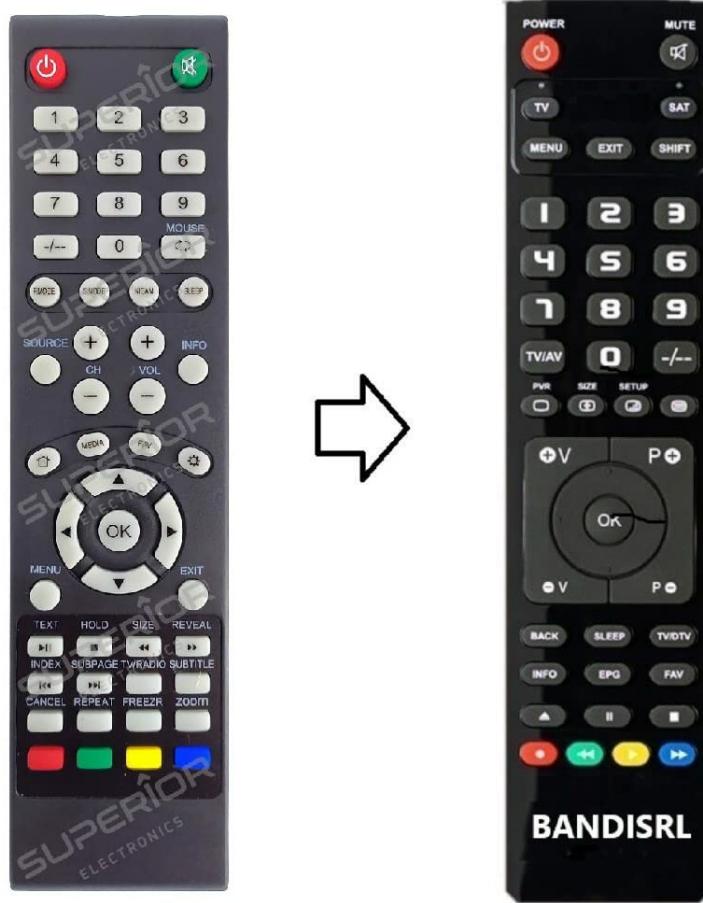


Image: The Remote brand SU4013 compatible remote control. This image shows the front view of the remote with various buttons for TV functions.

## OPERATING INSTRUCTIONS

The remote control features 25 buttons, providing comprehensive control over your Akai TV. Below are general functions:

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Selects channels directly.
- **Channel Up/Down:** Navigates through channels sequentially.
- **Volume Up/Down:** Adjusts the TV's audio volume.
- **Mute Button:** Silences the TV audio.
- **Input/Source Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Menu Button:** Accesses the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Used to navigate menus and confirm selections.
- **Exit/Back Button:** Exits menus or returns to the previous screen.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** For media playback functions, if supported by your TV.

Refer to your Akai TV's original user manual for specific functions and menu navigation details.

## MAINTENANCE

---

### Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

### Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

### Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## TROUBLESHOOTING

---

- **Remote control is not working:**

- Ensure batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Make sure there are no obstructions between the remote control and the TV's infrared sensor.
- Ensure you are within the maximum operating range of 10 meters.

- **Some buttons are not responding:**

- Check if the buttons are physically stuck or dirty.
- Confirm that the function you are trying to use is supported by your specific Akai TV model.

- **Remote control range is reduced:**

- Batteries may be low; replace them.
- Ensure no strong light sources (like direct sunlight) are interfering with the TV's IR sensor.

## SPECIFICATIONS

---

<b>Brand</b>	Remote
<b>Model Number</b>	SU4013
<b>Compatible Devices</b>	Akai TV Models AKTV4621A, AKTV6021A
<b>Special Feature</b>	Ready to use (Pre-programmed)
<b>Controller Type</b>	Remote Control

<b>Number of Buttons</b>	25
<b>Maximum Range</b>	10 Meters

## **WARRANTY AND SUPPORT**

---

This remote control is a replacement (non-original) unit. For any issues not covered in this manual, or if you own a different Akai TV model and require compatibility information, please contact the seller or manufacturer for support.

Information regarding spare parts availability and software updates is not available for this product.