

[Manuals.plus](#) /

› [Newbealer](#) /

› Newbealer Steamer for Clothes, 1200W Travel Steamer with Horizontal & Vertical Steaming, 2 Steam Levels, Dry Ironing, Foldable, 1.5lbs Lightly, 180ml Handheld Fabric Wrinkle Remover (120V Only) White-gold

Newbealer NB316A

Newbealer Steamer for Clothes

Model: NB316A

INTRODUCTION

Thank you for choosing the Newbealer Steamer for Clothes. This versatile 1200W handheld steamer is designed to efficiently remove wrinkles from your garments with ease, whether at home or while traveling. Its innovative features, including dual steaming modes and leak-proof technology, ensure a smooth and effective experience. Please read this manual carefully before use to ensure proper operation and maintenance.



The Newbealer Steamer for Clothes, showcasing its compact, foldable design and powerful steam output.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Newbealer Steamer:

Lightweight Handheld Steamer for Wrinkle-Free Style

Our handheld steamer weighs just 1.5lb, less than a ceramic coffee cup filled with 250ml of coffee. With its lightweight design, it offers effortless ironing whether you're on the go or at home

1.5_{lbs}



Detailed view of the steamer's components, including the power button, steam nozzle, detachable water tank, and foldable handle.

- **Power Button:** Controls power and steam levels.
- **Steam Outlet Nozzle:** Releases steam for wrinkle removal.
- **Detachable Water Tank (180ml):** Holds water for steaming.
- **Foldable Handle:** Allows for compact storage and portability.
- **Fabric Brush:** Attachable accessory for thicker garments.

SETUP


1. **Detach and Fill Water Tank:** Gently push the detachable water tank from the main unit. Open the cap and fill with 180ml of demineralized or distilled water. Avoid using tap water to prevent mineral buildup. Close the cap securely.

Compact but powerful

Strong as a full-sized steamer for most fabrics



Plush

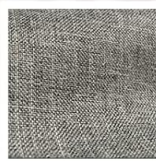

Linen



Silk



Cotton



Wool



Nylon



The transparent water tank is easily detachable for convenient refilling. Always use demineralized or distilled water.

2. **Attach Water Tank:** Align the filled water tank with the main unit and push until a slight click is heard, indicating it is securely locked.
3. **Plug In:** Extend the power cord and plug the steamer into a 110-125V electrical outlet. The indicator light will flash orange, signifying that the steamer is heating up.



Visual instructions for water tank attachment and power connection. The indicator light will signal heating status.

4. **Wait for Heating:** The steamer takes approximately 20 seconds to heat up. The indicator light will turn

solid red when it is ready for use.

OPERATING INSTRUCTIONS

Once the steamer is ready, you can begin the steaming process:

1. **Select Steam Level:** Short press the power button to switch between the two steam levels (low and high). The indicator light will change color to reflect the selected level.
2. **Vertical Steaming:** Hang your garment on a hanger. Hold the steamer upright and gently glide the steam nozzle over the fabric, moving from top to bottom. For best results, lightly stretch the fabric with your free hand.



Vertical steaming is ideal for quick wrinkle removal on hanging garments.

3. **Horizontal Ironing:** For stubborn wrinkles or to achieve a pressed look, lay the garment flat on a heat-resistant surface. You can use the steamer horizontally, pressing the soleplate directly onto the fabric. The 360-degree leak-proof design allows steaming from any angle without water leakage.

Handheld Garment Steamer Details



The steamer supports both vertical steaming and horizontal dry ironing for versatile use.

4. **Dry Ironing Mode:** Long press the power button to switch to dry ironing mode. This is suitable for delicate fabrics that may not require steam.
5. **Using the Fabric Brush:** For thicker fabrics like coats or denim, attach the fabric brush to the steam nozzle. This helps to open up the fabric fibers, allowing steam to penetrate more effectively and remove lint or dust.

Your browser does not support the video tag. Please update your browser or try again later.

Official product video demonstrating the 2-in-1 steam and iron functions of the Newbealer Handheld Garment Steamer.

MAINTENANCE

To ensure the longevity and optimal performance of your Newbealer Steamer, follow these maintenance guidelines:

- **Empty Water Tank:** After each use, unplug the steamer and allow it to cool down. Detach the water tank and empty any remaining water. This prevents mineral buildup and bacterial growth.
- **Clean Exterior:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling (Monthly):** If you notice reduced steam output or white residue, descaling may be

necessary. Fill the water tank with a mixture of 50% distilled water and 50% white vinegar. Run the steamer until the tank is empty. Repeat the process with only distilled water to rinse.

- **Store Properly:** Once completely cool and dry, fold the handle for compact storage. Store the steamer in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

If you encounter any issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Mineral buildup; Not fully heated	Refill water tank; Perform descaling; Wait for indicator light to turn solid red
Water leakage or spitting	Water tank not properly attached; Overfilled tank; Steamer not fully heated	Ensure tank is clicked into place; Do not overfill; Wait for indicator light to turn solid red
Steamer not turning on	Not plugged in; Power outlet issue	Check power connection; Try a different outlet

If the issue persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Brand	Newbealer
Model Number	NB316A
Power	1200W
Voltage	110-125V (US Only)
Water Tank Capacity	180ml (6 ounces)
Heat-up Time	Approx. 20 seconds
Continuous Steam Time	Approx. 10 minutes
Item Weight	1.5 lbs
Product Dimensions	6.1"L x 3.5"W x 3.5"H (folded)

INCLUDED ACCESSORIES

Your Newbealer Steamer comes with the following accessories:



Newbealer Foldable Handheld Steamer

- ✓ Fabric Brush
- ✓ Heat-resistant Glove
- ✓ Long 8 ft. Cord
- ✓ User Manual
- ✓ Storage Box

The steamer package includes a fabric brush and a heat-resistant glove for enhanced usability.

- **Attachable Fabric Brush:** For use on thicker fabrics to improve steam penetration and remove lint.
- **Heat-Resistant Ironing Glove:** Provides protection for your hand while steaming.

IMPORTANT SAFETY INFORMATION

- **Voltage Compatibility:** This model is designed for use with **110-125V outlets only**. Do not attempt to use it with other voltage systems, as this may damage the appliance and pose a safety risk.

Specifications:

Voltage: AC 120V ~ 60Hz
Wattage: 1200W
Water Tank Capacity: 6oz (180ml)
Steam Output Time: 20 seconds
Steam Duration: 10-12 minutes
Net Weight: 1.54 lbs (700g)
Package Weight: 1.87 lbs
Line length: 8 ft
Dimension:
7.9*3.5*6.9 inch (when unfolded)
6.1*3.5*3.5 inch (when folded)



Crucial voltage warning: This steamer is for 110-125V outlets only.

- Always unplug the steamer when not in use and before cleaning.
- Do not immerse the steamer in water or other liquids.
- Keep out of reach of children.
- Use only as directed in this manual.

WARRANTY & SUPPORT

The Newbealer Steamer for Clothes comes with a 1-year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact Newbealer customer service through the platform where you purchased the item. Please have your order number and product model (NB316A) ready when contacting support.

An official User Manual (PDF) is available for download for more detailed information and diagrams.[Click here to download the PDF User Manual.](#)