

## ARCADE1UP PAC-D-10182

# Arcade1Up Super PAC-MAN Partycade Instruction Manual

Model: PAC-D-10182

## INTRODUCTION

The Arcade1Up Super PAC-MAN Partycade is a portable and versatile arcade machine designed for easy setup and enjoyment in various environments. It comes fully assembled and offers multiple display options, including tabletop, door hanging, and wall mounting. This Partycade features a 17-inch color LCD display and authentic controls, providing a classic arcade experience. It includes 10 iconic games: PAC-MAN, PAC-LAND, PAC-MANIA, DIG DUG, DIG DUG II, MAPPY, ROMPERS, ROLLING THUNDER, and NEW RALLY-X.



Figure 1: Front view of the Arcade1Up Super PAC-MAN Partycade.

## KEY FEATURES

- **10 Classic Games:** Enjoy a collection of 10 pre-installed arcade games, including Super PAC-MAN, PAC-MAN, PAC-LAND, MAPPY, DIG DUG, DIG DUG II, ROMPERS, ROLLING THUNDER, and NEW RALLY-X.
- **Light-Up Marquee:** Features an illuminated marquee displaying the "Super PAC-MAN" logo, enhancing the authentic arcade aesthetic.
- **Versatile Mounting Options:** Includes hardware for door hanging, wall mounting, and detachable legs for tabletop play, offering flexible placement.
- **Clear Deck Protector:** A durable clear protector covers the control panel, safeguarding the joystick and buttons from wear.
- **Compact Design:** With dimensions of 19.45" D x 14.49" W x 28.74" H, the Partycade is designed to fit easily in various spaces.



Figure 2: Close-up view of the control panel and light-up marquee.

## SETUP

### Mounting Options

The Arcade1Up Partycade offers three primary setup configurations:

- **Tabletop Play:** Attach the included detachable legs to the base of the unit for stable placement on any flat surface, such as a table or counter.
- **Door Hanging:** Utilize the provided door hanging hardware to suspend the Partycade securely over a standard door. Ensure the door frame is sturdy enough to support the unit's weight (approximately 32.4 pounds).
- **Wall Mounting:** For a more permanent installation, use the wall mounting hardware to affix the Partycade directly to a wall. It is crucial to mount the unit into wall studs for maximum stability and safety. Consult a professional if unsure about wall mounting procedures.



Figure 3: The Partycade unit displayed in a wall-mounted configuration.

## Initial Power-Up

Once the unit is securely placed or mounted, connect the power adapter to the designated port on the back of the Partycade and plug it into a standard electrical outlet. Locate the ON/OFF switch on the control panel and toggle it to the 'ON' position. The screen will illuminate, and the Arcade1Up logo will appear, indicating the unit is powering on.

## OPERATING INSTRUCTIONS

### Game Selection

Upon powering on, the main game selection menu will be displayed. Use the joystick to navigate through the list of 10 available games. Press the 'A' button (typically the primary action button) to select your desired game. To return to the main menu from a game, hold the 'A' button for 5 seconds.





Figure 4: The game selection screen showing the 10 available titles.

## Gameplay

Each game utilizes the joystick for directional input and the various buttons for actions such as firing, jumping, or special abilities. Refer to the on-screen instructions or in-game tutorials for specific controls for each title. The unit supports both single-player and two-player modes, depending on the selected game. Press the 'Player 1' or 'Player 2' buttons to initiate a game.

## Controls

The control panel features a classic arcade joystick for directional input and multiple action buttons. The layout is designed to replicate the feel of original arcade machines. A clear deck protector is installed over the control panel to ensure longevity and protect the components during intense gameplay.



Figure 5: Detailed view of the joystick and action buttons on the control panel.

## Volume Adjustment

The volume can be adjusted using the dedicated volume buttons located on the control panel, typically labeled 'VOL+' and 'VOL-'. Adjust the volume to a comfortable level for your playing environment.

## MAINTENANCE

To ensure the longevity and optimal performance of your Arcade1Up Partycade, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the exterior surfaces, including the screen and control panel. For stubborn smudges, a slightly damp cloth with mild, non-abrasive cleaner can be used, ensuring no liquid seeps into the unit.
- **Dust Prevention:** Keep the unit in a clean, dust-free environment. Regularly dust the vents and openings to prevent accumulation that could affect performance.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store it in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

### No Power / Screen Blank

If the unit does not power on or the screen remains blank after turning it on:

- Ensure the power adapter is securely plugged into both the unit and a working electrical outlet.
- Verify that the power outlet is active by testing it with another device.
- Check the ON/OFF switch on the control panel to ensure it is fully engaged.

### Joystick or Button Unresponsive

If the joystick or buttons are not responding correctly during gameplay:

- Restart the unit by turning it off and then on again.
- Ensure the control panel is clean and free of debris that might obstruct button movement.
- While rare, if a joystick feels loose, it may require tightening. This typically involves removing the clear deck protector and gently tightening the base of the joystick. If uncomfortable performing this, contact customer support.

### Game Freezes or Crashes

If a game freezes or the unit becomes unresponsive:

- Hold the 'Player 1' button for 5 seconds to reset the current game.
- If the issue persists, power cycle the unit by turning it off, waiting 10 seconds, and then turning it back on.

## SPECIFICATIONS




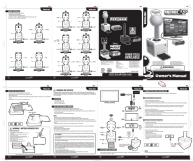

Feature	Detail
Brand	ARCADE1UP
Model Number	PAC-D-10182
Platform	Not Machine Specific
Controller Type	Joystick, Button Control
Screen Size	17 Inches
Hardware Interface	Lightning
Product Dimensions (L x W x H)	19.45 x 14.49 x 28.74 inches
Item Weight	32.4 pounds
Material	Plastic
Display Type	LCD

## WARRANTY AND SUPPORT


For detailed warranty information, product registration, or technical support, please refer to the official Arcade1Up website or contact their customer service department. Keep your proof of purchase for any warranty claims. For additional resources and frequently asked questions, visit the [ARCADE1UP Store on Amazon](#).

© 2024 ARCADE1UP. All rights reserved. PAC-MAN™ & ©1980 BANDAI NAMCO Entertainment Inc.

Related Documents - PAC-D-10182

	<p><a href="#">Arcade1Up Deluxe Class of 1981 Owner's Manual</a></p> <p>Owner's manual for the Arcade1Up Deluxe Class of 1981 arcade machine, including safety precautions, installation instructions, specifications, game controls, and troubleshooting.</p>
	<p><a href="#">Arcade1Up Pac-Man Deluxe Owner's Manual - Safety, Setup, and Troubleshooting</a></p> <p>This official owner's manual provides essential safety instructions, installation guidance, game control details, and troubleshooting tips for the Arcade1Up Pac-Man Deluxe arcade machine.</p>
	<p><a href="#">Arcade1Up Class of 81 Owner's Manual - MSP-A-10171</a></p> <p>Comprehensive owner's manual for the Arcade1Up Class of 81 (MSP-A-10171) featuring safety instructions, troubleshooting, game settings, and control layouts for classic arcade games.</p>
	<p><a href="#">Arcade1Up Wireless Giant Joystick with HDMI Game Console - Owner's Manual</a></p> <p>User manual for the Arcade1Up Wireless Giant Joystick with HDMI Game Console, detailing setup, battery installation, controller connection, game controls, and safety information for classic arcade games.</p>
	<p><a href="#">Arcade1Up Counter-Cade Owners Manual - Safety, Controls, and Troubleshooting</a></p> <p>Comprehensive owners manual for the Arcade1Up Counter-Cade, detailing safety instructions, installation, game controls for Pac-Man, Space Invaders, Dig Dug, and more, plus troubleshooting tips.</p>



<div><div>Do-It-Yourself Arcade Controls</div><div></div><div><h3>JammASD</h3><p>The JammASD is a small, single-board computer that can be used to control arcade games. It is designed to be used with the Batocera emulation system. The JammASD is a small, single-board computer that can be used to control arcade games. It is designed to be used with the Batocera emulation system.</p><h3>JammASD and Emulation Station</h3><p>The JammASD is a small, single-board computer that can be used to control arcade games. It is designed to be used with the Batocera emulation system.</p><p>1. Connect the JammASD to the Batocera system.</p><p>2. Connect the JammASD to the Batocera system.</p><p>3. Connect the JammASD to the Batocera system.</p><p>4. Connect the JammASD to the Batocera system.</p><p>5. Connect the JammASD to the Batocera system.</p><p>6. Connect the JammASD to the Batocera system.</p><p>7. Connect the JammASD to the Batocera system.</p><p>8. Connect the JammASD to the Batocera system.</p><p>9. Connect the JammASD to the Batocera system.</p><p>10. Connect the JammASD to the Batocera system.</p></div></div>	<div><h2>DIY Arcade Controls Guide for Batocera</h2><p>A comprehensive guide on how to connect and configure DIY arcade controls, including JammASD and Ultimarc encoders, for use with the Batocera emulation system.</p></div>
--	--