

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [IRIS OHYAMA](#) /
- › [IRIS OHYAMA IAW-T504 5.0kg Top Load Washing Machine User Manual](#)

## IRIS OHYAMA IAW-T504

# IRIS OHYAMA IAW-T504 5.0kg Top Load Washing Machine User Manual

Model: IAW-T504 | Brand: IRIS OHYAMA

[Introduction](#) [Safety](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#)  
[Specifications](#) [Warranty](#)

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your IRIS OHYAMA IAW-T504 5.0kg Top Load Washing Machine. Please read this manual thoroughly before use and keep it for future reference. This compact washing machine is designed for 1-2 person households, offering a 5.0kg capacity with a space-saving design and convenient features like Room Dry Mode and a Reservation Timer.



Image 1.1: Top-down view of the IRIS OHYAMA IAW-T504 washing machine.

## 2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is for household use only.

- Ensure the power supply voltage matches the appliance's rating.
- Do not operate the washing machine if the power cord or plug is damaged.
- Keep children away from the appliance during operation.
- Do not insert hands into the spinning tub.
- Always unplug the appliance before cleaning or performing maintenance.
- Ensure proper installation and leveling to prevent vibration and noise.

## 3. PRODUCT OVERVIEW

The IAW-T504 washing machine features a compact design with enhanced capacity, making it suitable for smaller living spaces. Its low height ensures easy loading and unloading of laundry.

### Key Features:

- **5.0kg Capacity:** Ideal for 1-2 person households.
- **Compact Design:** Main unit height approximately 83.5cm for easy access and space utilization.
- **Room Dry Mode:** Reduces drying time and helps prevent odors from damp laundry.
- **Reservation Timer:** Schedule laundry completion from 1 to 24 hours in advance.
- **6 Washing Courses:** Standard, Soak, Quick, Bulky, Blanket, Dry.
- **4 Water Level Settings:** Manual selection for efficient water usage (47L, 34L, 22L, 13L).
- **Durable Stainless Steel Tub:** Resistant to dirt and easy to clean.
- **Child Lock:** Prevents accidental opening of the lid during operation.
- **Simple Operation Panel:** Intuitive push-button controls.

**IRIS OHYAMA**

メーカー保証 1年

1・2人暮らし向け  
コンパクトサイズ

5kg

**全自動洗濯機** IAW-T504-W・B

少量洗いOK

部屋干しモード

タイマー

Image 3.1: Front view of the IRIS OHYAMA IAW-T504 washing machine, highlighting its 5kg capacity and compact size.



Image 3.2: Close-up view of the detergent, bleach, and softener inlets on the washing machine.

## 4. SETUP AND INSTALLATION

Proper installation is crucial for the washing machine's performance and longevity. Please ensure sufficient space and a stable surface.

### 4.1 Space Requirements

- Allow at least 15cm of space above the washing machine.
- Maintain at least 1cm of space behind the unit.
- Ensure at least 1cm of space on the left or right side (depending on hose connection).
- For product dimensions, allow an additional 10cm for width, depth, and height when considering doorways, entrances, and stairs for transport.

### 4.2 Leveling

The washing machine is equipped with adjustable feet to ensure it is level and stable. Only the front right foot is adjustable. Adjust it to prevent wobbling and reduce noise during operation.

# 商品寸法+10cmの幅が必要です。

## 《搬入における確認項目》

 
※段差やコーナー箇所があり、直線ではない場合、+10cm以上の幅が必要となります。  
 ※手すり・照明・装飾物などがある場合、そこから+10cmの幅が必要となります。

### 《商品の寸法》




### 《玄関の高さ》

商品寸法+10cm

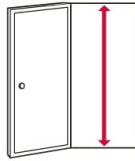


### 《玄関の幅》

 商品寸法+10cm

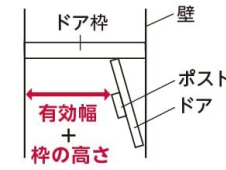


### 《廊下の幅》

 商品寸法+10cm

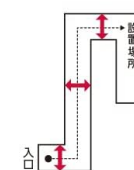


### 《エレベータの幅》

 商品寸法+10cm

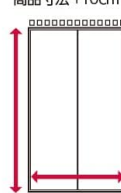


### 《階段の幅》

 商品寸法+10cm



## 《設置における確認項目》

 ・必要なスペースは商品によって異なるため、詳細はメーカーページなどでご確認ください。

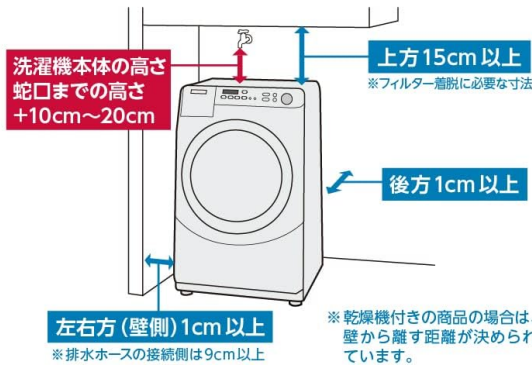

## 防水パンの有無と内側サイズをチェック



※排水エルボ・足台の有無と排水口位置によって、追加費用がかかることがあります。

Image 4.1: Diagram illustrating required installation clearances and product dimensions for transport.

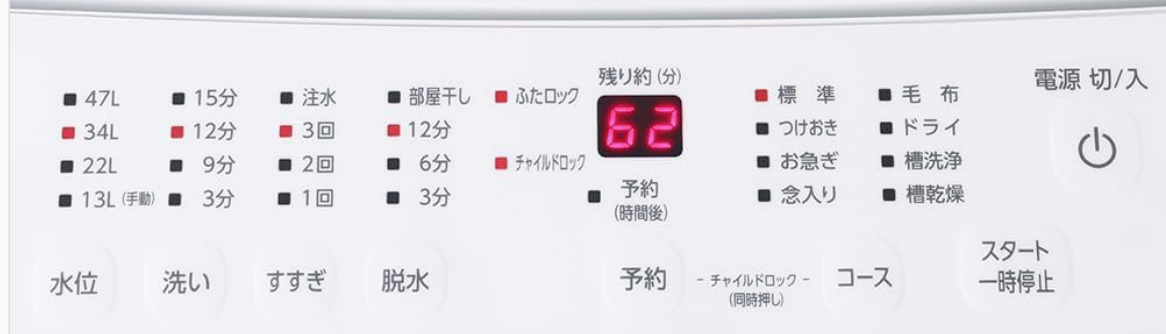 


Image 4.2: Detailed view of the washing machine dimensions (54cm W x 53.5cm D x 83.5cm H) and the adjustable foot for stability.

### 4.3 Drain Hose Connection

The drain hose supports two directions (left or right) for flexible installation. The hose length is approximately 80cm for the right side and 40cm for the left side. Ensure the drain hose is properly connected and positioned to allow for smooth water drainage.

# 見やすい操作パネル



## 排水ホース2方向対応

左・右どちらからでも排水可能。  
部屋の形状を問わず使えるので、引っ越し時も安心。

- 右…ホース約80cm
- 左…ホース約40cm

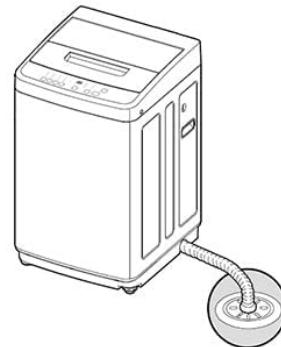 


Image 4.3: Illustration of the drain hose supporting connection from either the left or right side of the machine.

## 5. OPERATING INSTRUCTIONS

The IAW-T504 features a user-friendly control panel for easy operation.

### 5.1 Control Panel Overview

The control panel allows you to select water levels, washing courses, and special functions.



Image 5.1: Close-up of the washing machine's control panel with various buttons and indicators.

## 5.2 Washing Courses

Select the appropriate course based on your laundry type and soil level:

- **Standard:** For everyday laundry.
- **Soak:** For stubborn dirt and odors.
- **Quick:** For lightly soiled clothes, shortens wash time with one rinse.
- **Bulky:** For washing thick clothing items.
- **Blanket:** Suitable for blankets up to 2kg, ensuring a clean finish.
- **Dry:** Gently washes delicate garments.

## 選べる洗濯コース6種類

<b>標準</b> 普段のお洗濯に	<b>つけおき</b> 頑固な汚れ・ ニオイが気になるときに	<b>お急ぎ</b> 軽い汚れの衣類のとき 時間を短縮
<b>念入り</b> 厚手の衣類を 洗濯するときに	<b>毛布</b> 毛布対応などの大物も すっきりキレイに	<b>ドライ</b> デリケートな衣類を やさしく洗濯

Image 5.2: Overview of the six available washing courses.

### 5.3 Water Level Selection

Choose from four water levels (47L, 34L, 22L, 13L) to match the amount of laundry, optimizing water usage. The 13L setting is manual and fixed regardless of laundry weight, while 22L and above automatically adjust based on laundry volume.

## 最低水位13Lで少量洗い

ちょっと洗い  
したい時も  
無駄なく節水

水位4段階

47L

34L

22L

13L<sup>\*</sup>

※13Lは手動のため洗濯量に関係なく水位が固定となります。  
(22L以上は洗濯量に合わせて自動水位調整を行います。)

Image 5.3: Display showing the four selectable water levels.

### 5.4 Room Dry Mode

This mode uses wind to dry clothes, shortening drying time and preventing unpleasant odors from damp laundry. It does not use a heater.



Image 5.4: Illustration of the Room Dry Mode, showing clothes drying with wind.

### 5.5 Reservation Timer

Set the desired laundry completion time from 1 to 24 hours in advance. This allows you to schedule laundry to finish when you wake up or return home.



Image 5.5: Diagram explaining the reservation timer feature, allowing scheduling from 1 to 24 hours.

### 5.6 Child Lock

To activate the child lock, press the 'Wash' and 'Rinse' buttons simultaneously. This locks the lid, preventing it from being opened while the machine is powered on, ensuring safety.



Image 5.6: Illustration showing how to activate the child lock by pressing two buttons simultaneously.

## 6. MAINTENANCE

Regular maintenance ensures optimal performance and hygiene of your washing machine.

## 6.1 Always Clean Washing Tub

The durable stainless steel tub is designed to resist dirt. Utilize the following courses for tub maintenance:

- **Tub Wash Course:** Easily cleans invisible dirt inside the tub.
- **Tub Dry Course:** Run this course after washing to prevent mold growth.



Image 6.1: Features for maintaining a clean washing tub, including the stainless steel tub and removable lint filter.

## 6.2 Lint Filter

The washing machine includes a removable lint filter. Regularly clean the lint filter to ensure efficient operation and prevent lint from redepositing on clothes.

## 7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common troubleshooting tips. For more complex problems, contact customer support.

- **Machine does not start:** Check if the power plug is securely inserted and if the power button is pressed. Ensure the lid is properly closed.
- **Excessive vibration/noise:** Verify that the washing machine is level. Adjust the adjustable feet if necessary. Ensure laundry is evenly distributed in the tub.
- **Water does not drain:** Check if the drain hose is kinked or blocked. Ensure the drain hose is positioned correctly.
- **Water leakage:** Inspect all hose connections for tightness. Check for any cracks or damage to hoses.
- **Laundry not clean:** Ensure you are using the correct amount of detergent and selecting the appropriate washing course for the load.

## 8. SPECIFICATIONS

Feature	Specification
Brand	IRIS OHYAMA
Model	IAW-T504

Feature	Specification
Capacity (Wash/Dehydration)	5.0 kg
Product Dimensions (D x W x H)	53.5 x 54 x 83.5 cm
Product Weight	28 kg
Rated Voltage	AC100V
Power Frequency	50Hz / 60Hz
Rated Power Consumption (50Hz/60Hz)	330W / 360W
Operating Noise (Wash/Dehydration)	Approx. 36dB / Approx. 51dB
Water Level Settings	13L (manual), 22L, 34L, 47L
Standard Water Usage	92L
Waterproof Level	IPX4
Control Panel Type	Push button
Door Position	Top
Special Features	Start reservation timer, Child lock, Drum clean, Remaining time display

標準洗濯 / 脱水容量	5kg
水位	13~47L
標準使用水量	92L
標準水量	47L
目安時間	約45~52分(標準コースの場合)
定格電圧	AC100V
定格電源周波数	50Hz / 60Hz
定格消費電力 (50Hz/60Hz)	330W / 360W
防水レベル	IPX4
質量	28kg
運転音	洗濯 約36dB/脱水 約51dB

Image 8.1: Table summarizing the technical specifications of the washing machine.

## 9. WARRANTY AND SUPPORT

Your IRIS OHYAMA IAW-T504 washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical support, service, or spare parts, please contact IRIS OHYAMA customer service.

For more information, visit the official [IRIS OHYAMA Store on Amazon.co.jp](#).

