

[Manuals.plus](#) /

› [NOLYTH](#) /

› NOLYTH External DVD/CD Drive User Manual

NOLYTH 711731249216

NOLYTH External DVD/CD Drive User Manual

Model: 711731249216

1. INTRODUCTION

Thank you for choosing the NOLYTH External DVD/CD Drive. This portable optical drive offers versatile functionality for reading and writing CDs and DVDs, along with additional connectivity options. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device.



The NOLYTH External DVD/CD Drive, featuring a sleek design and multiple connectivity options.

2. KEY FEATURES

- **5-in-1 Connectivity:** Equipped with dual USB 3.0 and Type-C interfaces, independent SD/TF card slots, and 2 additional USB 3.0 ports. Note: SD and TF card slots cannot be used simultaneously.
- **High-Speed Data Transfer:** Utilizes advanced USB 3.0 technology for speeds up to 5 Gbps, ensuring fast data transfer and stable performance. Backward compatible with USB 2.0 and USB 1.0.
- **Plug and Play:** No driver installation required. The device is automatically recognized by your operating system within seconds via USB 3.0 or Type-C connection.
- **Wide Compatibility:** Supports Windows 2000/2003/XP/7/8/10/11, Vista, and all versions of Mac OS (including MacBook Air/Pro). Supports various disc formats including CD-R, CD-RW, CD-ROM, DVD-R, DVD-RAM, DVD-RW. Not compatible with TVs, tablets, or car players.
- **Portable Design:** Features an original core for strong error correction, quiet operation, lightweight, and shock-resistant design. Compact for easy transport and includes a protective case.

- **RGB Lighting:** The external CD drive includes RGB lighting effects that change colors.

3. SETUP INSTRUCTIONS

1. Connect the Drive:

Connect the NOLYTH External DVD/CD Drive to your computer using either the USB 3.0 or Type-C cable. Ensure a secure connection to a powered USB port. The drive requires a 3-5V (1.3-2A) output from the computer's USB port for proper function.



Connect the drive using either USB 3.0 or Type-C.

2. Automatic Recognition:

The drive is plug-and-play. Your operating system (Windows, Mac OS, Linux) should automatically detect and install the necessary drivers within a few seconds. No manual driver installation is typically required.

3. Software for Playback (Windows 10/11):

For Windows 10 or newer operating systems, Microsoft no longer includes a default DVD media player. It is recommended to install a third-party media player (e.g., VLC Media Player) to play DVDs and CDs.

4. OPERATING INSTRUCTIONS

4.1 Inserting and Ejecting Discs

- **To Insert a Disc:** Gently press the eject button on the front of the drive. The disc tray will open. Place the disc label-side up into the tray. Gently push the tray back into the drive until it clicks.
- **To Eject a Disc:**
 - **Windows:** Open "This PC" or "My Computer," right-click on the DVD/CD drive icon, and select "Eject."
 - **Mac OS:** Drag the disc icon from your desktop to the Trash, or use the "Eject" command in the Finder menu. Alternatively, press the eject button on the drive.
 - **Physical Eject:** Press the eject button on the drive. If the drive is unresponsive, use the emergency eject hole (small pinhole) with a straightened paperclip to manually open the tray.

Hochleistung




Lärmreduzierung

Fehler Korrektur

Stoßfest

Schnelle Geschwindigkeit

	Maximum Speed	
	Read	Write
CD	24X	24X
DVD	8X	8X

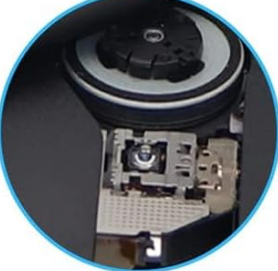

Inserting a disc into the NOLYTH drive.

4.2 Using SD/TF Card Slots and USB Ports

- **SD/TF Card Reader:** Insert your SD or TF card into the corresponding slot. The card will appear as a removable drive on your computer. Note: SD and TF card slots cannot be used simultaneously.
- **USB 3.0 Ports:** Use the two additional USB 3.0 ports to connect other USB devices such as flash drives, mice, or keyboards. These ports support high-speed data transfer.



Side view of the NOLYTH drive, illustrating the SD, TF, and USB 3.0 ports.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the drive. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Store them in cases to prevent scratches and dust accumulation. Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.
- **Storage:** When not in use, store the drive in its protective case in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Liquids:** Keep the drive away from water and other liquids to prevent damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drive not recognized by computer.	Insufficient power supply from USB port, loose connection, or driver issue.	• Ensure the USB port provides 3-5V (1.3-2A) output. Try a different USB port or a different computer. • Reconnect the USB cable securely. • Restart your computer. • For Windows 10/11, ensure a media player is installed.
Disc does not eject.	Software lock, power issue, or mechanical jam.	• Try ejecting through your operating system (right-click on drive icon and select "Eject"). • For Mac OS, use the "Eject" command or drag the disc icon to the Trash. • Use the emergency eject hole with a straightened paperclip.
Cannot play DVDs/CDs (Windows 10/11).	No default media player installed.	Install a third-party media player (e.g., VLC Media Player).
SD/TF cards not working simultaneously.	This is a design limitation.	Only one card slot (SD or TF) can be used at a time.

7. SPECIFICATIONS

Model Number	711731249216
Interface	USB 3.0, Type-C (backward compatible with USB 2.0 and USB 1.0)
Additional Ports	2 x USB 3.0, 1 x SD Card Slot, 1 x TF Card Slot (SD and TF cannot be used simultaneously)
Supported Formats (Read)	DVD-ROM, DVD-Video, CD-R/RW, CD-ROM/XA, CD-ROM, CD-EXTRA, CD-TEXT
Supported Media Types (Read/Write)	CD-ROM, CD-R, CD-RW, DVD-ROM, DVD-R, DVD-RW, DVD+RW, DVD+R, DVD+R DL, DVD-R DL, DVD RAM
Read Speed	CD-ROM: Max 24x, DVD-ROM: Max 8x, DVD-ROM (DL): Max 6x
Write Speed	CD-R: 24x, CD-RW: 8x, DVD±R: Max 8x, DVD±R DL: Max 4x, DVD-R ± 9: Max 2.4x
Rewrite Speed	DVD+RW: Max 4x, DVD-RW: Max 4x, CD-RW: Max 10x, DVD-RAM: Max 3x

Operating System Compatibility	Windows 2000/2003/XP/7/8/10/11, Vista, Mac OS (all versions), Linux
Hardware Platform	Laptop, Desktop PC
Special Features	Portable, RGB Lighting Effects
Dimensions (Approx.)	14.2cm (5.6in) x 14.9cm (5.9in) x 2cm (0.8in)



Approximate dimensions and port layout of the NOLYTH External DVD/CD Drive.

8. WARRANTY AND SUPPORT

NOLYTH provides a 60-day money-back guarantee and a 1-year quality warranty for this DVD drive. For any questions or technical assistance regarding your NOLYTH External DVD/CD Drive, please contact our customer support team:

- **Email:** biscontechuk@outlook.com
- **Support:** 24-hour customer service and lifetime free technical support are available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question