

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer Folding LED Camping Lantern Instruction Manual

Energizer 00039800115638

Energizer Folding LED Camping Lantern Instruction Manual

Model: 00039800115638

1. PRODUCT OVERVIEW

The Energizer Folding LED Camping Lantern is designed for versatile illumination in various outdoor and emergency situations. Its compact, portable design and multiple light modes make it suitable for camping, fishing, outdoor activities, and power outages.



Figure 1: Energizer Folding LED Camping Lantern (Pack of 4) in retail packaging.

Key Features:

- **Bright LED Light:** Up to 500 lumens on high mode for ample illumination.
- **3 Light Modes:** High, Low, and Night Light settings for varied needs.
- **Extended Runtime:** Up to 350 hours on low mode with Energizer Max D batteries.
- **Water Resistant:** IPX4 rating ensures durability against splashing water.
- **Folding Design:** Folds out for 360° area lighting or retracts for directional light.
- **Integrated Handle:** For easy carrying and portability.

2. SETUP AND BATTERY INSTALLATION

The Energizer Folding LED Camping Lantern requires 4 Energizer Max D batteries (not included) for operation. Follow

these steps to install the batteries:

1. Locate the battery compartment cover at the bottom of the lantern.
2. Twist the cover counter-clockwise to unlock and remove it.
3. Insert 4 D-size batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and twist clockwise to secure it.



The image shows the retail packaging for an Energizer lantern. The top half features a clear window revealing the red lantern, which has a black handle and control panel. The control panel includes a power button, a moon icon for low mode, and sun icons for high mode. To the left of the lantern, the text 'IPX4 WATER RESISTANT RÉSISTE À L'EAU' is displayed with water droplet icons. The Energizer logo is at the top left. To the right, a smaller image shows the lantern illuminated with a warm yellow light. The bottom half of the packaging is white with black text providing manufacturing details, safety warnings, and performance specifications in multiple languages. At the bottom left, there are icons for light output (100 and 500 lumens) and runtime (350h and 50h) for both low and high modes, along with an IPX4 waterproofing icon. A barcode and the product number 0 39800 01849 6 are at the bottom right.

Energizer

IPX4
WATER RESISTANT
RÉSISTE À L'EAU

Manufactured for/Fabriqu  pour/Fabricado para:
Energizer Brands, LLC, St. Louis, MO 63141.
Energizer Canada, Inc., Mississauga, Ontario L5N 6J5.
TM Used under lic./MC Usager lic.

Energizer, Energizer Bunny design, and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries.
Energizer, le dessin du lapin Energizer et certains dessins graphiques sont des marques de commerce de la soci t  Energizer Brands, LLC et de ses filiales connexes.
Energizer, el dise o del conejo de Energizer y ciertos dise os gr ficos son marcas comerciales de Energizer Brands, LLC y de sus subsidiarias.

*Endpoint determined at 1% of initial value.
*Tension finale de charge mesur e   1 % de la valeur initiale.
*Punto final determinado al 1% del valor inicial.

¹Light output measured from LED. Value is only applicable to the LED. Actual device light output may vary.
¹Le rendement lumineux est mesur    la DEL. La valeur s'applique uniquement   la DEL. Le rendement lumineux r el de l'appareil peut varier.
¹Salida de luz medida del LED. Este valor aplica solo al LED. La salida de luz real del dispositivo puede variar.

Results based on using 4 *Energizer MAX*® D alkaline batteries.
Les r sultats bas s sur l'utilisation de 4 *Energizer MAX*® D des piles alcalines.
Los resultados se basan en el uso de 4 pilas alcalinas D *Energizer MAX*®.

BATTERIES NOT INCLUDED
PILES NON INCLUSES
PILAS NO INCLUIDAS

Questions/Questions/Preguntas?
www.energizer.com
www.energizer.ca

FL457
FL452WRBP
UPN -145321
 2018 Energizer.

Light made in China
Lampe fabriqu es en Chine
Linterna fabricadas en China

LOW MODE/MODE FAIBLE/MODO BAJO
HIGH MODE/MODE INTENSE/MODO ALTO

UPN -145322

0 39800 01849 6

Figure 2: Battery compartment at the base of the lantern.

Your browser does not support the video tag.

Video 1: Demonstration of battery installation and basic operation of the Energizer All Weather LED Lantern. This video shows how to open the battery compartment, insert D-cell batteries, and close the cover securely. It also briefly demonstrates the light modes.

3. OPERATING INSTRUCTIONS

Power On/Off and Mode Selection:

The lantern features a single button for power control and cycling through light modes.

- **First Press:** Activates High mode (500 lumens).
- **Second Press:** Switches to Low mode (lower brightness, extended runtime).
- **Third Press:** Activates Night Light mode (amber glow for minimal illumination).
- **Fourth Press:** Turns the lantern off.



Figure 3: Lantern operating in Night Light mode.

Folding Mechanism:

The lantern's unique folding design allows for adjustable light distribution.

- **360° Area Lighting:** Extend the lantern fully to illuminate a wide area, such as a room or campsite.
- **Directional Lighting:** Retract the lantern partially to focus light in a specific direction.



Figure 4: Lantern extended for 360° illumination.

Your browser does not support the video tag.

Video 2: Demonstration of the compact folding design of the Energizer LED Camping Lantern. This video highlights how the lantern can be extended for full area lighting and retracted for portability, showcasing its versatility.

4. MAINTENANCE

Battery Replacement:

When the light output becomes dim or the lantern stops functioning, it is time to replace the batteries. Refer to the "Setup

and Battery Installation" section for detailed instructions.

Cleaning:

Wipe the exterior of the lantern with a soft, damp cloth. Do not use abrasive cleaners or immerse the lantern in water.

Storage:

If storing the lantern for an extended period, remove the batteries to prevent leakage and damage to the device.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lantern does not turn on.	Dead or incorrectly installed batteries.	Replace batteries with new D-size batteries, ensuring correct polarity.
Light is dim.	Low battery power.	Replace batteries with new D-size batteries.
Cannot switch light modes.	Battery power is too low.	Replace batteries with new D-size batteries.

6. SPECIFICATIONS

- **Brand:** Energizer
- **Model Number:** 00039800115638
- **Light Source:** LED
- **Brightness:** Up to 500 lumens (High Mode)
- **Light Modes:** High, Low, Night Light
- **Runtime:** Up to 350 hours (Low Mode)
- **Battery Type:** 4 x D-size batteries (not included)
- **Water Resistance:** IPX4 (splash resistant)
- **Material:** Metal, Plastic
- **Item Dimensions (LxWxH):** 4.61 x 3.31 x 7.68 inches
- **Item Weight:** 4.8 Pounds
- **Country of Origin:** China

7. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the packaging or contact Energizer customer service directly. Keep your purchase receipt for warranty claims.

Customer Service: Please visit the official Energizer website for contact details and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question