

[Manuals.plus](#) /

› [VBTER](#) /

› VBTER WBT-V8 FRS Radio Instruction Manual

VBTER WBT-V8

VBTER WBT-V8 FRS Radio Instruction Manual

Model: WBT-V8

1. INTRODUCTION

The VBTER WBT-V8 FRS Radio is a portable two-way radio designed for reliable communication. It operates on 16 preset, license-free FRS channels, making it suitable for various personal and professional applications. This manual provides detailed instructions for the proper setup, operation, and maintenance of your WBT-V8 radio.

2. PACKAGE CONTENTS

Upon opening your VBTER WBT-V8 FRS Radio package, please verify that all the following items are included:

- 4 x WBT-V8 Walkie Talkies
- 4 x Li-ion Battery Packs
- 4 x Desk Chargers
- 4 x Back Clips
- 4 x Earpieces
- 4 x USB Cables
- 2 x User's Manuals



Figure 2.1: Included items in the VBTER WBT-V8 FRS Radio package.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your WBT-V8 FRS Radio:



Figure 3.1: Front, back, and side views of the WBT-V8 FRS Radio with labeled components.

- **Antenna:** For transmitting and receiving signals.
- **Power Switch/Volume Knob:** Rotate to turn the radio on/off and adjust volume.
- **Channel Switch:** Rotate to select one of the 16 available channels.
- **PTT (Push-to-Talk) Button:** Press and hold to transmit, release to receive.
- **Moni (Monitor) Button:** Press to temporarily disable squelch and listen for weak signals.
- **SP/MIC Jacks:** For connecting external earpieces or microphones.
- **USB Charging Port:** For direct USB charging.
- **Belt Clip:** For attaching the radio to clothing or a belt.
- **Lanyard Buckle:** For attaching a lanyard.

3.1. Dimensions

The WBT-V8 radio features a compact design for portability.



Figure 3.2: WBT-V8 FRS Radio dimensions compared to a smartphone.

4. SETUP

4.1. Battery Installation

Before initial use, install the provided Li-ion battery pack into the radio.

1. Ensure the radio is powered off.
2. Locate the battery compartment latch on the back of the radio.
3. Push the latch to release and open the battery cover.
4. Insert the Li-ion battery pack, ensuring the contacts align correctly.
5. Close the battery cover and ensure the latch clicks into place.



Figure 4.1: Battery installation process.

4.2. Charging the Battery

The WBT-V8 radio offers multiple charging options:

- **USB Charging:** Connect the micro USB cable to the radio's USB charging port and to a power source (PC, car charger, or mobile phone charger).
- **Desk Charger:** Place the radio with the battery installed into the charging dock, or charge the battery alone in the dock.

A full charge typically takes approximately 3 hours. The radio provides 8-12 hours of transmission working time and a standby time of 5-7 days.

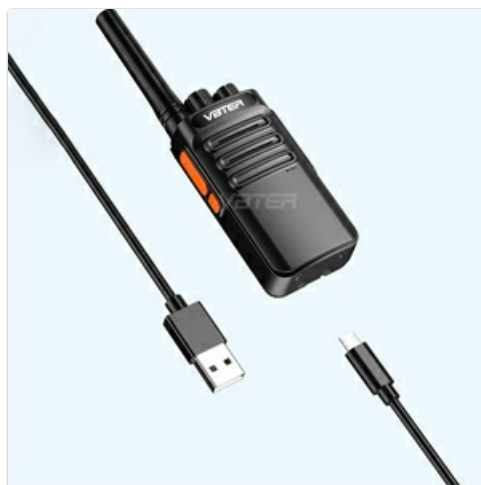


Figure 4.2: USB charging method for the WBT-V8 FRS Radio.

5. OPERATING INSTRUCTIONS

The WBT-V8 FRS Radio is designed for straightforward operation.

5.1. Power On/Off and Volume Adjustment

1. To power on the radio, rotate the Power Switch/Volume Knob clockwise until you hear a click.
2. Continue rotating the knob clockwise to increase the volume, or counter-clockwise to decrease it.
3. To power off, rotate the knob counter-clockwise until it clicks off.

5.2. Channel Selection

The WBT-V8 has 16 preset channels. To communicate with another radio, both devices must be set to the same channel and CTCSS/DCS code (if applicable).

1. Rotate the Channel Switch to select the desired channel (1-16).
2. The radio will announce the selected channel number.

5.3. Transmitting and Receiving

1. To transmit, press and hold the PTT (Push-to-Talk) button. Speak clearly into the microphone.
2. Release the PTT button to stop transmitting and return to receive mode.
3. When receiving a signal, the radio will automatically output the audio.

5.4. Squelch Function

The squelch function automatically mutes weak signals and background noise, ensuring clearer communication. The WBT-V8 features an automatic squelch system.

- To temporarily disable squelch and listen for very weak signals, press and hold the Moni (Monitor) button.
- Release the Moni button to re-enable squelch.

5.5. VOX Function (Voice Operated Exchange)

The VOX function allows for hands-free operation. When activated, the radio will automatically transmit when it detects your voice, without needing to press the PTT button. Refer to the specific user manual for detailed instructions on activating and adjusting VOX sensitivity, as this may require programming.

6. RANGE INFORMATION

The effective communication range of the WBT-V8 FRS Radio varies depending on environmental conditions:

- **Urban District or City Downtown:** Approximately 0.5-1.5 miles.
- **Suburban District or Open Area:** Approximately 1-3 miles.

Actual range is influenced by terrain, obstacles, electromagnetic interference, and weather conditions. Fewer obstacles generally result in longer communication distances.

7. APPLICATIONS AND USAGE SCENARIOS

The portable and durable design of the WBT-V8 FRS Radio makes it suitable for a wide range of applications:

- Hotel Management
- Restaurant Kitchens
- Outdoor Mountain Climbing
- Construction Sites
- Factory Warehouses
- Cruise Ships

- Supermarkets
- School Events
- Camping
- Biking and Hiking

Figure 7.1: Examples of suitable environments for the WBT-V8 FRS Radio.

8. MAINTENANCE

To ensure the longevity and optimal performance of your WBT-V8 FRS Radio, follow these maintenance guidelines:

- Keep the radio clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- Do not expose the radio to extreme temperatures, direct sunlight for prolonged periods, or excessive moisture. The radio is not water resistant.
- Store the radio and its accessories in a dry, cool place when not in use.
- Ensure the battery contacts are clean and free of debris.

9. TROUBLESHOOTING

If you encounter issues with your WBT-V8 FRS Radio, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Radio does not power on	Low or depleted battery; Incorrect battery installation	Charge the battery; Reinstall the battery correctly
Cannot transmit or receive	Incorrect channel; Out of range; Low battery	Verify both radios are on the same channel; Move closer to the other radio; Charge the battery
Static or unclear audio	Weak signal; Interference; Volume too low	Move to an open area; Adjust volume; Check for sources of interference
Short communication range	Obstacles (buildings, hills); Low battery; Environmental factors	Move to an area with fewer obstructions; Ensure battery is fully charged

If the problem persists after trying these steps, please contact customer support.

10. SPECIFICATIONS

Key technical specifications for the VBTER WBT-V8 FRS Radio:

Feature	Specification
Brand	VBTER
Model	WBT-V8
Color	Black

Feature	Specification
Number of Channels	16
Frequency Range	UHF
Talking Range Maximum	3 Miles
Voltage	3.7 Volts
Water Resistance Level	Not Water Resistant
Product Dimensions (D x W x H)	1.3" x 2.36" x 4.53"
Number of Batteries	4 Lithium Ion batteries required (included)
Battery Average Life	12 Hours (transmission working time)
Impedance	50 Ohms

11. PRODUCT VIDEO

Watch the official product video for a visual guide to the VBTER WBT-V8 FRS Radio's features and capabilities.

Your browser does not support the video tag.

Video 11.1: Official product video demonstrating the features and usage of the VBTER WBT-V8 FRS Radio, including battery capacity, range, charging methods, sound quality, and compact size.

12. WARRANTY AND SUPPORT

VBTER provides comprehensive support for its products:

- **Money-Back Guarantee:** 30-day money-back guarantee.
- **Warranty:** 12 months warranty.
- **Customer Support:** 24x7 Email Support.

For any assistance or inquiries, please contact VBTER customer support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09TSWDQVM>

More documents and user manuals: <https://manuals.plus/>