

[Manuals.plus](#) /

› [ROMSTO](#) /

› ROMSTO Mini Bag Sealer Instruction Manual

## ROMSTO DM-BS-01

# ROMSTO Mini Bag Sealer Instruction Manual

Model: DM-BS-01

## PRODUCT OVERVIEW

---

The ROMSTO Mini Bag Sealer is a versatile 2-in-1 handheld device designed for sealing and cutting plastic bags, helping to preserve food freshness and reduce waste. Its compact and portable design makes it ideal for use at home or on the go.




Image: The ROMSTO Mini Bag Sealer in green, shown with two AA batteries, highlighting its compact size and included power source.

## KEY FEATURES

---

- **2-in-1 Functionality:** Features both a heat sealer for airtight sealing and a built-in cutter for opening bags.
- **No Preheating Required:** Advanced heating film technology allows for instant sealing without waiting.
- **Mini-sized & Portable:** Compact design (3.1"L x 1.7"W x 1.6"H) with a lanyard and magnetic base for easy storage and portability.
- **Food Preservation:** Helps keep snacks and food fresh by creating a tight seal, preventing spoilage and moisture ingress.
- **Wide Compatibility:** Suitable for various plastic bags, including PP, PE, and PVC bags with a thickness of no more than 0.3mm. Recommended for coated aluminum foil bags.
- **Batteries Included:** Comes with 2 AA batteries for immediate use.

# SIMPLE DESIGN

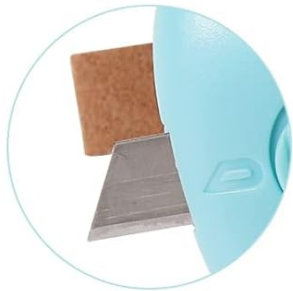

## Opening bags

Sharp small blade can cut most thin bags, rebound safely



## Magnet&Lanyard

You can hang it anywhere, such as on refrigerator hooks, snack baskets, kitchen utensils and so on



## Sealing bags

Better heating panel which can seal well and prevent leakage



Image: A visual breakdown of the sealer's simple design, highlighting its bag opening blade, magnetic base, lanyard, and efficient heating panel for sealing.

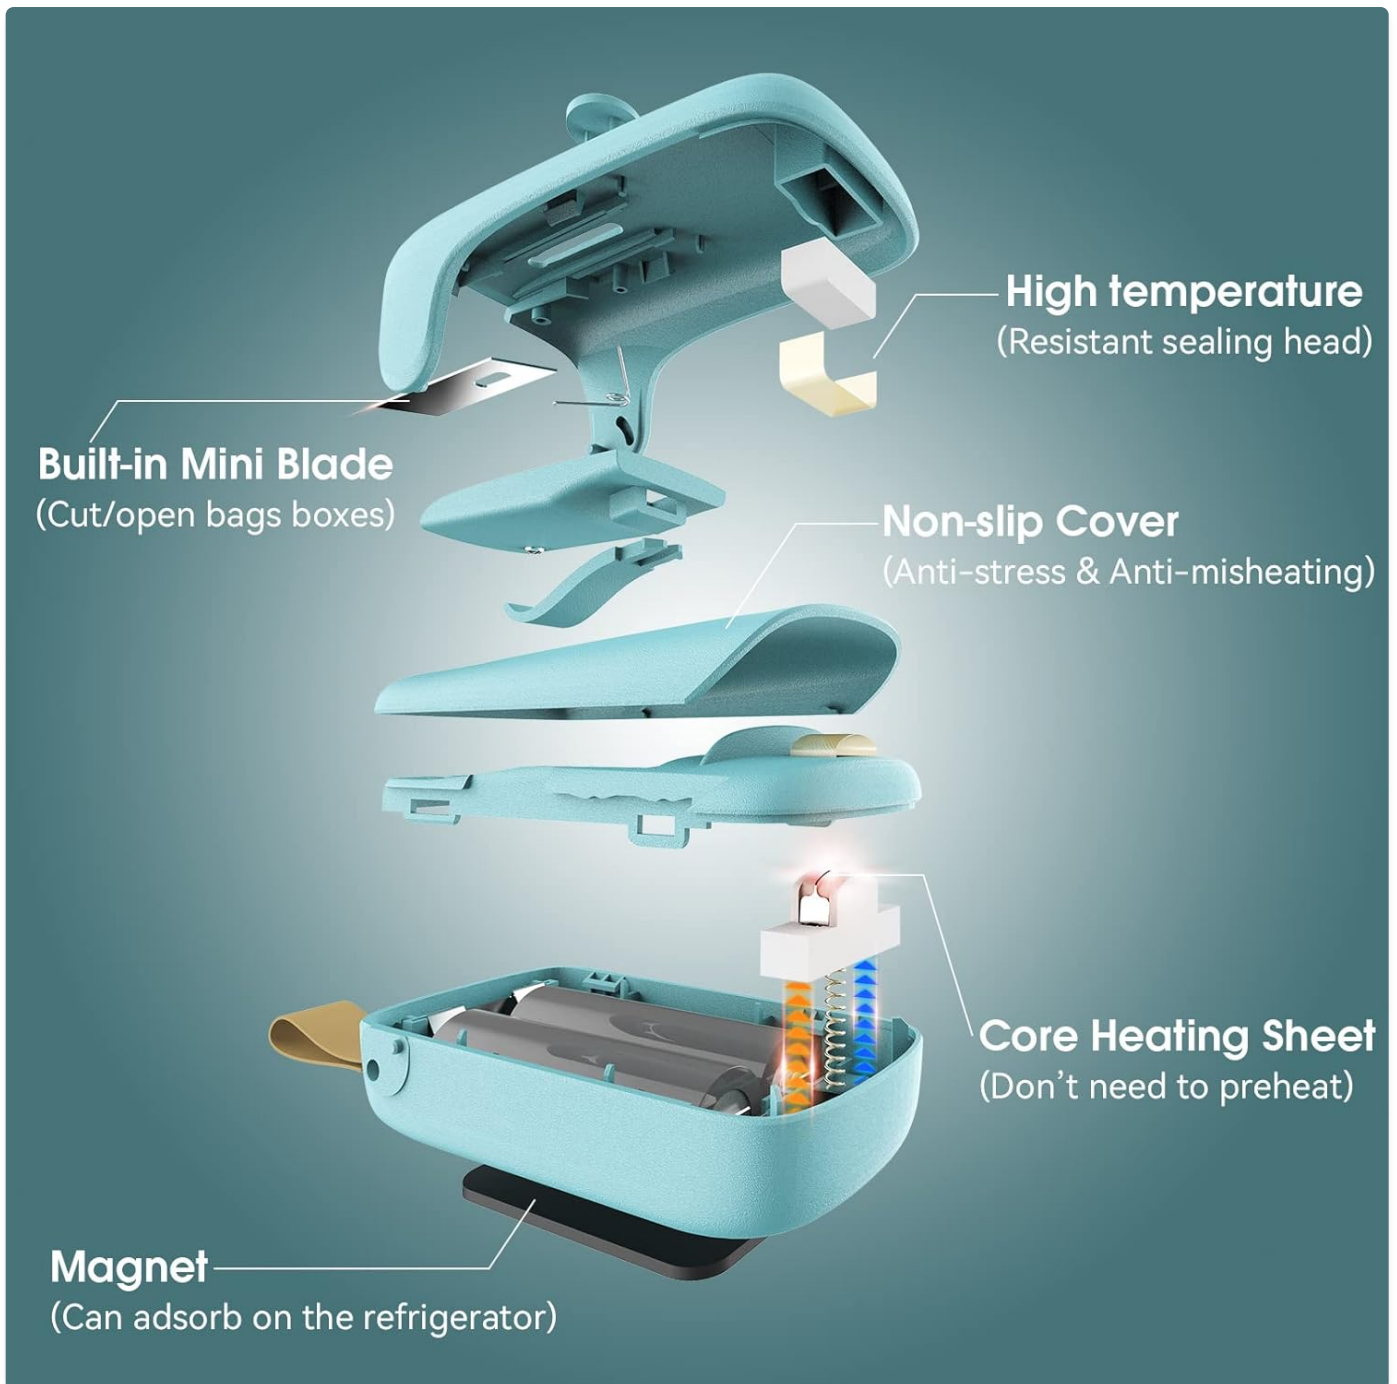


Image: An exploded diagram illustrating the internal components of the bag sealer, such as the high-temperature resistant sealing head, non-slip cover, core heating sheet, and magnet.

## SETUP

---

### Battery Installation

The ROMSTO Mini Bag Sealer requires 2 AA batteries (included). Follow these steps to install them:

1. Locate the battery compartment cover on the bottom of the device.
2. Slide the cover open in the direction indicated by the arrow.
3. Insert 2 AA batteries, ensuring correct polarity (+ and - ends match the markings inside the compartment).
4. Slide the battery compartment cover back into place until it clicks securely.

# EASY TO INSTALL AND USE



## Cutting Method:

Push out the button to the top to cut the plastic bag. Please don't touch the blade with your hand directly.



## Sealing Method:

No need to preheat, clamp the bag mouth, slide it along the edge of the bag at a slow and constant speed for tightly seal.



Install the battery (2\*AA).[Batteries included]

Image: A step-by-step visual guide demonstrating how to correctly install the 2 AA batteries into the bag sealer.

## OPERATING INSTRUCTIONS

### Sealing Bags

To seal a bag and preserve its contents:

1. Ensure the bag is clean and dry at the sealing point.
2. Place the bag opening between the sealing plates of the device.
3. Press the upper cover down firmly to activate the heating element.
4. While maintaining pressure, slowly and steadily slide the sealer along the edge of the bag to create a tight seal. A consistent speed is crucial for an effective seal.
5. Release the pressure once the seal is complete.

### Cutting Bags

To use the built-in cutter:

1. Push the slide button on the top of the device forward to expose the cutting blade.
2. Carefully slide the blade along the desired line to open the bag.
3. Retract the blade after use for safety.

**Note:** The device does not require preheating. The heating film instantly reaches sealing temperature upon pressing the upper cover.

## SUITABLE FOR VARIOUS SNACK BAGS

Coated aluminum foil bags are recommended,  
PP,PE,PVC bags with thickness less than 0.3mm.

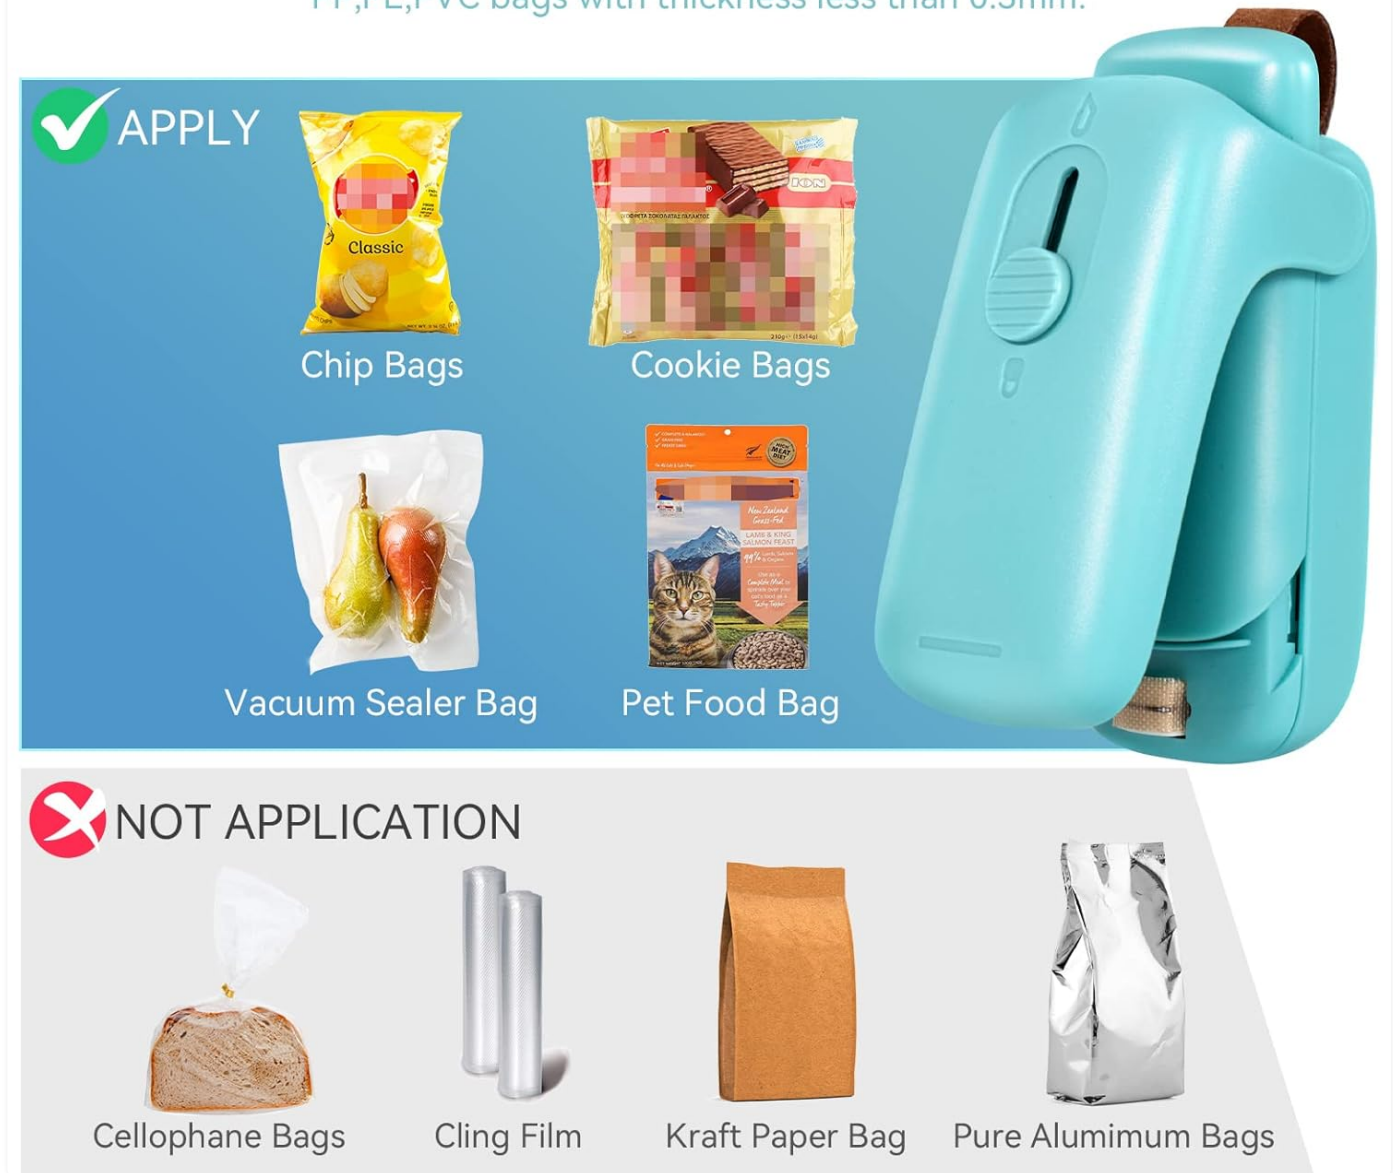


Image: A guide illustrating which types of snack bags are compatible with the sealer (e.g., chip bags, cookie bags, vacuum sealer bags) and which are not (e.g., cellophane, pure aluminum bags).

# EASY TO INSTALL AND USE



## Cutting Method:

Push out the button to the top to cut the plastic bag. Please don't touch the blade with your hand directly.



## Sealing Method:

No need to preheat, clamp the bag mouth, slide it along the edge of the bag at a slow and constant speed for tightly seal.



Install the battery (2\*AA).[Batteries included]

Image: Visual instructions for both the cutting and sealing functions of the device.

## MAINTENANCE

- **Cleaning:** Wipe the exterior of the sealer with a soft, dry cloth. Do not immerse the device in water or use abrasive cleaners.
- **Storage:** Store the sealer in a cool, dry place away from direct sunlight and high humidity. The magnetic base allows it to be conveniently stored on a refrigerator or other metal surfaces.
- **Battery Replacement:** Replace batteries when the sealing performance diminishes. Always use new AA batteries.

# EASY TO INSTALL AND USE



## Cutting Method:

Push out the button to the top to cut the plastic bag. Please don't touch the blade with your hand directly.



## Sealing Method:

No need to preheat, clamp the bag mouth, slide it along the edge of the bag at a slow and constant speed for tightly seal.



Install the battery (2\*AA).[Batteries included]

Image: The sealer in action, demonstrating both cutting and sealing, and showing the battery installation process.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Sealer not heating or sealing effectively.	Low or dead batteries; incorrect battery polarity; bag material too thick or unsuitable; insufficient pressure or speed during sealing.	Replace batteries with new ones, ensuring correct polarity. Check bag thickness (should be no more than 0.3mm) and material (PP, PE, PVC, coated aluminum foil recommended). Apply firm, consistent pressure and slide slowly.
Bag tears during sealing.	Too much pressure; sliding too slowly; bag material too thin.	Reduce pressure slightly. Increase sliding speed. Ensure bag material is appropriate thickness.
Cutter not working.	Blade not fully extended; dull blade (unlikely for new product).	Ensure the slide button is pushed completely forward to expose the blade.

## SPECIFICATIONS

---

**Brand:** ROMSTO

**Model:** DM-BS-01

**Material:** ABS

**Color:** Green

**Product Dimensions:** 3.1"L x 1.7"W x 1.6"H

**Item Weight:** 1.6 ounces

**Power Source:** Battery Powered (2 x AA batteries)

**Voltage:** 3 Volts

**Operation Mode:** Manual

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official ROMSTO website. Keep your purchase receipt as proof of purchase for any warranty claims.

