

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Metz](#) /
- > [Metz MTD1000Z 24-inch HD LED TV User Manual](#)

Metz MTD1000Z

Metz MTD1000Z 24-inch HD LED TV User Manual

Model: MTD1000Z | Brand: Metz

1. INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Metz MTD1000Z 24-inch HD LED TV. Please read this manual thoroughly before using the television and retain it for future reference. It covers setup, operation, maintenance, and troubleshooting.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following safety precautions:

- **Power Supply:** Connect the TV only to an AC power outlet with the correct voltage (240V AC). Do not overload power outlets.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block ventilation openings or place the TV on soft surfaces that may impede airflow. Maintain a minimum distance of 10 cm from walls.
- **Water and Moisture:** Do not expose the TV to rain, moisture, or excessive humidity. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat Sources:** Keep the TV away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Unplug the TV from the power outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface or mount it securely to a wall. Avoid placing it in direct sunlight or near strong electromagnetic fields.
- **Servicing:** Do not attempt to service the TV yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Metz MTD1000Z 24-inch HD LED TV Unit
- Remote Control
- TV Stand (Base and Screws)

- Power Cable
- AAA Batteries (2x) for Remote Control

4. SETUP

4.1 Attaching the Stand

To attach the stand to your TV:

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align the stand bases with the corresponding slots on the bottom of the TV.
3. Secure the stand bases using the provided screws. Ensure they are tightened firmly.



Image: Metz MTD1000Z 24-inch TV with dimensions, illustrating the TV's physical size and stand attachment points.

4.2 Wall Mounting (Optional)

If you choose to wall-mount your TV, ensure you use a VESA-compatible wall mount kit (not included) that supports the TV's weight and size. Follow the instructions provided with your wall mount kit. Remove the stand before wall mounting.

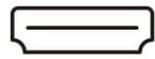 


Image: Metz MTD1000Z 24-inch TV wall-mounted in a kitchen environment.

4.3 Connecting Peripherals

Connect your external devices to the TV using the available ports:

- **Antenna/Cable:** Connect your terrestrial (DVB-T/T2), cable (DVB-C), or satellite (DVB-S/S2) antenna/cable to the RF input.
- **HDMI Devices:** Use an HDMI cable to connect devices like Blu-ray players, game consoles, or set-top boxes to the HDMI 1.41 port.
- **USB Devices:** Insert USB storage devices (e.g., flash drives) into the USB 2.01 port for media playback.
- **Power:** Connect the power cable to the TV's power input and then to a wall outlet.



HDMI 1.4*1



USB2.0*1



RF*2



Image: Rear panel of the Metz MTD1000Z TV, highlighting the HDMI, USB, and RF input ports.

4.4 Initial Power On and First Time Setup

After connecting all cables:

1. Press the Power button on the remote control or the TV.
2. Follow the on-screen instructions to select your preferred language, country/region, and perform an automatic channel scan for available TV channels.

5. OPERATING THE TV

5.1 Remote Control Overview

The remote control allows you to access all TV functions. Insert the two AAA batteries into the remote control, ensuring correct polarity.

- **Power Button:** Turns the TV on or off.
- **Number Buttons:** Select channels directly.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes channels sequentially.
- **Input/Source Button:** Switches between different input sources (TV, HDMI, USB).

- **Menu Button:** Accesses the main menu for settings.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Navigate through menus and confirm selections.

5.2 Input Source Selection

Press the 'Input' or 'Source' button on your remote control to display a list of available input sources. Use the navigation buttons to select the desired source (e.g., TV, HDMI1, USB) and press 'OK'.

5.3 Channel Tuning

If you need to rescan for channels or perform a manual scan:

1. Press the 'Menu' button on the remote.
2. Navigate to the 'Channel' or 'Setup' section.
3. Select 'Auto Scan' or 'Manual Scan' and follow the on-screen prompts. The TV supports DVB-T/T2/C/S/S2 and Analog tuners.

5.4 Picture and Sound Settings

Adjust picture and sound settings to your preference via the main menu:

- **Picture Settings:** Adjust Brightness, Contrast, Color, Sharpness, and select Picture Modes (e.g., Standard, Dynamic, Movie).
- **Sound Settings:** Adjust Volume, Bass, Treble, Balance, and select Sound Modes (e.g., Standard, Music, Movie). The TV features 2x3W stereo audio output.

6. MAINTENANCE

6.1 Cleaning the TV

Always unplug the TV before cleaning.

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (apply to cloth, not directly to screen).
- **Casing:** Wipe the casing with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.

6.2 Storage

If you plan to store the TV for an extended period, disconnect it from the power supply and all connected devices. Store it in a cool, dry place, preferably in its original packaging to protect it from dust and physical damage.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
No power	Power cable disconnected; Power outlet faulty	Check power cable connection; Try a different outlet
No picture, but sound is present	Incorrect input source selected; Loose video cable	Press 'Input' button to select correct source; Check HDMI/AV cable connections

Problem	Possible Cause	Solution
No sound, but picture is present	Volume muted or too low; Incorrect audio settings	Unmute or increase volume; Check audio output settings in menu
No signal	Antenna/cable not connected; Incorrect tuner selected	Check antenna connection; Ensure correct tuner mode (DVB-T/C/S) is selected
Remote control not working	Batteries depleted; Obstruction between remote and TV	Replace batteries; Remove any obstructions and point remote directly at TV sensor

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the Metz MTD1000Z 24-inch HD LED TV:

Feature	Specification
Model Name	MTD1000Z
Model Number	24MTD1000Z
Screen Size	24 inches (60 Centimeters)
Display Technology	DLED, LCD, LED, VA Panel
Resolution	1366 x 768 pixels (768p HD)
Refresh Rate	60 Hz
Aspect Ratio	16:9 (1.77:1)
Viewing Angle	178 Degrees
Tuner Technology	DVB-T/T2/C/S/S2/Analog
Audio Output Power	2 x 3W (Stereo)
HDMI Ports	1 (Side 1.41)
USB Ports	1 (Side 2.01)
Dimensions (with stand)	57 x 15.89 x 36.12 cm
Product Weight	2.4 kg
Power Consumption	21 Watts
Voltage	240 Volts (AC)
Remote Control Type	Infrared
Batteries Included	2 AAA batteries

Feature	Specification
Mounting Compatibility	Table mount (VESA compatibility not specified, refer to wall mount instructions)

For more detailed energy information, please refer to the EU EPREL database: <https://eprel.ec.europa.eu/qr/1071098>

9. WARRANTY AND SUPPORT

Your Metz MTD1000Z TV comes with a manufacturer's warranty. Please refer to the warranty card included in your package or contact your retailer for specific warranty terms and conditions. For technical support, product inquiries, or service requests, please contact Metz customer service or your local authorized service center. Contact details can typically be found on the Metz official website or through your retailer.

