

[Manuals.plus](#) /

› [COOLBUDS](#) /

› COOLBUDS True Wireless Earbuds User Manual

COOLBUDS CPETW655

COOLBUDS True Wireless Earbuds User Manual

Model: CPETW655

INTRODUCTION

Thank you for choosing COOLBUDS True Wireless Earbuds. These earbuds are designed to provide a seamless audio experience with advanced features such as Bluetooth 5.3 connectivity, intuitive touch controls, and compatibility with virtual assistants like Siri and Google Assistant. The included charging case ensures extended battery life, making them ideal for daily use, sports, and calls.



Image: COOLBUDS True Wireless Earbuds, showing both earbuds and the open charging case with indicator lights.

WHAT'S IN THE BOX

Your COOLBUDS True Wireless Earbuds package includes:

- True Wireless Earbuds (Left and Right)
- Wireless Charging Case
- USB Charging Cable (not explicitly listed but implied for charging case)
- User Manual (this document)

SETUP

1. Charging the Earbuds and Case

The charging case holds two extra charges for your earbuds. To charge the earbuds, simply place them inside the charging case. They will begin charging automatically. The earbuds can be fully charged in approximately one hour. The

case itself can be charged via a USB cable (not included in the provided information, but standard for such devices). A set of LEDs on the case indicates its current charge level.



Image: The COOLBUDS charging case open, showing the left and right earbud compartments and charging pins, with the earbuds placed inside.

2. Initial Pairing

For the first use, remove both earbuds from the charging case. They will automatically enter pairing mode. On your device (smartphone, tablet, etc.), enable Bluetooth and search for new devices. Select "COOLBUDS" from the list of available devices to connect. Once paired, the earbuds will automatically connect to your device whenever you remove them from the case.

3. Secure Fit

The COOLBUDS are designed with removable ear hooks to ensure a secure and comfortable fit, especially during physical activities. Experiment with the fit to find the most comfortable and stable position for your ears.



Image: A person wearing the COOLBUDS, demonstrating the secure fit in the ear.

OPERATING INSTRUCTIONS

Touch Controls

The COOLBUDS feature built-in touch controls for easy management of your audio and calls. Specific touch gestures allow you to:

- **Play/Pause Music:** Tap once on either earbud.
- **Skip Forward:** Tap twice on the right earbud.
- **Skip Backward:** Tap twice on the left earbud.
- **Answer/End Call:** Tap once on either earbud during an incoming call.
- **Reject Call:** Press and hold on either earbud during an incoming call.



Image: An icon depicting a fingerprint, symbolizing the touch control functionality of the earbuds.

Virtual Assistant Activation

Activate your device's virtual assistant (Siri or Google Assistant) by pressing a specific touch control (e.g., triple tap or long press, refer to full manual for exact gesture if available). This allows you to use voice commands for various functions without needing to access your phone.



Image: A microphone icon, indicating the voice assistant feature.

Wireless Range

The earbuds maintain a stable connection up to 33 feet (10 meters) from your paired device, offering freedom of movement.



Image: A person walking outdoors, wearing COOLBUDS and holding a smartphone, with an overlay indicating a 33ft wireless range.

MAINTENANCE

Cleaning

Regularly clean your earbuds and charging case to ensure optimal performance and hygiene. Use a soft, dry, lint-free cloth to wipe down the surfaces. For the charging contacts, use a dry cotton swab. Do not use abrasive cleaners or immerse the earbuds or case in water.

Storage

When not in use, store the earbuds in their charging case to protect them from dust and damage. Store the case in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Earbuds Not Pairing

- Ensure both earbuds are fully charged.
- Make sure Bluetooth is enabled on your device.
- Place the earbuds back in the case, close the lid, wait a few seconds, then remove them to re-enter pairing mode.
- Forget the device from your phone's Bluetooth settings and try pairing again.

No Sound or Intermittent Sound

- Check the volume level on both your device and the earbuds.
- Ensure the earbuds are within the 33-foot Bluetooth range of your device.
- Try disconnecting and reconnecting the Bluetooth connection.
- Clean any debris from the earbud speakers.

Charging Issues

- Ensure the charging case has sufficient power.
- Verify that the earbuds are correctly seated in the charging case and the charging contacts are clean.
- If the case is not charging, try a different USB cable and power source.

SPECIFICATIONS

Feature	Specification
Model Name	True Wireless Earbuds
Model Number	CPETW655
Connectivity Technology	Wireless (Bluetooth)

Feature	Specification
Bluetooth Version	5.3
Bluetooth Range	10 Meters (33 feet)
Battery Life (Earbuds)	Up to 18 Hours (with charging case)
Charging Time	1 Hour
Control Type	Touch, Siri, Google Assistant
Material	Plastic
Item Weight	1.52 ounces
Product Dimensions	1.26 x 3.39 x 1.26 inches
Color	Ash Rose
UPC	643620021538

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the product packaging or contact COOLBUDS customer service directly. Keep your proof of purchase for any warranty claims.

© 2025 COOLBUDS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question