

ASHATA ASHATAoqrcim0dv83030

ASHATA Portable DAB-P9 Mini Digital Radio

USER MANUAL

Introduction

Thank you for choosing the ASHATA Portable DAB-P9 Mini Digital Radio. This compact and versatile device allows you to enjoy DAB/DAB+ and FM radio, as well as MP3 playback from a memory card. Designed for both indoor and outdoor use, it features a clear LCD display, built-in speaker, and a long-lasting rechargeable battery. This manual provides detailed instructions to help you get the most out of your new radio.

Package Contents:

- 1 x ASHATA Portable DAB-P9 Radio
- 1 x USB Charging Cable
- 1 x Lanyard
- 1 x User Manual (this document)



Image: The ASHATA Portable DAB-P9 radio displayed alongside its USB charging cable and a lanyard, illustrating the complete package contents.

Setup

Follow these steps to set up your ASHATA Portable DAB-P9 radio for first use.

1. Charging the Battery

The radio comes with a built-in 1000mAh lithium battery. Before first use, it is recommended to fully charge the device.

1. Connect the small end of the supplied USB charging cable to the charging port on the side of the radio.
2. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The LCD display will indicate charging status. Charging is complete when the battery icon shows full.

2. Inserting a Memory Card (Optional)

The radio supports MP3 playback from a memory card (TF card) up to 32GB (not included).

1. Locate the memory card slot on the side of the radio.
2. Gently insert the TF card into the slot with the metal contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.



Image: A close-up side view of the ASHATA Portable DAB-P9 radio, highlighting the memory card slot and the volume control buttons.

Operating Instructions

Familiarize yourself with the controls and functions of your radio.

Controls Overview



Portable Pocket Radio

1.44 inch LCD screen

Built-in full-range speaker

Built-in 1000mAh rechargeable
lithium-ion battery

Image: The front of the ASHATA Portable DAB-P9 radio, showing its LCD screen displaying time and frequency, along with the various control buttons for navigation and functions.

- **M (Mode) Button:** Switches between DAB, FM, and MP3 playback modes.
- **MUTE Button:** Mutes or unmutes the audio output.
- **SCAN Button:** Initiates an automatic scan for radio stations in DAB or FM mode.
- **SLEEP Button:** Activates the sleep timer function.
- **MENU Button:** Accesses the menu options for the current mode.
- **PRESET Button:** Accesses saved preset stations.
- **TUNING SELECT Buttons (Left/Right Arrows):** Navigates through menus, adjusts tuning, or skips tracks.
- **Volume +/- Buttons:** Adjusts the audio volume (located on the side).

1. Power On/Off

Press and hold the **M** button to power the radio on or off.

2. DAB/DAB+ Radio Operation

1. Press the **M** button until DAB mode is selected.
2. Press the **SCAN** button to perform a full scan for available DAB/DAB+ stations. The radio will automatically store found stations.
3. Use the **TUNING SELECT** buttons to browse through the available stations.
4. To save a station as a preset, tune to the desired station, then press and hold the **PRESET** button. Use the **TUNING SELECT** buttons to choose a preset number (1-10), then press **PRESET** again to confirm.
5. To recall a preset, press the **PRESET** button briefly, then use the **TUNING SELECT** buttons to select the desired preset.

3. FM Radio Operation

1. Press the **M** button until FM mode is selected.
2. Press the **SCAN** button to perform an automatic scan for FM stations. The radio will automatically store found stations.
3. Use the **TUNING SELECT** buttons for fine-tuning or to step through stations.
4. To save an FM station as a preset, tune to the desired station, then press and hold the **PRESET** button. Use the **TUNING SELECT** buttons to choose a preset number (1-10), then press **PRESET** again to confirm.
5. To recall a preset, press the **PRESET** button briefly, then use the **TUNING SELECT** buttons to select the desired preset.
6. The radio supports RDS (Radio Data System) information display, showing real-time, channel name, and text information where available.

4. MP3 Playback

Ensure a memory card with MP3 files is inserted into the radio.

1. Press the **M** button until MP3 mode is selected.
2. The radio will automatically detect and begin playing MP3 files from the memory card.
3. Use the **TUNING SELECT** buttons to skip to the previous or next track.

5. Using Headphones

The radio features a 3.5mm stereo headphone jack for private listening.

- Plug your 3.5mm headphones (not included) into the headphone jack on the side of the radio.
- The internal speaker will automatically mute when headphones are connected.

Maintenance

Proper care will ensure the longevity and optimal performance of your ASHATA Portable DAB-P9 radio.

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the radio. Do not use abrasive cleaners, waxes, or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. If storing the radio for an extended period, charge it to about 50% every few months.
- **Storage:** Store the radio in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water or excessive moisture.

Troubleshooting

If you encounter issues with your radio, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Radio does not power on.	Battery is depleted.	Charge the radio using the supplied USB cable.
No radio signal or poor reception.	Weak signal area; antenna not extended.	Extend the telescopic antenna fully. Try moving to a location with better reception. Perform a new scan.
No sound from speaker/headphones.	Volume is too low or muted; headphones not fully inserted.	Increase volume using the +/- buttons. Press the MUTE button to unmute. Ensure headphones are fully plugged in.
MP3 files not playing.	Memory card not inserted or corrupted; unsupported file format.	Ensure the TF card is correctly inserted. Check if MP3 files are present on the card. Ensure files are in MP3 format.
Buttons are unresponsive.	Device is frozen or in lock mode.	Try powering off and on again. Check if there's a lock function activated (refer to specific button functions if available).

Specifications

Detailed technical specifications for the ASHATA Portable DAB-P9 Mini Digital Radio.

Feature	Specification
Model	DAB-P9
Material	Acrylonitrile Butadiene Styrene (ABS)
Supported Formats	DAB+, FM Radio, MP3
DAB/DAB+ Frequency	Band III (174.00 - 240.00MHz)
FM Frequency	87.5 - 108MHz with RDS
Number of Presets	10 DAB and 10 FM Channels
MP3 Playback Memory Card	Maximum 32GB (TF card, not included)
Battery Capacity	Built-in Lithium Battery 1000mAh
Speaker	23mm 4Ω 2W
LCD Display	128x64 pixels
Connectivity	USB (for charging), 3.5mm Audio Jack (for headphones)
Power Source	Battery Powered
Item Weight	150 g
Package Dimensions	13 x 8 x 4 cm

Warranty and Support

ASHATA products are manufactured to high quality standards. For any questions, technical support, or warranty inquiries,

please contact your retailer or the ASHATA customer service department through the contact information provided at the point of purchase. Please retain your proof of purchase for warranty claims.

© 2023 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question