

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SoBuy](#) /

› [SoBuy FSR108-W 3-Drawer Shoe Cabinet Instruction Manual](#)

SoBuy FSR108-W

SoBuy FSR108-W 3-Drawer Shoe Cabinet Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your SoBuy FSR108-W 3-Drawer Shoe Cabinet. Please read all instructions carefully before beginning assembly or use to ensure safe and proper functionality of the product.

2. SAFETY INFORMATION

- Always read the assembly instructions thoroughly before starting.
- Ensure all parts are present and undamaged before assembly.
- Use appropriate tools and wear protective equipment during assembly.
- Do not exceed the maximum load capacity of 45 kg (99.2 lbs) for the cabinet.
- Secure the cabinet to a wall using the provided anti-tip hardware to prevent accidental tipping, especially in households with children or pets.
- Keep small parts and packaging materials away from children.

3. PACKAGE CONTENTS

Your SoBuy FSR108-W shoe cabinet comes in a flat pack and includes all necessary components and hardware for self-assembly. Please verify that all parts listed in the included assembly guide are present and undamaged before proceeding.

4. SETUP AND ASSEMBLY

The SoBuy FSR108-W shoe cabinet requires self-assembly. Detailed step-by-step instructions are provided in the separate assembly manual included with your product. Follow these instructions carefully for proper construction.



Image: The assembled SoBuy FSR108-W shoe cabinet in a typical entryway, showcasing its design and functionality.



Image: Dimensional diagram of the shoe cabinet, indicating its height, width, and depth for planning placement.

Ensure you have adequate space for assembly and that all components are correctly oriented before tightening fasteners. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

5. OPERATING INSTRUCTIONS

5.1 Using the Flip-Drawers

The SoBuy FSR108-W features three flip-drawers designed for shoe storage. To open a drawer, gently pull the handle located at the top center of the drawer front. The drawer will tilt forward, revealing two compartments for shoes. Place shoes into these compartments, ensuring they fit without forcing the drawer closed. To close, push the drawer back into the cabinet until it is flush with the cabinet front.



Image: A flip-drawer open, demonstrating how shoes are stored within the compartments.

5.2 Utilizing the Side Hooks

Two hooks are integrated on the side of the cabinet. These hooks are suitable for hanging lightweight items such as coats, hats, handbags, or scarves. Distribute weight evenly and avoid hanging excessively heavy items to maintain cabinet stability.



Image: The side hooks in use, holding a handbag, illustrating their practical application.

5.3 Product Usage Video

Video: A demonstration of the SoBuy FSR108-W shoe cabinet in use, showing the functionality of the flip-drawers and side hooks in an entryway setting.

6. MAINTENANCE

To ensure the longevity and appearance of your shoe cabinet, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces regularly with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage.
- **Inspection:** Periodically check all fasteners and connections to ensure they remain tight. Retighten if necessary.
- **Placement:** Avoid placing the cabinet in direct sunlight or near heat sources to prevent material warping or discoloration.

7. TROUBLESHOOTING

If you encounter any issues with your SoBuy FSR108-W shoe cabinet, consider the following common solutions:

- **Drawers not closing smoothly:** Check for any obstructions inside the drawer compartments or along the sliding mechanism. Ensure shoes are not overfilling the compartments.
- **Cabinet wobbles:** Verify that the cabinet is placed on a level surface. Re-check all assembly fasteners for tightness. Ensure the anti-tip hardware is correctly installed and secured to the wall.
- **Missing parts:** If any parts were missing upon delivery, refer to the contact information in the Warranty and Support section.

8. SPECIFICATIONS

Brand	SoBuy
Model Number	FSR108-W
Color	White
Material	Engineered Wood
Product Dimensions (W x D x H)	55 x 30 x 112 cm (21.7"W x 11.8"D x 44.1"H)
Item Weight	19.8 kg (43.7 lbs)
Maximum Weight Capacity	45 kg (99.2 lbs)
Style	3 Flip Drawers

9. WARRANTY AND SUPPORT

For warranty information, replacement parts, or technical support, please refer to the contact details provided by your retailer or visit the official SoBuy website. Keep your purchase receipt as proof of purchase for any warranty claims.