

[Manuals.plus](#) /

> [Beko](#) /

> Beko BMOB17131X Integrated Microwave Oven User Manual

Beko BMOB17131X

Beko BMOB17131X Integrated Microwave Oven User Manual

Model: BMOB17131X | Brand: Beko

INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your Beko BMOB17131X Integrated Microwave Oven. Please read this manual thoroughly before using the appliance and keep it for future reference.

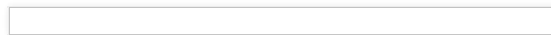 


Figure 1: Front view of the Beko BMOB17131X Integrated Microwave Oven. This image shows the stainless steel finish, the microwave door with a large viewing window, and the control panel on the right side featuring a digital display, various function buttons, and a rotary knob.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.

SETUP AND INSTALLATION

This integrated microwave oven is designed for built-in installation. Ensure proper ventilation and clearance as specified in

the installation guide (sold separately or available online).

Unpacking

1. Carefully remove the microwave oven from its packaging.
2. Remove all packing materials, including any protective film or tape.
3. Inspect the oven for any damage. Do not install if damaged.

Placement

- Place the oven on a flat, stable surface that can support its weight.
- Ensure adequate space for ventilation around the appliance. Refer to the installation template for precise dimensions.
- Do not block air vents.

Electrical Connection

- Connect the power cord to a properly grounded electrical outlet. The voltage requirement is 230V.
- Do not use extension cords or ungrounded adapters.

OPERATING INSTRUCTIONS

Your Beko BMOB17131X microwave oven features a user-friendly control panel with a digital display, function buttons, and a rotary knob for setting time and power levels.

Control Panel Overview

The control panel typically includes:

- **Display Screen:** Shows time, power level, and cooking indicators.
- **Function Buttons:** For selecting cooking modes (e.g., Microwave, Defrost, Grill if applicable, Auto Cook).
- **Time/Weight Dial (Rotary Knob):** Used to set cooking time, weight for defrosting, or adjust settings.
- **Start/Pause Button:** To begin or temporarily stop cooking.
- **Stop/Clear Button:** To cancel a program or clear settings.

Basic Microwave Cooking

1. Place food in a microwave-safe container and put it on the glass turntable inside the oven.
2. Close the oven door securely.
3. Press the "Microwave" button (or equivalent) to select the microwave function.
4. Use the rotary knob to set the desired power level (e.g., P100 for full power, P80 for 80% power).
5. Use the rotary knob to set the cooking time.
6. Press the "Start" button to begin cooking.

Defrosting

The oven offers defrosting by weight or by time.

1. Place the frozen food in the oven.
2. Press the "Defrost" button.
3. Use the rotary knob to select the weight of the food or the defrosting time.
4. Press "Start".

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your microwave oven.

Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- For stainless steel surfaces, use a specialized stainless steel cleaner to maintain its finish.
- Do not use abrasive cleaners or scouring pads.

Cleaning the Interior

- To remove odors, combine a cup of water with the juice and peel of one lemon in a microwave-safe bowl. Microwave on high for 5 minutes.
- Wipe the interior with a soft, damp cloth. For stubborn stains, use a mild detergent.
- Clean the glass turntable and roller ring with warm, soapy water. They are typically dishwasher safe.
- Ensure the door seals and sealing surfaces are clean to prevent microwave energy leakage.

General Care

- Unplug the oven before cleaning or performing any maintenance.
- Do not immerse the appliance in water or other liquids.

TROUBLESHOOTING

Before contacting service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug into outlet; Close door securely; Check fuse or reset circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level or cooking time.	Stir or turn food halfway through cooking; Adjust power level and time as needed.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Excessive steam inside door	Normal condensation from high moisture content food.	Wipe dry after use. This is normal.

SPECIFICATIONS

Key technical specifications for the Beko BMOB17131X Integrated Microwave Oven:

- **Model:** BMOB17131X
- **Capacity:** 17 Litres
- **Microwave Power:** 700 Watts
- **Voltage:** 230 Volts
- **Installation Type:** Integrated
- **Control Type:** Button/Rotary Knob

- **Material:** Stainless Steel (Interior and Exterior)
- **Dimensions (H x W x D):** 32 cm x 59.5 cm x 38.2 cm (approximately)
- **Weight:** 14.2 kg

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your purchase or visit the official Beko website. If you require technical assistance or have questions not covered in this manual, please contact Beko customer support. Contact details can typically be found on the Beko official website or on your product's packaging.