

MYMAHDI M9Plus-128GB

MYMAHDI M9Plus-128GB MP3 Player User Manual

Model: M9Plus-128GB | Brand: MYMAHDI

1. INTRODUCTION

This manual provides detailed instructions for the MYMAHDI M9Plus-128GB MP3 Player. Please read this guide thoroughly to understand the device's features, setup, operation, and maintenance. This player offers high-resolution audio, HD IPS full touch screen, Bluetooth 5.2, FM radio, voice recorder, e-book functionality, and various other features for an enhanced multimedia experience.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Large Memory:** Built-in 64GB memory with an additional 64GB high-speed 3.0 memory card, expandable up to 512GB.
- **Bluetooth 5.2:** Provides stable and smooth wireless audio connection (transmitter only, cannot pair with phones).
- **HD Video Display:** Multi-Touch IPS screen supports 720P and 1080P full-format HD video playback directly without conversion.
- **Long Battery Life:** 1000mAh battery offers up to 80 hours of music playback or 12 hours of video playback after a 60-minute full charge.
- **Multi-functionality:** Includes music/video playback, recording, calculator, puzzle games, TXT e-book reading, picture browsing, FM radio, folder management, and settings.

2.2 What's in the Box

- MYMAHDI M9Plus MP3 Player
- Earphones
- USB Cable
- User Manual (this document)

2.3 Device Features Visual Overview

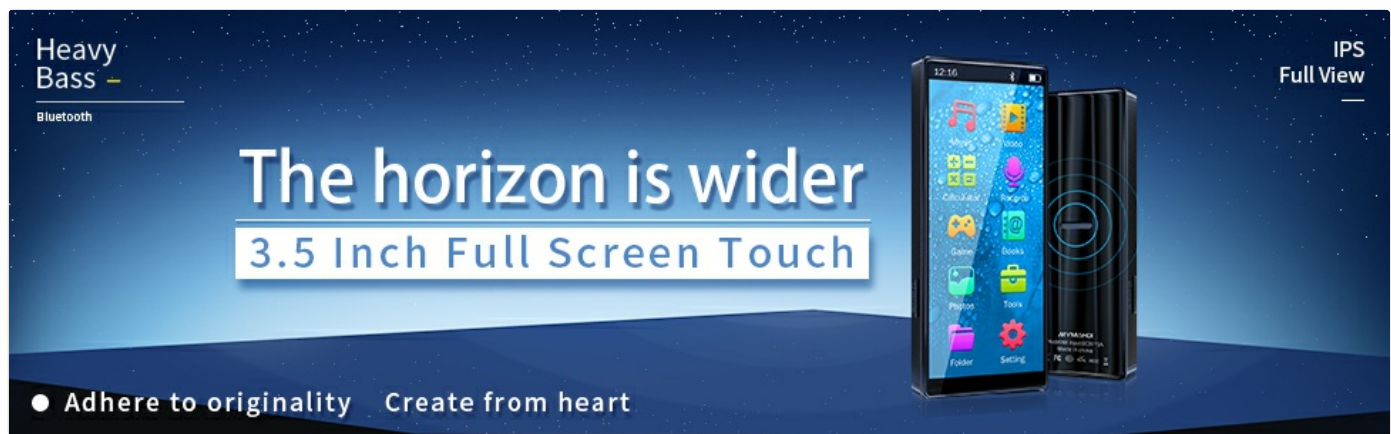


Figure 1: Multi-functional Touch Screen MP3 Player showing icons for video, touch, music, Bluetooth, calculator, e-book, FM radio, and recorder.



Figure 2: Five functions available in the player's toolbox menu, including Bluetooth, Radio, Calendar, and Stopwatch.

Your browser does not support the video tag.

Video 1: An overview of the MYMAHDI M9Plus MP3 player, highlighting its multifunctionality, high-resolution audio support, Bluetooth 5.0 stable connection, loudspeaker, and touch screen.

3. SETUP

3.1 Charging the Device

Before first use, fully charge your MP3 player. Connect the provided USB cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator will show charging status. A full charge takes approximately 60 minutes.

3.2 Power On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select "Power Off" on the screen.

3.3 Inserting a Memory Card

The device comes with a built-in 64GB memory and an additional 64GB high-speed 3.0 memory card. To expand storage further (up to 512GB), you can replace the existing memory card. Locate the microSD card slot on the side of the player. Gently insert the memory card with the gold contacts facing down until it clicks into place. To remove, push the card in slightly until it springs out.



Figure 3: Close-up view of the MP3 player highlighting the microSD card slot for memory expansion.

3.4 Connecting to a Computer

Connect the MP3 player to your computer using the provided USB cable. The device will appear as a removable disk. You can drag and drop music, video, and e-book files directly into the appropriate folders on the player.



Figure 4: The bottom of the MP3 player showing the USB charging/data port and the 3.5mm headphone jack.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The MYMAHDI M9Plus features a full HD IPS touch screen for intuitive navigation. Swipe left/right or up/down to browse menus and applications. Tap an icon to open an application. Use the back arrow icon on the top left of the screen to return to the previous menu.

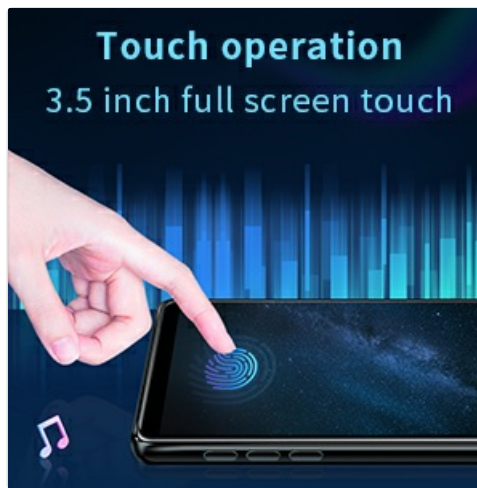


Figure 5: Illustrates the ease and speed of full touch screen operation compared to traditional button-based navigation.

4.2 Music Playback

1. Tap the "Music" icon on the home screen.
2. Browse your music library by Artist, Album, Songs, or Playlists.
3. Tap a song to begin playback.
4. Use the on-screen controls for Play/Pause, Next/Previous Track, Volume adjustment, and Repeat/Shuffle modes.

Supported audio formats include MP3, WMA, APE, FLAC, WAV, AAC, OGG.

4.3 Video Playback

1. Tap the "Video" icon on the home screen.
2. Select a video file from your library.
3. The player supports 720P and 1080P full-format HD video playback directly without conversion.

Supported video formats include RM, RMVB, AVI, MKV, WMV, VOB, MOV, FLV, ASF, DAT, MP4, 3GP, MPG, MPEG.

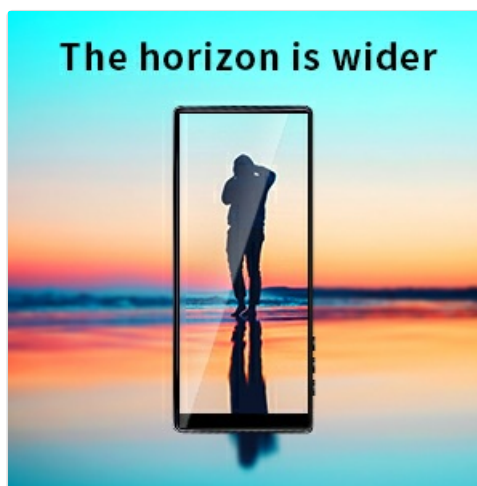


Figure 6: The MP3 player showcasing its HD video display capability.

4.4 Bluetooth Connection

The MYMAHDI M9Plus features Bluetooth 5.2 for connecting to Bluetooth speakers or headphones. **Note: This MP3 player acts as a Bluetooth transmitter only and cannot pair with mobile phones.**

1. Tap the "Bluetooth" icon from the home screen or settings menu.
2. Toggle Bluetooth "On".
3. Ensure your Bluetooth speaker or headphones are in pairing mode.

4. The player will search for available devices. Select your device from the list to pair.



Figure 7: The Bluetooth settings screen on the MP3 player, demonstrating the process of enabling Bluetooth and searching for devices.

4.5 FM Radio

To use the FM Radio function, connect wired earphones to the player. The earphones act as an antenna. Tap the "FM Radio" icon, then use the on-screen controls to scan for stations or manually tune.

4.6 Voice Recorder

Tap the "Recorder" icon to access the voice recording function. Tap the record button to start and stop recording. Recordings are saved internally and can be managed through the "Folder" application.

4.7 E-Book Reader

The player supports TXT format e-books. Transfer TXT files to the "Books" folder on the device. Tap the "E-Book" icon to open the reader and select your desired book.

4.8 Games

The device includes several decompression games such as Tetris, Huarong Road, Fun Sudoku, Rolling Thinking, Jumping Balls, 2048, and Disappear. Tap the "Game" icon to access and play them.

4.9 Other Functions

- **Calculator:** Basic arithmetic functions.
- **Picture Browsing:** View images stored on the device.
- **Folder Function:** Manage files and folders on the internal memory and microSD card.
- **Settings:** Adjust display, sound, language, date/time, and other system preferences.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and body of the player. Avoid liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Software Updates:** Check the manufacturer's website for any available firmware updates to ensure optimal performance.

6. TROUBLESHOOTING

6.1 Device Does Not Power On

- Ensure the battery is charged. Connect the player to a power source and allow it to charge for at least 10 minutes before attempting to power on again.
- If the device is unresponsive, try performing a hard reset (refer to the "Resetting the Device" section if available, or hold the power button for an extended period, e.g., 10-15 seconds).

6.2 Touch Screen Unresponsive

- Ensure your fingers are clean and dry.
- Restart the device.
- If the issue persists, a factory reset might be necessary (*Note: This will erase all data on the device. Back up important files first.*).

6.3 Bluetooth Pairing Issues

- Confirm that the MP3 player's Bluetooth is enabled and your receiving device (speaker/headphones) is in pairing mode.
- Ensure the devices are within close range (typically 10 meters or 33 feet).
- Turn off and on Bluetooth on both devices.
- Remember, this MP3 player cannot pair with mobile phones.

6.4 Poor Sound Quality from Speaker

- Ensure the volume is not set too high, which can cause distortion.
- Check if the speaker grille is clean and free from obstructions.
- For optimal sound quality, use headphones or an external Bluetooth speaker.

6.5 Files Not Appearing on Device

- Verify that files are transferred to the correct folders (e.g., "Music" for audio, "Video" for videos, "Books" for e-books).
- Ensure the file formats are supported by the player.
- If using a microSD card, ensure it is properly inserted and recognized by the device.

7. SPECIFICATIONS

Brand	MYMAHDI
Model Name	M9Plus-128GB
Memory Storage Capacity	128 GB (64GB internal + 64GB external card, expandable up to 512GB)
Connectivity Technology	Bluetooth 5.2, USB
Screen Size	3.5 Inches (HD IPS Full Touch Screen)
Supported Audio Formats	AAC, APE, FLAC, MP3, OGG, WAV, WMA
Supported Video Formats	RM, RMVB, AVI, MKV, WMV, VOB, MOV, FLV, ASF, DAT, MP4, 3GP, MPG, MPEG (720P & 1080P)
Battery Capacity	1000mAh
Battery Life (Approx.)	80 hours music, 12 hours video
Item Weight	3.2 Ounces

Manufacturer	Weisa
--------------	-------

8. WARRANTY AND SUPPORT

The MYMAHDI M9Plus-128GB MP3 Player comes with a **1 Year Manufacturer Warranty**. For technical support, warranty claims, or further assistance, please contact MYMAHDI customer service through the retailer where you purchased the product or visit the official MYMAHDI website for contact information.

Please retain your proof of purchase for warranty purposes.

© 2024 MYMAHDI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09V147VMB>

More documents and user manuals: <https://manuals.plus/>