

[Manuals.plus](#) /

› [Gaiatop](#) /

› Gaiatop TF30 Small Desk Fan Instruction Manual

Gaiatop TF30

Gaiatop TF30 Small Desk Fan Instruction Manual

INTRODUCTION

Thank you for choosing the Gaiatop TF30 Small Desk Fan. This compact and portable fan is designed to provide personal cooling with three adjustable speeds and a quiet operation. This manual provides essential information for the safe and efficient use of your new fan. Please read it thoroughly before use and retain it for future reference.

PACKAGE CONTENTS

Upon unpacking, please ensure all items listed below are present and in good condition:

- Gaiatop TF30 Desk Fan x1

SETUP INSTRUCTIONS

Follow these simple steps to set up your Gaiatop TF30 desk fan:

1. **Unpack Components:** Remove the fan and its base from the packaging.
2. **Connect the Power Cord:** Locate the USB power cord and plug it into the designated port on the back of the fan unit.
3. **Attach the Base:** Align the fan unit with the base and firmly press them together until they click into place. Ensure the connection is secure.
4. **Connect to Power:** Plug the USB end of the power cord into a compatible USB power source (e.g., laptop, PC, power bank, or USB wall adapter).

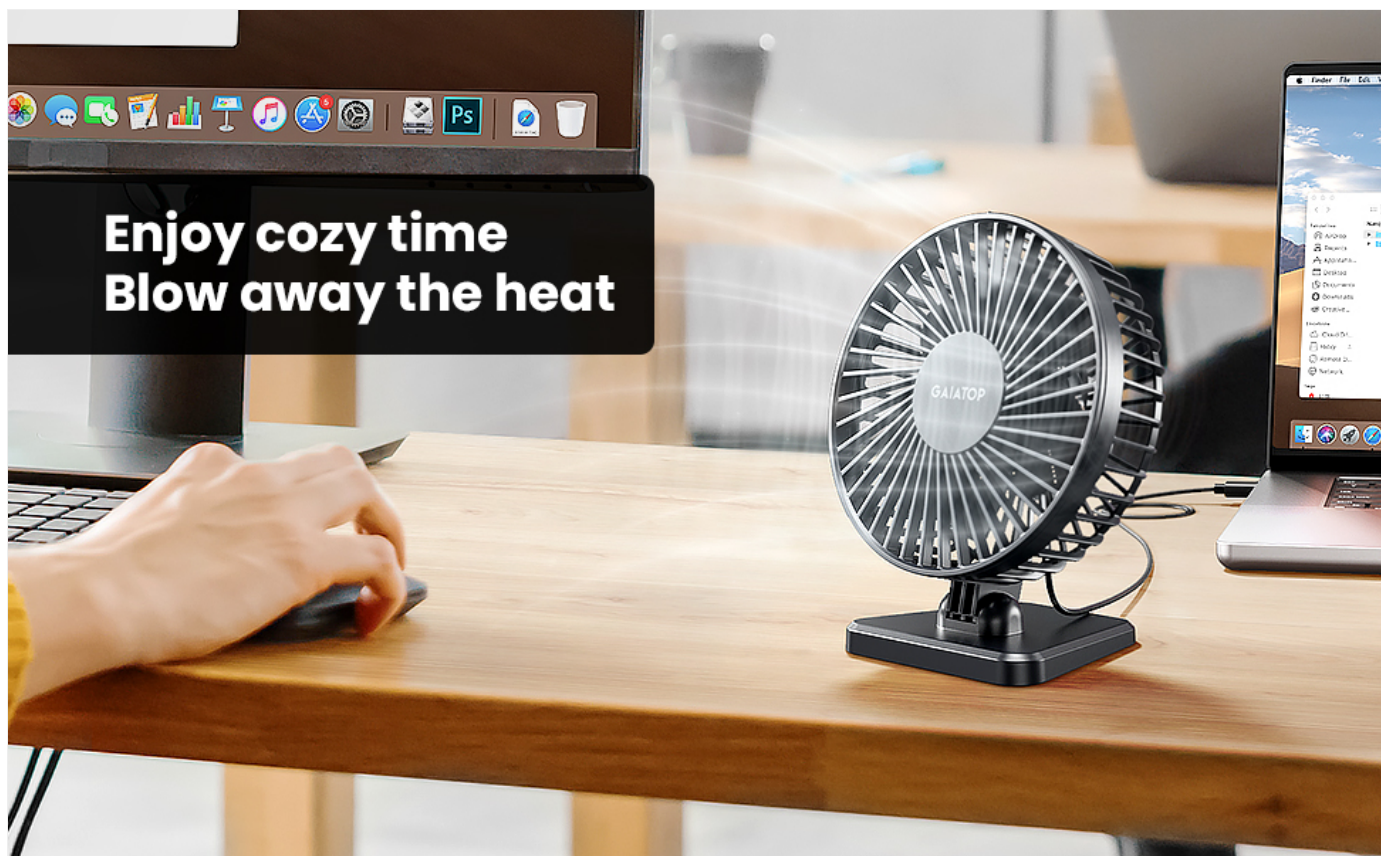


Image: Visual guide for assembling the Gaiatop TF30 desk fan, showing the fan, power cord, and base, followed by steps to connect the power cord and attach the base for immediate use.

OPERATING INSTRUCTIONS

The Gaiatop TF30 fan features simple single-button control for ease of use.

Power On/Off and Speed Adjustment

- **To Power On:** Press the power button once. The fan will start at the lowest speed setting.
- **To Adjust Speed:** Press the power button repeatedly to cycle through the three speed settings: Low, Medium, and High.
- **To Power Off:** After the High-speed setting, pressing the button again will turn the fan off.

Adjusting Airflow Direction

The fan head can be manually adjusted vertically to direct airflow precisely where needed.

- Gently tilt the fan head up or down to achieve the desired angle. The fan supports a vertical rotation of 0 to 30 degrees.

About Gaiatop:

Rooted in the philosophy of "Natural Inspiration + Lifestyle Technology," Gaiatop is an innovation-driven brand specializing in personal portable consumer electronics.

Why Choose Gaiatop?

We draw inspiration from the natural world and integrate it with human-centered, cutting-edge technology to create intelligent and portable personal climate solutions for users around the globe.

Driven by the vision of year-round comfort, we are redefining the way people interact with their personal climate—empowering everyone to enjoy their ideal comfort anywhere.



Image: The Gaiatop TF30 desk fan showing its ability to rotate vertically by 30 degrees, allowing for adjustable airflow direction.



Image: Illustration depicting the three distinct airflow strengths (2200rpm, 3200rpm, 3700rpm) provided by the Gaiatop TF30 fan.

KEY FEATURES

- **High Compatibility USB Powered:** The fan is powered via USB, making it compatible with various devices such as PCs, laptops, power banks, AC adapters, and car chargers. Note: This fan does not contain a built-in battery.
- **Compact and Portable Design:** With dimensions of 4.56 x 3.07 x 5.4 inches and weighing less than 8 ounces, this fan is designed for minimal space occupation and easy portability.
- **Quiet Operation:** Engineered for quiet performance, the fan operates at less than 50dB even at its highest speed, ensuring a peaceful environment for work or rest.
- **Three-Speed Settings:** Easily switch between Low, Medium, and High-speed settings to customize your cooling experience.
- **Adjustable Wind Angle:** The fan head can be tilted vertically from 0 to 30 degrees to direct airflow precisely.



Control Your Climate



Image: The Gaiatop TF30 mini desk fan positioned next to a laptop and smartphone, highlighting its space-saving and compact design.



Image: A man and his dog sleeping undisturbed, with the Gaiatop TF30 desk fan operating quietly nearby, demonstrating its low noise level.



Image: The Gaiatop TF30 desk fan with illustrations of various USB power sources it can connect to, including laptops, PCs, power banks, and car chargers.

SPECIFICATIONS

Feature	Detail
Brand	Gaiatop
Model Name	TF30
Colour	Black
Electric Fan Design	Table Fan
Power Source	Corded Electric (USB Powered)
Product Dimensions (D x W x H)	5D x 10W x 5H Centimeters
Item Weight	120 Grams
Special Features	Lightweight, Adjustable, Portable
Controller Type	Button Control
Number of Speeds	3
Noise Level	50 Decibels
Wattage	5 Watts
Voltage	5 Volts
Speed	1500 RPM
Number of Blades	3
Material Type	Plastic
Indoor/Outdoor Usage	Indoor

Safety Information

To ensure safe operation and prevent damage, please observe the following safety guidelines:

- Do not insert fingers or any objects into the fan grille when the fan is operating.
- Keep the fan away from water or other liquids. Do not use in wet environments.
- Do not attempt to disassemble or modify the fan. Repairs should only be performed by qualified personnel.
- Ensure the fan is placed on a stable, flat surface to prevent it from tipping over.
- Unplug the fan from the power source before cleaning or when not in use for extended periods.
- Keep out of reach of small children and pets.

Maintenance

Regular cleaning will help maintain the performance and longevity of your fan.

- **Cleaning the Fan:** Ensure the fan is unplugged before cleaning. Use a soft, dry cloth to wipe the exterior surfaces. For dust accumulation on the blades, carefully use a soft brush or compressed air.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the fan's finish or internal components.

- Store the fan in a cool, dry place when not in use.

TROUBLESHOOTING

If you encounter any issues with your Gaiatop TF30 fan, please refer to the following common troubleshooting tips:

- **Fan Not Turning On:**

- Ensure the USB cable is securely connected to both the fan and the power source.
- Try plugging the fan into a different USB port or power adapter to rule out a faulty power source.

- **Weak Airflow:**

- Check if the fan is set to the desired speed. Press the power button to cycle through speeds (Low, Medium, High).
- Ensure the fan grille is not obstructed by dust or debris. Clean as per the Maintenance section.

- **Unusual Noise:**

- Ensure the fan is placed on a stable surface.
- Check for any foreign objects caught in the fan blades or grille. Unplug the fan before inspecting.

If the problem persists after trying these steps, please contact customer support.

WARRANTY AND SUPPORT

Gaiatop products are designed for reliability and performance. For information regarding product warranty, please refer to the warranty card included with your purchase or visit the official Gaiatop website.

Extended warranty options may be available through third-party providers. For example, Onsitego offers 1-year and 2-year extended warranty plans.

For customer support or technical assistance, please contact Gaiatop directly or the retailer from whom you purchased the product. The manufacturer contact information is gaiatop, and the importer contact information is +91 9891201580.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question