

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [WOLF Garten](#) /
- › [WOLF-Garten e-Multi-Star TL 32 Em Lopper \(Model 72AMLA-1650\) Instruction Manual](#)

WOLF Garten 72AMLA-1650

WOLF-Garten e-Multi-Star TL 32 Em Lopper (Model 72AMLA-1650) Instruction Manual

Your guide to safe and effective operation

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your WOLF-Garten e-Multi-Star TL 32 Em Lopper. This tool is designed for pruning branches up to 32mm in diameter, featuring a 1-meter telescopic pole and a 225° swivel cutting head for extended reach and versatility. Please read these instructions carefully before initial operation and retain them for future reference.



Image 1.1: The WOLF-Garten e-Multi-Star TL 32 Em Lopper, showcasing its design with the telescopic pole and cutting head.

2. SAFETY INFORMATION

Always observe basic safety precautions to reduce the risk of injury when using this tool.

- **Read the Manual:** Familiarize yourself with all instructions and warnings before use.
- **Personal Protective Equipment:** Wear appropriate safety glasses, gloves, and sturdy footwear. A hard hat is recommended when pruning overhead branches.
- **Work Area:** Ensure the work area is clear of bystanders, children, and pets. Maintain a stable footing, especially when working at height.
- **Branch Stability:** Ensure the branch to be cut is stable and will not fall unexpectedly, causing injury or damage.
- **Electrical Safety:** This tool is battery-powered. Ensure the battery (not included) is correctly inserted and charged according to its specific instructions. Do not use in wet conditions.
- **Maintenance:** Keep blades sharp and clean for optimal performance and safety.
- **Storage:** Store the lopper in a dry, secure place, out of reach of children.

3. PRODUCT OVERVIEW AND COMPONENTS

Understand the different parts of your lopper for proper assembly and operation.





**SALES AND AFTER
SALES SUPPORT**



**GREAT SERVICE
NETWORK**



WARRANTY



ORIGINAL PARTS



INFORMATION



**OMNICHANNEL
SUPPORT**

CUSTOMER CARE CONTACT

| | | |
|---|--|--|
| <p>PHONE:</p> <p style="font-size: 1.2em;">1800-203-0644</p> <p>MON-SAT 09:00 AM - 06:00 PM IST EXCEPT GOVERNMENT HOLIDAYS</p> | <p>EMAIL:</p> <p>SBD-CUSTOMER COMMUNICATIONS @SBDINC.COM</p> <p>NUMBER OF AUTHORIZED SERVICE CENTER : 500+</p> | <p>WHATSAPP:</p>  <p>+91 96060 55835 SCAN THE CODE TO CONTACT US</p> |
|---|--|--|

Image 3.1: Diagram illustrating the key components of the lopper, including the Trigger Button, Handle, Power Housing, Telescopic

Key Components:

- **Trigger Button:** Activates the cutting mechanism.
- **Handle:** Provides grip and control during operation.
- **Power Housing:** Encloses the motor and battery connection point.
- **Telescopic Shaft:** Extends the reach of the lopper.
- **Pivot Joint:** Allows the cutting head to swivel.
- **Cutting Head:** Contains the blades for pruning.
- **Metal Hook or Lock Pin:** Secures the cutting head or provides additional functionality.

4. SETUP

Before using your lopper, ensure it is properly set up.

1. **Unpacking:** Carefully remove all components from the packaging. Inspect for any damage.
2. **Battery Installation:** This lopper is part of the e-Multi-Star series and requires a compatible 18V battery (not included). Insert the battery into the designated slot in the handle/power housing until it clicks securely into place. Refer to your battery's instruction manual for charging and installation details.
3. **Telescopic Pole Extension:** The lopper features a 1-meter telescopic pole. Adjust the length by loosening the locking mechanism on the shaft, extending to the desired length, and then securely tightening the mechanism.
4. **Head Adjustment:** The cutting head can swivel up to 225°. Adjust the angle by rotating the pivot joint to suit the branch's position. Ensure it is locked in place before cutting.

5. OPERATING INSTRUCTIONS

Follow these steps for effective and safe pruning.

1. **Pre-Operation Check:** Before each use, ensure the blades are clean and sharp, the battery is charged, and all connections are secure.
2. **Positioning:** Position yourself on stable ground. Extend the telescopic pole to reach the desired branch without overstretching.
3. **Targeting the Branch:** Place the cutting head around the branch. The lopper is designed for branches up to 32mm in diameter. Do not attempt to cut branches exceeding this limit.
4. **Cutting:** Press the trigger button firmly to activate the cutting action. Allow the blades to cut through the branch completely. Do not force the cut.
5. **Swivel Head Use:** Utilize the 225° swivel head to achieve optimal cutting angles for difficult-to-reach branches, minimizing strain and improving cutting efficiency.
6. **Post-Cut:** Release the trigger button after the cut is complete.

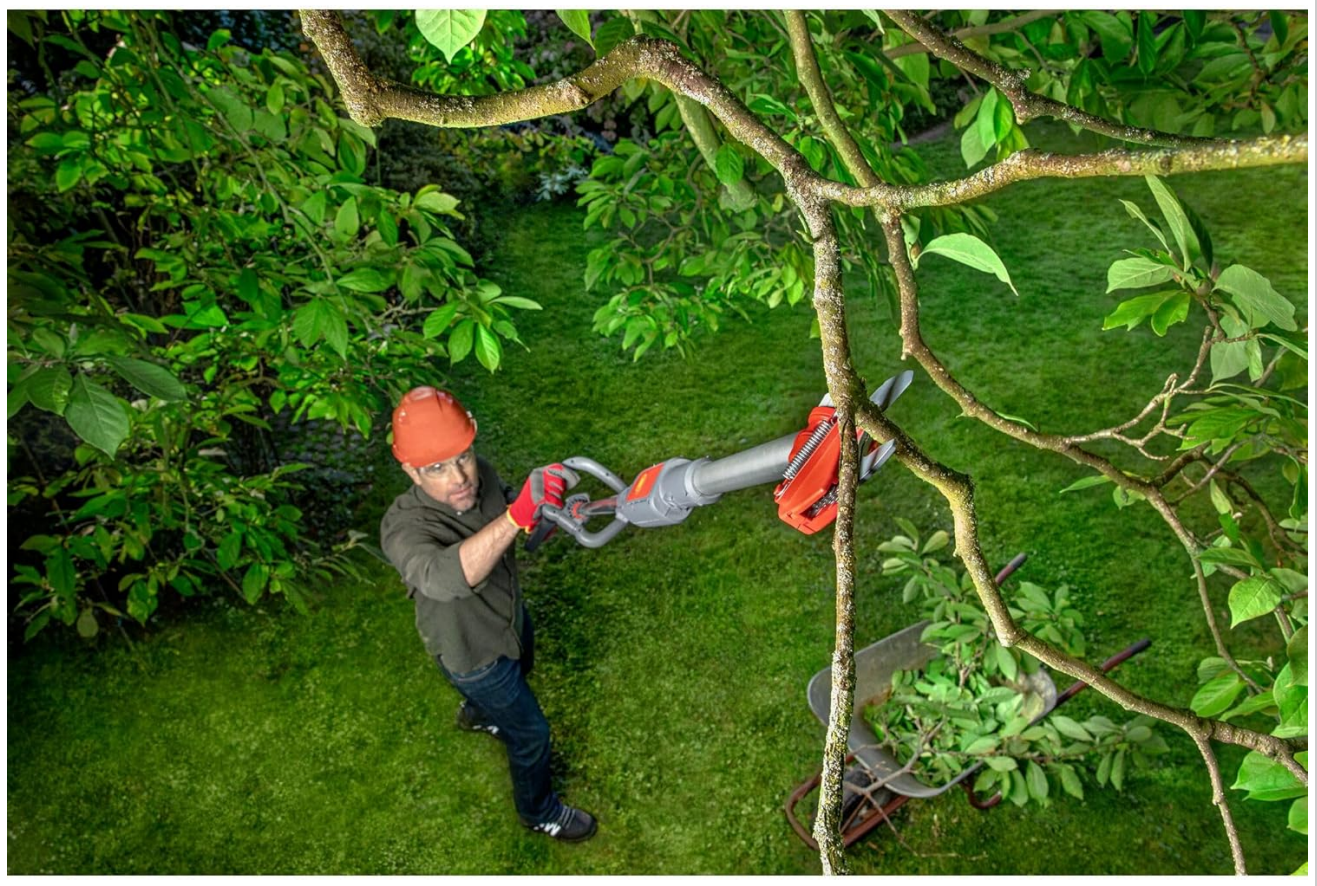


Image 5.1: A user demonstrating the lopper in action, pruning a branch from a tree.



Image 5.2: An aerial view showing a person safely operating the lopper from the ground to prune higher branches.

6. MAINTENANCE

Regular maintenance ensures the longevity and performance of your lopper.

- **Cleaning:** After each use, clean the blades and cutting head to remove sap, debris, and moisture. The blades feature a non-stick coating for easier cleaning. Use a damp cloth and mild detergent if necessary.
- **Lubrication:** Periodically apply a light oil to the pivot points and blades to ensure smooth operation and prevent rust.
- **Blade Sharpening:** Keep the blades sharp. Dull blades can tear branches and require more effort. Sharpen or replace blades as needed. Refer to WOLF-Garten authorized service centers for blade replacement.
- **Storage:** Store the lopper in a clean, dry environment. Ensure the battery is removed if storing for extended periods.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

| Problem | Possible Cause | Solution |
|---------------------------------------|--|---|
| Lopper does not cut | Battery discharged; Battery not inserted correctly; Blades dull or jammed; Branch too thick. | Charge battery; Reinsert battery; Clean/sharpen blades; Remove obstruction; Do not attempt to cut branches over 32mm. |
| Reduced cutting performance | Dull blades; Sap/debris on blades. | Sharpen blades; Clean blades thoroughly. |
| Cutting head does not swivel smoothly | Dirt/debris in pivot joint; Lack of lubrication. | Clean pivot joint; Apply lubricant. |

8. SPECIFICATIONS

Detailed technical specifications for the WOLF-Garten e-Multi-Star TL 32 Em Lopper.

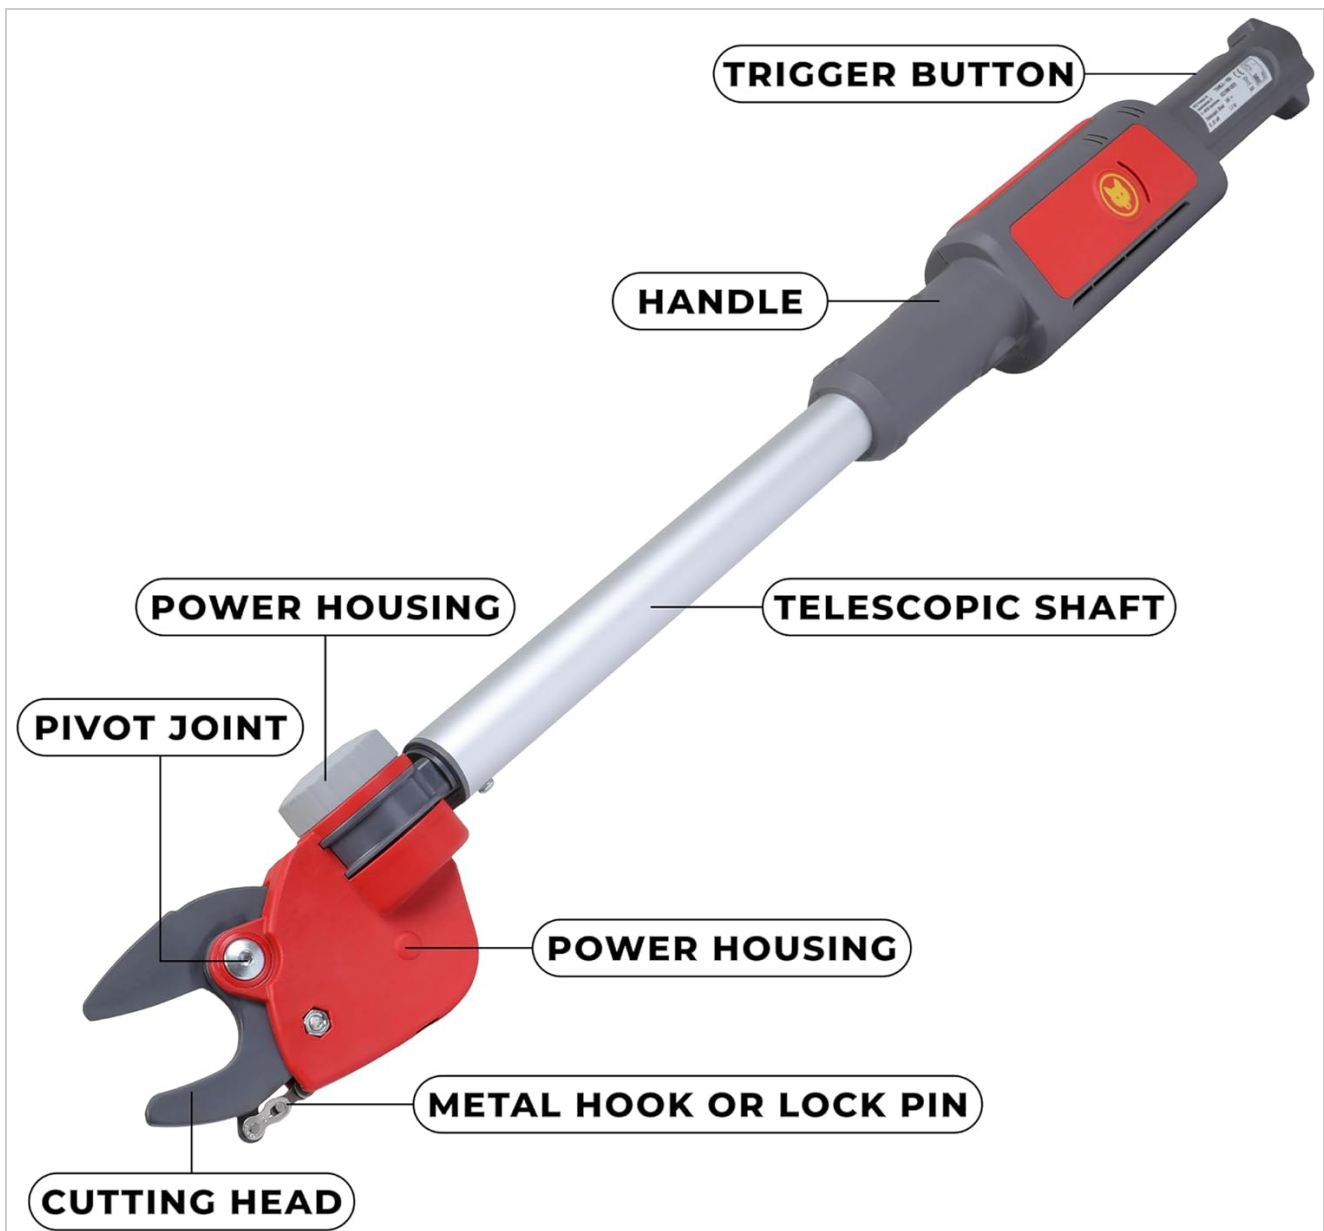


Image 8.1: A detailed table outlining the technical specifications of the lopper.

| Feature | Specification |
|-------------------------|--|
| Model Number | 72AMLA-1650 |
| Brand | WOLF Garten |
| Cutting Diameter | 32 mm |
| Telescopic Pole Length | Approx. 1 meter (38.19 inches) |
| Swivel Cutting Head | 225° |
| Blade Material | High Speed Steel with Non-Stick Coating |
| Blade Type | Bypass |
| Handle Material | Plastic |
| Power Source | Battery Powered (18 Volts DC) |
| Item Weight | 1.8 kg (3.96 pounds) |
| Product Dimensions | 38.19"L x 4.72"W |
| Batteries Included | No |
| Charging Time (Battery) | 85 minutes (for 2.5 Ah / 45 Wh battery, if applicable) |
| Sound Emission LPA | 70.6 dB(A) |
| Sound Emission LWA | 85.3 dB(A) |

9. WARRANTY AND SUPPORT

For warranty information, spare parts, and customer support, please refer to the manufacturer's official channels.



Image 9.1: Customer care contact details and support services provided by WOLF-Garten.

Customer Care Contact:

Phone: 1800-203-0644 (Monday - Saturday, 09:00 AM - 06:00 PM IST, except government holidays)

Email: SBD-CUSTOMERCOMMUNICATIONS@SBDINC.COM

WhatsApp: [+91 96060 55835](https://wa.me/919606055835) (Scan QR code in Image 9.1 for direct access)

Authorized Service Centers: Over 500+ service centers available.

WOLF-Garten provides comprehensive support including sales and after-sales support, a great service network, warranty services, original parts, information, and omnichannel support.



