

[Manuals.plus](#) /

> [Sonitrek](#) /

> Sonitrek Go XL Smart Bluetooth 5 Portable Wireless Waterproof Speaker User Manual

Sonitrek Go XL

Sonitrek Go XL Smart Bluetooth 5 Portable Wireless Waterproof Speaker User Manual

Model: Go XL

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Sonitrek Go XL Smart Bluetooth 5 Portable Wireless Waterproof Speaker. Please read this manual thoroughly before using the device and retain it for future reference.





Figure 1: Sonitrek Go XL Speaker. This image displays the front of the Sonitrek Go XL speaker, highlighting its control panel with buttons for power, Bluetooth pairing, volume adjustment, and playback.

SETUP

1. Unboxing and Initial Charge

- Carefully remove the Sonitrek Go XL speaker and its accessories from the packaging.
- Included components: Speaker, USB-C power cable, User manual.
- Before first use, fully charge the speaker using the provided USB-C cable. Connect the USB-C end to the speaker's charging port and the USB-A end to a compatible USB power adapter (not included) or computer port. The charging indicator lights will show the charging status.

2. Powering On/Off

- To power on: Press and hold the **Power button** (🔴) for approximately 2-3 seconds until you hear an audible tone and the indicator light illuminates.
- To power off: Press and hold the **Power button** again for approximately 2-3 seconds until the indicator light turns off.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Ensure the speaker is powered on. The Bluetooth indicator light will flash, indicating it is in pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Sonitrek Go XL" from the list of found devices.
4. Once connected, the Bluetooth indicator light on the speaker will become solid, and you will hear a confirmation tone.

2. Basic Controls

- **Volume Up:** Press the '+' button.
- **Volume Down:** Press the '-' button.
- **Play/Pause:** Press the **Play/Pause button** (⏮).
- **Skip Track Forward:** Press and hold the '+' button.
- **Skip Track Backward:** Press and hold the '-' button.

3. Dual Speaker Pairing (True Wireless Stereo)

The Sonitrek Go XL supports connecting two speakers for a stereo sound experience.

1. Ensure both Sonitrek Go XL speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press the **Dual Pairing button** (🔴). The indicator light will flash.
3. The two speakers will automatically search for and connect to each other. You will hear a confirmation tone when pairing is successful.
4. Once paired, connect your device to the primary speaker via Bluetooth as described in section 1.

One touch connect and sync with two speakers for double the output

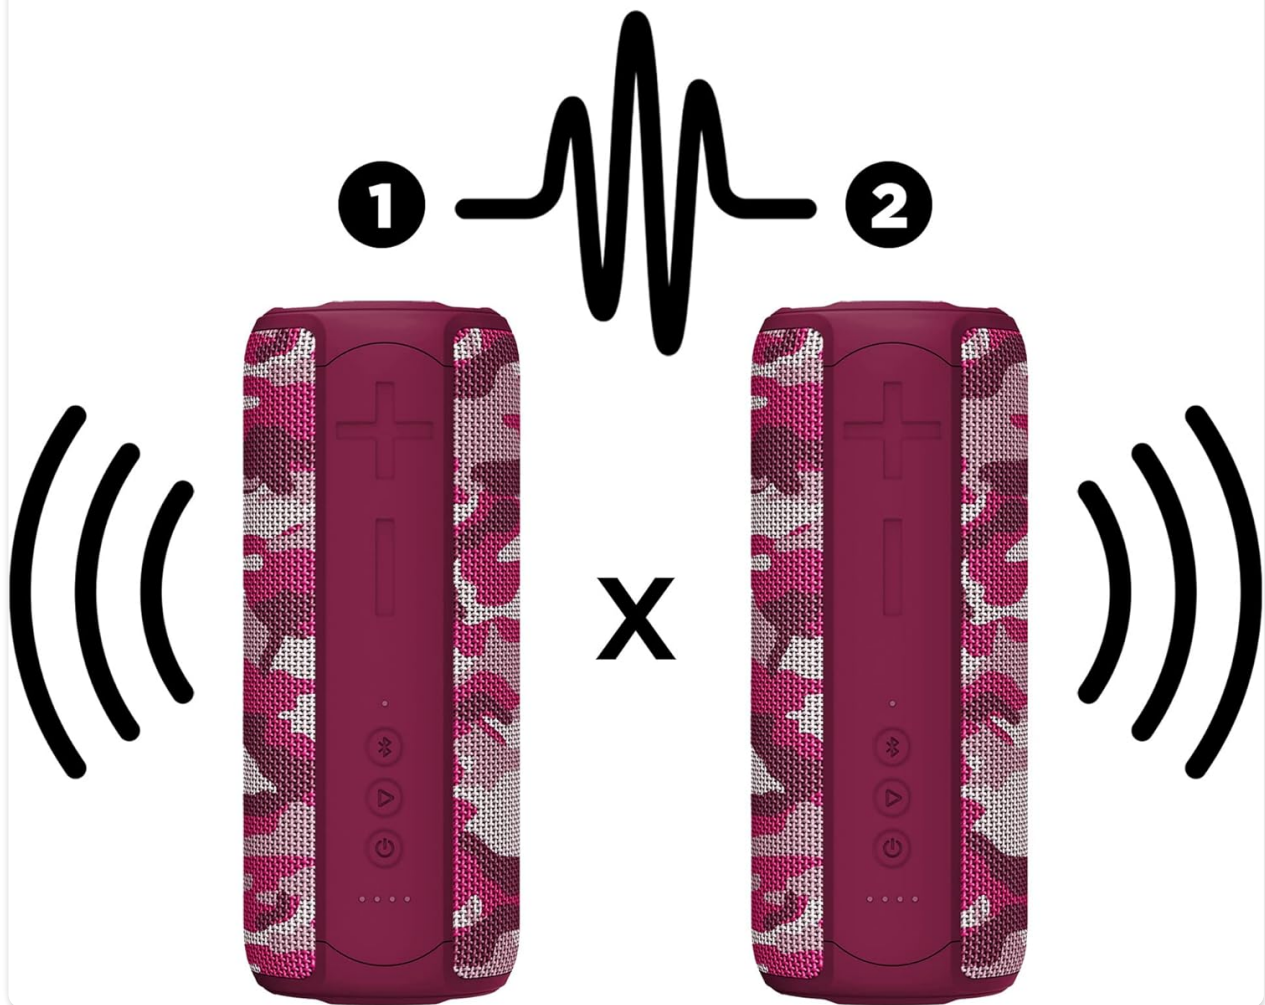


Figure 2: Dual Speaker Pairing. This diagram illustrates how two Sonitrek Go XL speakers can be wirelessly connected to provide a combined stereo audio output, effectively doubling the sound experience.

4. Waterproof Feature

The Sonitrek Go XL is fully waterproof with an IPX7 rating, making it suitable for use near water. However, it is not designed for prolonged submersion. Ensure the charging port cover is securely closed before exposing the speaker to water.



Figure 3: Waterproof Design. This image highlights the Sonitrek Go XL speaker's IPX7 waterproof rating, indicating its resistance to water immersion up to 1 meter for 30 minutes, making it ideal for outdoor and poolside use.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the speaker's exterior. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** After exposure to water, ensure the speaker is completely dry before opening the charging port or connecting any cables.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the provided USB-C cable.
Cannot pair via Bluetooth.	Speaker is not in pairing mode or already connected to another device.	Ensure the speaker is in pairing mode (flashing Bluetooth indicator). Disconnect from any other devices. Restart both the speaker and your device.
No sound or low volume.	Volume levels are too low on speaker or connected device.	Increase volume on both the Sonitrek Go XL and your connected device. Ensure the device is playing audio.
Dual pairing fails.	Speakers are too far apart or already connected to other devices.	Ensure both speakers are close to each other and not connected to any other Bluetooth devices before initiating dual pairing.

SPECIFICATIONS

Feature	Detail
Model Name	Go XL
Wireless Technology	Bluetooth 5
Connectivity	Bluetooth, USB (for charging)
Compatible Devices	Smartphone, Tablet, Laptop, Desktop Computer, Television
Waterproof Rating	IPX7 (True)
Audio Output Mode	Stereo
Surround Sound Channel Configuration	2.0
Power (Amplifier)	40 Watts
Max Speaker Output Power	3 Watts
Special Features	Portable, Wireless, Deep Bass Amplification, Dual Speaker Pairing
Included Components	Speaker, USB-C power cable, User manual
Color	Burnt Orange
Dimensions (L x W x H)	9.8 x 9.8 x 24.8 cm
Weight	1.09 kilograms
Material	Durable coated material

Feature	Detail
Recommended Uses	Outdoor activities, poolside/beach use, situations requiring a durable and portable speaker

WARRANTY INFORMATION

The Sonitrek Go XL speaker comes with a **Limited Warranty**. Please refer to the warranty card included in your product packaging or contact Sonitrek customer support for specific terms and conditions regarding coverage and duration.

SUPPORT

For further assistance, technical support, or warranty claims, please visit the official Sonitrek website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.