

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PHYSEN](#) /

› [PHYSEN Wireless Doorbell Chime Kit User Manual](#)

## PHYSEN 1 Button+1 Receiver

# PHYSEN Wireless Doorbell Chime Kit User Manual

Model: 1 Button + 1 Receiver

## INTRODUCTION

---

Thank you for choosing the PHYSEN Wireless Doorbell Chime Kit. This manual provides detailed instructions for setting up, operating, and maintaining your new doorbell system. Designed for convenience and reliability, this kit ensures you are always aware of visitors, whether you are at home, in the office, or in a classroom setting.

Key features include:

- **Long Wireless Range:** Operates up to 1000ft (300m) in open space.
- **Multiple Ringtones & Volume Levels:** 32 optional ringtones and 5 adjustable volume levels (0 dB to 130 dB), including a mute mode with bright LED flash.
- **Waterproof Transmitter:** IP55 rated for strong weather protection, suitable for temperatures from -4°F to 140°F.
- **Memory Function:** Retains your selected ringtone and volume settings after power off.
- **Easy Installation:** No tools required; can be installed with double-sided tape or screws.

## PACKAGE CONTENTS

---

Your PHYSEN Wireless Doorbell Chime Kit includes:

- 1 x Wireless Doorbell Transmitter (battery operated)
- 1 x Plug-in Smart Doorbell Receiver
- 1 x Double-sided Mounting Tape
- Screws and Anchors (for optional screw-in installation)
- 1 x Battery (pre-installed in transmitter)



*Image: The complete PHYSEN Wireless Doorbell Kit, including the transmitter and receiver.*

## SETUP AND INSTALLATION

---

Installing your PHYSEN Wireless Doorbell is quick and easy. No special tools are required.

### 1. Powering the Receiver

Plug the doorbell receiver into any standard electrical outlet within your desired listening area. The receiver is designed to be compact and should not block other outlets.



*Image: The compact receiver plugged into a wall outlet, ready for use.*

## 2. Installing the Transmitter

The transmitter (push button) can be installed using either the included double-sided tape or screws.

- **Using Double-Sided Tape:** Clean the mounting surface thoroughly. Peel off one side of the protective film from the double-sided tape and apply it firmly to the back of the transmitter. Peel off the other side and press the transmitter firmly onto your desired outdoor surface (e.g., door frame, wall) for at least 30 seconds.
- **Using Screws:** Open the transmitter casing. Mark the desired drilling spots on your wall. Drill pilot holes, insert the anchors, and then secure the transmitter base with the provided screws. Snap the transmitter cover back into place.

# Ultra-long Wireless Range

1000ft working range for your house

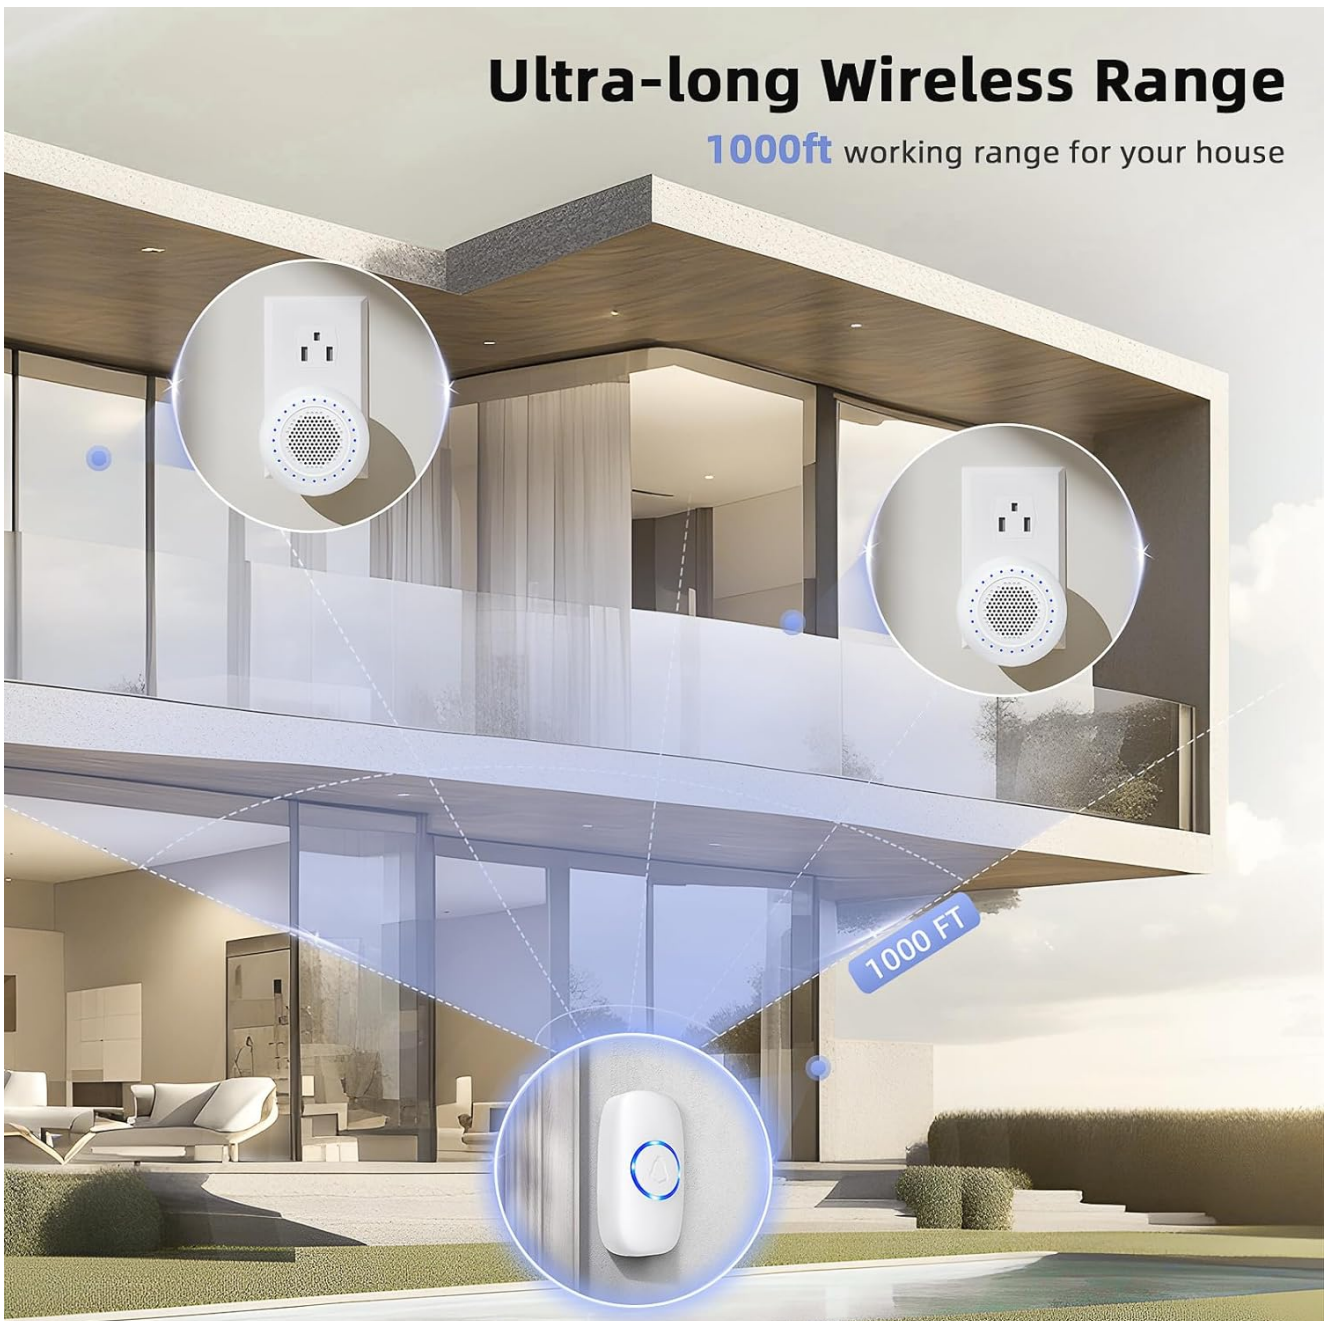


Image: Illustration of the doorbell's 1000ft wireless range, suitable for various home layouts.

## 3. Pairing the Doorbell

The doorbell units are pre-paired at the factory. If re-pairing is needed or you add new components, follow these steps:

*Video: Instructions on how to pair the doorbell transmitter with the receiver.*

1. Long press and hold the ⚙️ (Settings) button on the receiver until the LED indicators flash and the doorbell receiver beeps once, indicating it has entered pairing state.
2. Within 5 seconds, short press the transmitter button. The receiver will chime, and its LED indicators will turn off, confirming successful pairing.

## OPERATION

### 1. Selecting Ringtones

Your doorbell offers 32 different ringtones to choose from. To change the ringtone:

*Video: Guide on how to select your preferred ringtone for the doorbell.*

- Press the (Tones) button on the receiver to cycle through the available melodies.
- Once you find a melody you like, it will be saved automatically.

## 32 Chimes to Choose From



*Image: The doorbell offers 32 chimes, suitable for different situations like not disturbing a sleeping baby or alerting to a delivery.*

## 2. Adjusting Volume

The receiver has 5 adjustable volume levels, ranging from 0 dB (mute) to 130 dB.

- Press the (Volume) button on the receiver to adjust the volume level.
- Continue pressing until you reach your desired volume. The lowest setting is mute mode.

## Mute Mode with Colorful LED Flash



*Image: The mute mode with colorful LED flash is ideal for not disturbing sleeping children or for those with hearing impairments.*

## MAINTENANCE

---

### 1. Waterproof Design

The doorbell transmitter is rated IP55 waterproof, meaning it is protected against dust and low-pressure water jets. This allows it to withstand various weather conditions, including rain, snow, and extreme temperatures (-4°F to 140°F).



Image: The transmitter's IP55 waterproof rating ensures durability in diverse weather conditions.

## 2. Battery Replacement

The transmitter is battery-operated. When the battery is low, the transmitter's LED indicator may not light up or the signal range may decrease. To replace the battery:

- Carefully open the transmitter casing.
- Replace the old battery with a new Alkaline battery of the same type (as specified in the product specifications).
- Close the casing securely.

## TROUBLESHOOTING

---

### 1. Doorbell Not Ringing

- Ensure the receiver is properly plugged into a working power outlet.
- Check if the receiver is in mute mode (0 dB volume level). Adjust the volume if necessary.

- Verify that the transmitter battery is not depleted. Replace if needed.
- Re-pair the transmitter and receiver following the pairing instructions in the Setup section.

## 2. Resetting the Doorbell Receiver

If you experience persistent issues or wish to clear all previous pairings, you can reset the receiver:

*Video: Detailed steps on how to reset the doorbell receiver.*


- Unplug the receiver from the power outlet.
- Press and hold the ⚙️ (Settings) button on the receiver.
- While still holding the button, plug the receiver back into the power outlet. Continue holding the button until the receiver beeps 10 times.
- Release the button. The receiver is now reset, and you will need to re-pair any transmitters.

## SPECIFICATIONS

Feature	Detail
Brand	PHYSEN
Model	1 Button + 1 Receiver
Wireless Range	Up to 1000ft (300m) in open space
Ringtones	32 selectable melodies
Volume Levels	5 levels (0 dB to 130 dB)
Transmitter Waterproof Rating	IP55
Working Temperature	-4°F to 140°F (-20°C to 60°C)
Power Source (Receiver)	AC Plug-in (US style)
Power Source (Transmitter)	Battery (Alkaline, included)
Material	ABS
Color	White
Item Weight	3.52 ounces
Product Dimensions	3.7 x 3.1 x 3.9 inches

# Compact Size

Receiver won't block other socket

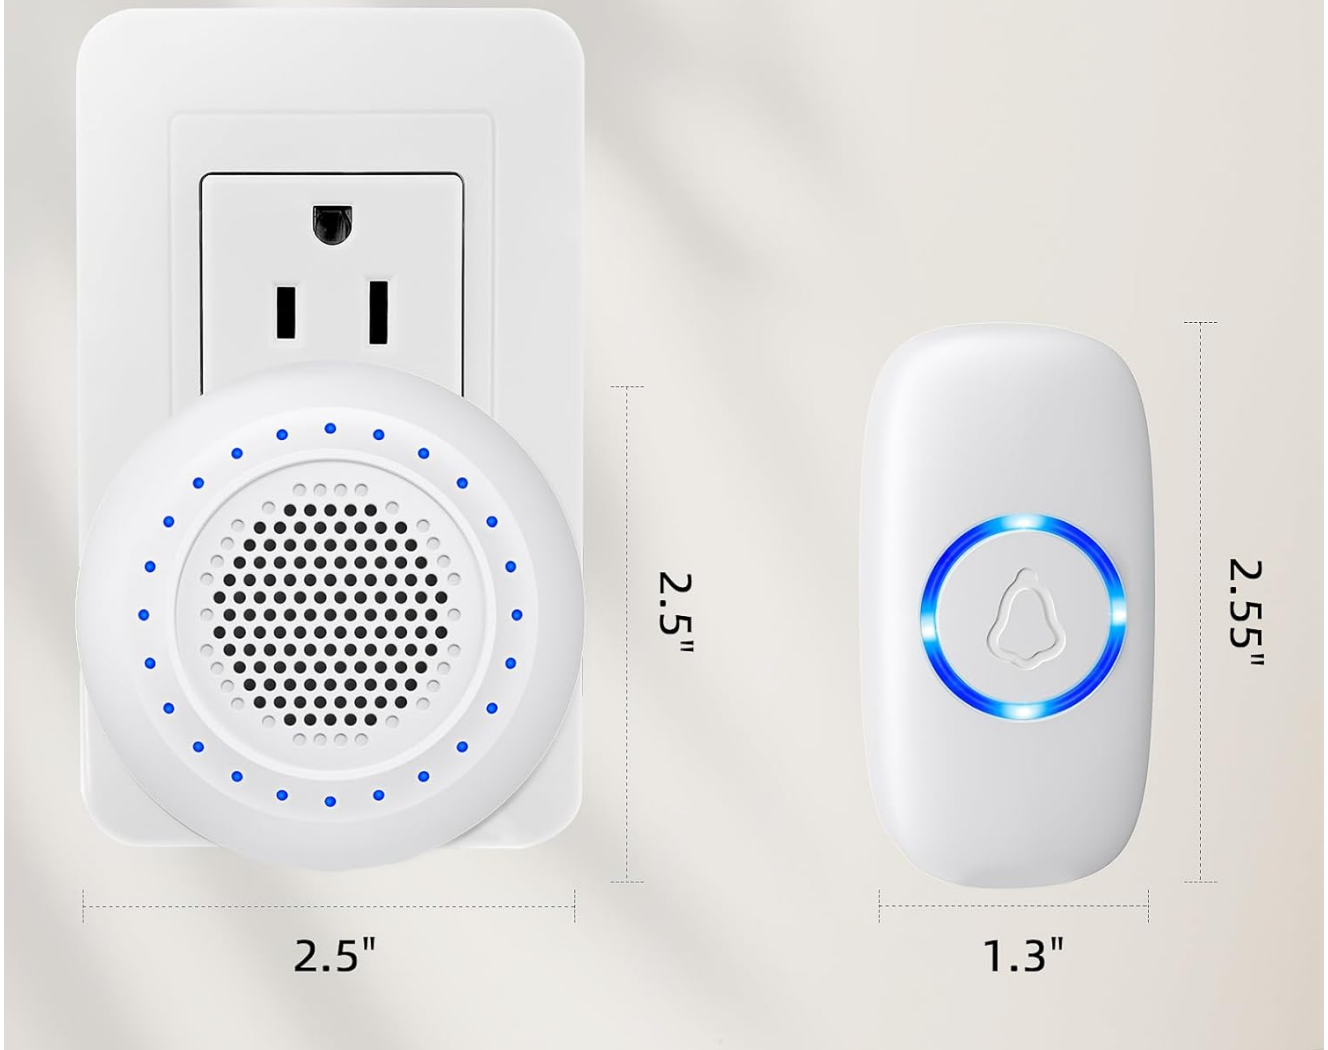

*Image: Dimensions of the compact receiver and transmitter.*

## SUPPORT AND WARRANTY

For further assistance or detailed information, please refer to the official user manual or contact PHYSEN customer support.

You can download the full User Manual (PDF)[here](#).