

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [BPL](#) /

> [BPL 8 Kg Semi-Automatic Washing Machine with Dual Waterfall and Jumbo Pulsator \(BSW-8000PXBL\)](#)

BPL BSW-8000PXBL

User Manual

BPL 8 Kg SEMI-AUTOMATIC WASHING MACHINE

Model: BSW-8000PXBL

Introduction

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your BPL 8 Kg Semi-Automatic Washing Machine (Model: BSW-8000PXBL). Please read this manual thoroughly before using the appliance and retain it for future reference.

Your BPL semi-automatic washing machine is designed to provide effective cleaning with features like a Jumbo Pulsator, Dual Waterfall, and Active Soak Function, ensuring optimal wash quality for various fabric types.

Safety Information

Always adhere to the following safety precautions to prevent injury or damage to the appliance:

- Ensure the washing machine is placed on a stable, level surface.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the machine during operation.
- Do not immerse the electrical parts in water.
- Unplug the machine from the power outlet before cleaning or performing any maintenance.
- Do not wash waterproof materials as this may cause abnormal vibrations.
- Ensure proper grounding to prevent electric shock.

Product Overview

The BPL 8 Kg Semi-Automatic Washing Machine features a twin-tub design for separate washing and spinning functions. Key components include:

- **Wash Tub:** For washing clothes with water and detergent.
- **Spin Tub:** For drying clothes by spinning.
- **Control Panel:** Includes wash timer, wash program selector, and spin timer.
- **Jumbo Pulsator:** Creates powerful water currents for effective cleaning.
- **Magic Filter:** Collects lint and dirt during the wash cycle.
- **Dual Waterfall:** Enhances detergent dissolution and rinsing efficiency.



Image: Front view of the BPL 8 Kg Semi-Automatic Washing Machine, showing the twin tubs and control panel.



Image: Side view of the BPL 8 Kg Semi-Automatic Washing Machine, highlighting its compact design.



Image: Angled view of the BPL 8 Kg Semi-Automatic Washing Machine, showing the top lid and control panel details.

Setup

1. **Unpacking:** Carefully remove the washing machine from its packaging. Check for any damage during transit.
2. **Placement:** Place the machine on a firm, flat surface. Ensure there is adequate space around it for ventilation and operation. Avoid direct sunlight or damp environments.
3. **Leveling:** Adjust the leveling feet at the bottom of the machine to ensure it is stable and does not wobble.
4. **Water Inlet Connection:** Connect the inlet pipe (included) to the water tap and the water inlet on the machine. Ensure connections are secure to prevent leaks.
5. **Drain Pipe Setup:** Position the drain pipe (included) to allow for proper water drainage. Ensure it is not kinked or blocked.
6. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches

the machine's requirements.

Operating Instructions

Washing Process:

1. **Load Clothes:** Open the wash tub lid and place clothes loosely into the wash tub. Do not overload.
2. **Add Water and Detergent:** Fill the wash tub with water to the desired level. Add appropriate amount of detergent. The Dual Waterfall feature will assist in dissolving detergent effectively.
3. **Select Wash Program:** Turn the "Wash Program" selector to choose one of the four available programs (e.g., Gentle, Normal, Strong, Soak).
4. **Set Wash Timer:** Turn the "Wash Timer" knob to set the desired wash time. For heavily soiled clothes, utilize the Active Soak Function by setting the timer for a soak period.
5. **Start Washing:** The machine will begin the wash cycle. The Jumbo Pulsator will create powerful water currents for thorough cleaning.
6. **Drain Water:** Once the wash cycle is complete, turn the "Drain" selector to drain the water from the wash tub.

Rinsing Process:

1. After draining, refill the wash tub with clean water.
2. Set the wash timer for a short rinse cycle (e.g., 3-5 minutes).
3. Drain the rinse water. Repeat if necessary.

Spin Drying Process:

1. Transfer the rinsed clothes to the spin tub. Distribute them evenly to prevent imbalance.
2. Place the spin cap (included) on top of the clothes in the spin tub.
3. Close the spin tub lid securely.
4. Turn the "Spin Timer" knob to set the desired spin time (e.g., 1-5 minutes).
5. The machine will begin spinning. Do not open the spin tub lid until the tub has completely stopped rotating.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your washing machine.

- **Cleaning the Exterior:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Cleaning the Magic Filter:** After each wash, remove and clean the Magic Filter to remove collected lint and debris. Rinse it under running water and reinsert.
- **Cleaning the Wash Tub:** Periodically clean the wash tub to prevent detergent residue buildup. You can

run an empty wash cycle with hot water and a cup of vinegar.

- **Drain Pipe:** Ensure the drain pipe is free from blockages.
- **Storage:** If storing the machine for an extended period, drain all water, clean thoroughly, and unplug the power cord.

Troubleshooting

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Power outage; Lid not closed properly.	Check power connection; Check circuit breaker; Ensure wash/spin tub lid is securely closed.
No water filling	Water tap closed; Water inlet hose kinked or blocked.	Open water tap; Straighten or clear inlet hose.
Water not draining	Drain hose kinked or blocked; Drain selector not set to drain.	Straighten or clear drain hose; Set drain selector to "Drain".
Excessive vibration/noise during spin	Clothes unevenly distributed in spin tub; Machine not level.	Rearrange clothes evenly; Adjust leveling feet.
Poor wash performance	Overloading; Insufficient detergent; Clogged Magic Filter.	Reduce load size; Use correct detergent amount; Clean Magic Filter.

If the problem persists after attempting these solutions, please contact customer support.

Specifications

Feature	Detail
Brand	BPL
Model	BSW-8000PXBL
Capacity	8 Kilograms
Type	Semi-Automatic Top Load
Form Factor	Dual Tub
Special Features	Dual Waterfall, Jumbo Pulsator, Active Soak Function, Magic Filter, High Efficiency
Wash Programs	4 (e.g., Gentle, Normal, Strong, Soak)

Feature	Detail
Color	Blue
Material	Stainless Steel (Tub)
Dimensions (LxWxH)	101 x 49 x 82.5 Centimeters
Included Components	Drain Pipe, User Manual, Warranty Card, Inlet Pipe, Spin Cap
Manufacturer	BPL, Dixon Technologies(India)Ltd.

Warranty and Support

Your BPL 8 Kg Semi-Automatic Washing Machine comes with a standard manufacturer's warranty. Please refer to the included Warranty Card for specific terms, conditions, and duration of the warranty.

For technical assistance, service requests, or any inquiries regarding your product, please contact BPL customer support. Contact details can typically be found on the Warranty Card or the official BPL website.

When contacting support, please have your product model number (BSW-8000PXBL) and purchase details ready.