

[Manuals.plus](#) /

› [Disney Frozen](#) /

› Disney Frozen Digital Cube Alarm Clock User Manual

Disney Frozen WD21986

Disney Frozen Digital Cube Alarm Clock User Manual

Model: WD21986 | Brand: Disney Frozen

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your new Disney Frozen Digital Cube Alarm Clock. Please read this manual thoroughly before use to ensure proper functionality and safety.

2. SAFETY INFORMATION

- Keep out of reach of very young children due to small parts (batteries).
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dispose of batteries properly according to local regulations.
- Do not expose the device to extreme temperatures, direct sunlight, or moisture.
- Clean only with a dry, soft cloth.

3. PACKAGE CONTENTS

- 1 x Disney Frozen Digital Cube Alarm Clock
- 1 x User Manual (this document)

Note: 3 x AAA batteries are required and are not included in the package.

4. PRODUCT OVERVIEW



Figure 1: The Disney Frozen Digital Cube Alarm Clock. This image displays the clock from an angled view, showing the digital display with time (11:57 PM), day (FRI), date (3/23), and temperature (25.8°C). The clock features illustrations of Anna and Elsa from Frozen 2 on its sides. To the right, smaller versions of the clock are shown illuminating in yellow, blue, pink, and green, demonstrating its luminous LED alarm and nightlight capabilities.

Key Features:

- Digital Time Display (12/24 hour format)
- Date and Day Display
- Temperature Display (°C/°F)
- Alarm Function with Snooze
- Luminous LED Backlight (color-changing)
- Nightlight Function
- Compact Cube Design (8x8x8 cm)
- Official Frozen 2 Licensing with Anna and Elsa graphics

5. SETUP

5.1 Battery Installation

1. Locate the battery compartment on the bottom of the alarm clock.

2. Open the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.
5. The clock display should now light up, indicating power.

6. OPERATING INSTRUCTIONS

The clock typically has buttons on the bottom or back for setting time, alarm, and other functions. Refer to the icons next to each button for their specific purpose.

6.1 Setting Time and Date

1. Press the "SET" button (or similar) to enter time setting mode.
2. Use the "UP" and "DOWN" buttons (or similar) to adjust the hour, minute, year, month, and day.
3. Press "SET" again to confirm each setting and move to the next.
4. Once all settings are complete, the clock will return to normal display mode.

6.2 Setting the Alarm

1. Press the "ALARM" button (or similar) to enter alarm setting mode.
2. Use the "UP" and "DOWN" buttons to set the desired alarm hour and minute.
3. Press "ALARM" again to confirm.
4. To activate/deactivate the alarm, look for an "ON/OFF" switch or a dedicated alarm activation button.

6.3 Using the Luminous LED Backlight/Nightlight

- The clock features a soft, color-changing LED backlight.
- To activate the backlight, gently press down on the top of the clock.
- The light will typically cycle through various colors or stay on a single color for a short period before turning off automatically.
- This function also serves as a nightlight for a child's room.

7. MAINTENANCE

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the display dims or the clock stops functioning correctly. Always replace all 3 AAA batteries at the same time.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank or dim.	Batteries are dead or inserted incorrectly.	Check battery polarity or replace with new AAA batteries.
Alarm does not sound.	Alarm is not set or not activated.	Ensure alarm time is set and the alarm function is turned ON.

Problem	Possible Cause	Solution
Backlight is not working.	Batteries are low or the light sensor is obstructed.	Replace batteries. Ensure the top surface is clear for activation.

9. SPECIFICATIONS

- **Model:** WD21986
- **Brand:** Disney Frozen
- **Dimensions:** 8 x 8 x 8 cm (3.15 x 3.15 x 3.15 inches)
- **Weight:** Approximately 200 grams (0.44 lbs)
- **Power Source:** 3 x AAA Batteries (not included)
- **Display Type:** Digital LED
- **Material:** Metal
- **Features:** Alarm, Luminous LED, Nightlight, Temperature Display

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where the product was purchased or visit the official Disney Frozen merchandise website for contact details. Keep your proof of purchase for any warranty claims.

