

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Uncanny Brands](#) /
- › [Uncanny Brands Pokemon Pokeball Waffle Maker WM1-POK-PK1-EU Instruction Manual](#)

## Uncanny Brands WM1-POK-PK1-EU

# Uncanny Brands Pokemon Pokeball Waffle Maker

MODEL: WM1-POK-PK1-EU INSTRUCTION MANUAL

### Important Safeguards

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. To disconnect, remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance has a European Type C plug. Ensure your outlet is compatible or use an appropriate adapter.

### Product Overview

---

The Uncanny Brands Pokemon Pokeball Waffle Maker is designed to create waffles with a distinctive Pokeball imprint. This compact appliance features non-stick cooking plates for easy use and cleaning.



**Image:** The Uncanny Brands Pokemon Pokeball Waffle Maker shown in its closed position, displaying the iconic red and white Pokeball design on its lid. The power indicator lights are visible at the back.



**Image:** The Uncanny Brands Pokemon Pokeball Waffle Maker with its lid open, revealing the circular non-stick cooking plates. The bottom plate features the raised design for the Pokeball imprint on the waffle.

## Setup

---

1. **Unpack:** Carefully remove the waffle maker from its packaging. Retain packaging for future storage or transport.

2. **Initial Cleaning:** Before first use, wipe the cooking plates with a damp cloth or sponge. Dry thoroughly. The exterior can be wiped with a soft, damp cloth. Do not immerse the appliance in water.
3. **Placement:** Place the waffle maker on a stable, heat-resistant, and dry surface. Ensure there is adequate space around the appliance for ventilation.
4. **Power Connection:** Ensure the appliance is unplugged. The waffle maker is equipped with a European Type C plug. Connect it to a compatible wall outlet. If your outlet is not compatible, use a certified adapter (not included).

## Operating Instructions

---

1. **Preheat:** Close the waffle maker and plug it into a suitable electrical outlet. The red indicator light will illuminate, signaling that the appliance is heating up.
2. **Ready Indicator:** Once the waffle maker reaches the optimal cooking temperature, the green indicator light will illuminate. This indicates the appliance is ready for use.
3. **Prepare Batter:** While the waffle maker preheats, prepare your favorite waffle batter. For best results, ensure the batter is not too thick or too thin.
4. **Cook Waffles:** Open the waffle maker. Pour approximately 1/2 to 3/4 cup of batter onto the center of the bottom cooking plate. Close the lid gently. Do not force the lid shut.
5. **Cooking Time:** Cook for 3-5 minutes, or until the waffle is golden brown and steam is no longer escaping from the sides. The green indicator light may cycle on and off during cooking to maintain temperature.
6. **Remove Waffle:** Once cooked, open the lid and carefully remove the waffle using a heat-resistant plastic or wooden utensil. Do not use metal utensils, as they can damage the non-stick coating.
7. **Repeat:** Close the lid and wait for the green indicator light to illuminate again before cooking the next waffle.
8. **Finish:** When finished cooking, unplug the waffle maker from the outlet and allow it to cool completely before cleaning and storing.

## Cleaning and Maintenance

---

Proper cleaning and maintenance will extend the life of your waffle maker.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Cooking Plates:** Use a soft, damp cloth or sponge to wipe the non-stick cooking plates. For stubborn batter residue, a small amount of cooking oil can be applied to soften it before wiping. Do not use abrasive cleaners, scouring pads, or metal brushes, as these can damage the non-stick surface.
3. **Clean Exterior:** Wipe the exterior of the waffle maker with a soft, damp cloth. Do not immerse the appliance in water or any other liquid.
4. **Storage:** Once clean and completely dry, store the waffle maker in a cool, dry place. The cord can be wrapped around the base for compact storage.

## Troubleshooting

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Waffle maker does not heat up.	Not plugged in, power outlet malfunction, or appliance malfunction.	Ensure the appliance is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Waffles stick to the plates.	Plates not properly seasoned, insufficient oil/butter in batter, or batter too thick.	Ensure plates are clean. Lightly brush cooking oil onto plates before each use. Adjust batter consistency.
Waffles are not crispy or undercooked.	Insufficient cooking time, or batter too thin.	Increase cooking time by 1-2 minutes. Ensure the green 'ready' light is on before adding batter. Adjust batter consistency.
Smoke or unusual odor during first use.	Protective oils burning off.	This is normal for first use. Ensure good ventilation. If smoke persists after initial use, unplug and contact support.

## Specifications

Feature	Detail
Model Number	WM1-POK-PK1-EU
Brand	Uncanny Brands
Special Feature	Pokemon Pokeball Design, European Plug (Type-C)
Material	Aluminum
Product Dimensions	5.51"D x 9.45"W x 14.96"H
Wattage	1000 watts
Voltage	220 Volts
Item Weight	3.19 pounds
UPC	840790120973

## Warranty and Support

This Uncanny Brands product is covered by a manufacturer's warranty. For specific warranty details, terms, and conditions, please refer to the documentation included with your purchase or visit the official Uncanny Brands website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Uncanny Brands customer service. Contact information can typically be found on the product packaging or the brand's official website.