



Manuals.plus /

› Samsung /

› Samsung Galaxy Tab A8 (SM-X200) User Manual

Samsung SM-X200

Samsung Galaxy Tab A8 (SM-X200) User Manual

Model: SM-X200 | Release Year: 2022

1. INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Samsung Galaxy Tab A8 (SM-X200) tablet. Please read this guide thoroughly to ensure proper use and to maximize your device's capabilities.

2. DEVICE OVERVIEW

Familiarize yourself with the physical components of your Galaxy Tab A8.

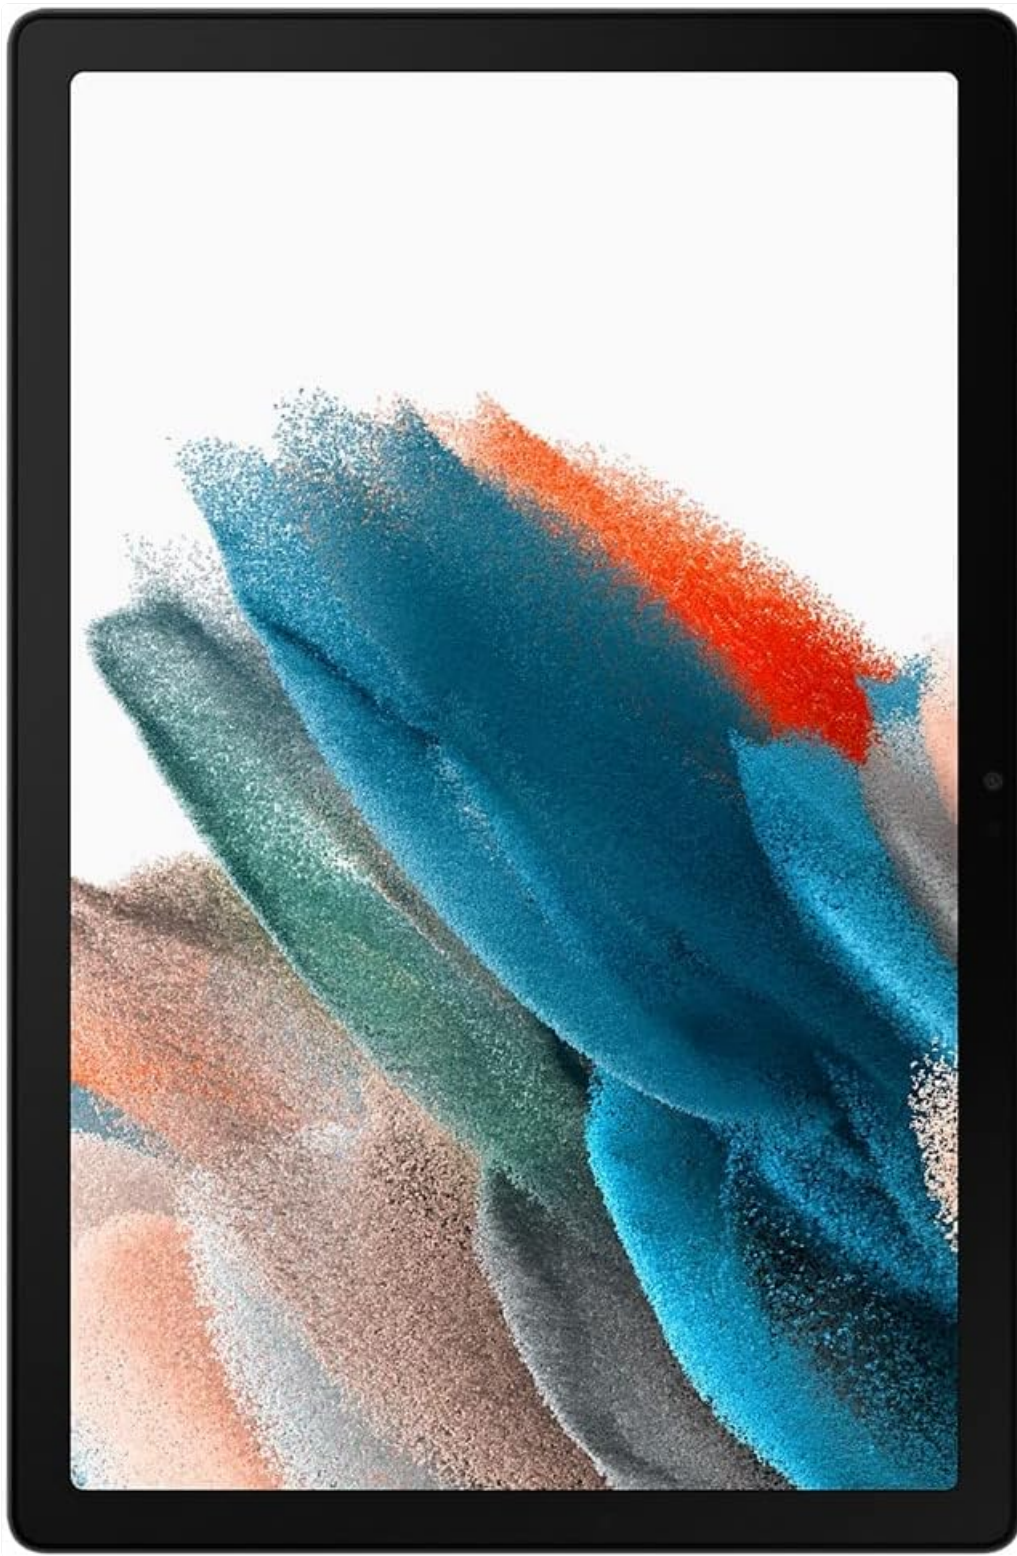


Figure 1: Front view of the Samsung Galaxy Tab A8. The 10.5-inch display is prominent, with the front-facing camera located at the top center bezel.



Figure 2: Rear view of the Samsung Galaxy Tab A8. The silver back panel features the Samsung logo and a single circular rear camera module in the upper left corner.



Figure 3: Bottom edge of the Samsung Galaxy Tab A8. This view highlights the USB-C charging port, two speaker grilles, and a 3.5mm headphone jack.



Figure 4: Top edge of the Samsung Galaxy Tab A8. This view displays the power/lock button, volume rocker, and a microphone opening.

3. SETUP

3.1 Initial Power On

1. Press and hold the **Power/Lock button** located on the top edge of the tablet until the Samsung logo appears.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.

3.2 Charging the Tablet

Connect the provided USB-C cable to the tablet's USB-C port and the other end to a compatible power adapter. The tablet supports fast charging. A full charge is recommended before first use.

3.3 Inserting a MicroSD Card

The tablet supports MicroSD card expansion for additional storage.

1. Locate the SIM/MicroSD card tray on the side of the tablet.
2. Use the ejection tool (not included with all bundles) to open the tray.
3. Place the MicroSD card into the designated slot on the tray.
4. Carefully reinsert the tray into the tablet.

4. OPERATING YOUR TABLET

4.1 Display and Navigation

The Galaxy Tab A8 features a 10.5-inch TFT LCD display with a resolution of 1920 x 1200 pixels. Navigation is primarily touch-based.

- **Touch:** Tap to select items, open apps, or activate buttons.
- **Swipe:** Move your finger across the screen to scroll through content or switch between home screens.
- **Pinch-to-Zoom:** Use two fingers to zoom in or out on images and web pages.
- **Notification Panel:** Swipe down from the top of the screen to access quick settings and notifications.

4.2 Audio Features

The tablet is equipped with quad speakers for an enhanced audio experience.

- **Volume Control:** Use the **Volume rocker** buttons on the top edge to adjust audio levels.
- **Headphone Jack:** Connect wired headphones to the 3.5mm audio jack for private listening.

5. CAMERAS

The Galaxy Tab A8 includes both front and rear cameras for photography and video calls.

- **Rear Camera:** 8 Megapixels. Suitable for general photography and scanning documents.
- **Front Camera:** 5 Megapixels. Ideal for video conferencing and selfies.

To access the camera, tap the Camera app icon on your home screen or app drawer. Select between photo and video modes, and adjust settings as needed.

6. PERFORMANCE AND STORAGE

The tablet is powered by a Unisoc Tiger T618 processor, providing adequate performance for daily tasks, media consumption, and light gaming.

- **RAM:** Available in 3GB or 4GB configurations, depending on the storage variant.
- **Internal Storage:** Available in 32GB, 64GB, or 128GB options.
- **Expandable Storage:** Supports microSD cards up to 1TB for additional storage capacity.

7. BATTERY LIFE

The Galaxy Tab A8 is equipped with a 7040 mAh battery.

- **Typical Usage:** Battery life can vary based on usage patterns, screen brightness, and active applications.
- **Optimization:** To conserve battery, reduce screen brightness, close unused apps, and disable unnecessary connectivity features like Bluetooth or Wi-Fi when not in use.

8. CONNECTIVITY

The tablet offers various connectivity options:

- **Wi-Fi:** Supports 802.11ax for high-speed wireless internet access.
- **Bluetooth:** Allows connection to wireless accessories such as keyboards, mice, and headphones.
- **USB-C:** Used for charging and data transfer.

9. SOFTWARE

The Samsung Galaxy Tab A8 runs on the Android operating system, customized with Samsung's One UI interface.

- **Operating System:** Initially shipped with Android 11, with updates available to newer versions (e.g., Android 13).
- **Updates:** Regularly check for software updates to ensure your device has the latest features and security patches. Navigate to *Settings > Software update* to check for and install updates.

10. MAINTENANCE

Proper care helps extend the life of your tablet.

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid abrasive materials or harsh chemicals.
- **Protection:** Consider using a screen protector and a protective case to guard against scratches and accidental damage.
- **Temperature:** Avoid exposing the tablet to extreme temperatures, direct sunlight, or excessive moisture.

11. TROUBLESHOOTING

Here are solutions to common issues:

- **Tablet not turning on:** Ensure the battery is charged. Connect the tablet to its charger and wait a few minutes before attempting to power it on again.
- **Screen is unresponsive:** Try restarting the tablet by holding down the Power/Lock button for about 10 seconds until the device powers off and then on again.
- **Wi-Fi connection issues:** Check if Wi-Fi is enabled in Quick Settings. Restart your router and the tablet. Forget the network and reconnect.
- **Apps crashing or freezing:** Close and reopen the app. Clear the app's cache (*Settings > Apps > [App Name] > Storage > Clear cache*). Ensure the app and tablet software are up to date.
- **Slow performance:** Close unnecessary background apps. Clear cached data. Consider uninstalling rarely used applications.

12. SPECIFICATIONS

Feature	Specification
Model Name	Galaxy Tab A8
Item Model Number	SM-X200
Brand	Samsung
Screen Size	10.5 Inches
Screen Resolution	1920 x 1200 pixels
RAM	3 GB (as per provided product data, other variants exist)
Hard Drive / Storage	32 GB (as per provided product data, other variants exist)
Expandable Storage	MicroSD up to 1TB
Graphics Coprocessor	Mali-G52 MP2
Processor Brand	Unisoc
Operating System	Android
Wireless Type	802.11ax (Wi-Fi)
Rear Webcam Resolution	8 MP
Front Camera Resolution	5 MP
Battery Capacity	7040 mAh
Item Weight	2 pounds
Item Dimensions (LxWxH)	9 x 6 inches