

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image Handtank Motion Detecting Blast Orb Instruction Manual

Sharper Image Handtank Blast Orb

Sharper Image Handtank Blast Orb Instruction Manual

Model: Handtank Blast Orb

INTRODUCTION

The Sharper Image Handtank Blast Orb is an innovative accessory designed to enhance your laser tag experience. This self-detonating infrared bomb features a 7-second timer and a motion-activated booby trap mode, allowing for strategic gameplay and exciting encounters. It is compatible with Handtank Laser Tag Sets, expanding your tactical options.



Image: The Handtank Blast Orb with its retail packaging, highlighting its tactical suppression features.

PACKAGE CONTENTS

- 1 x Handtank Blast Orb

Please ensure all components are present before proceeding with setup.

SETUP

The Handtank Blast Orb is designed for immediate use. No complex assembly or battery installation is typically required as it comes ready to integrate with your existing Handtank Laser Tag system.

AGES
8+



SHOCK
RESISTANT



INFRARED
MOTION
SENSOR

7 SECONDS TO
DETONATION

PRESS THE 7-SECOND TIMER
TO CLEAR ANY AREA

SHARPER IMAGE®

LASER TAG BLAST ORB

TACTICAL SUPPRESSION



Image: A detailed view of the Blast Orb, emphasizing its shock-resistant design and infrared motion sensor, crucial for its functionality.

OPERATING INSTRUCTIONS

7-Second Detonation Mode

1. To activate the 7-second detonation mode, simply press the timer button located on the orb.
2. Once activated, roll or throw the orb into the desired area.
3. After seven seconds, the orb will emit an explosion of infrared beams, clearing the area and affecting any opponents within its range.



Image: A hand holding the Blast Orb, illustrating the activation of the automatic detonation timer, with a visual countdown.

Booby Trap Mode

1. To activate booby trap mode, press the designated button (refer to product markings if different from timer button).
2. Place the orb in a strategic location where opponents might pass.
3. The motion-activated bomb will detonate as soon as it detects movement, trapping or affecting opponents who trigger it.



ROLL AND RUN

ACTIVATE THE TIMER
AND GET TO COVER



Image: The Blast Orb in Trap Mode, visually representing its motion detection capability and the infrared beams it emits upon activation.

Carrying and Compatibility

The Handtank Blast Orb features a carrying loop, allowing you to attach it to a belt loop or other gear for easy transport during gameplay. It is designed to be fully compatible with Sharper Image Handtank Laser Tag Sets, expanding your tactical options and enhancing team play.



Image: The underside of the Blast Orb, clearly showing the attach point for a strap, enabling hands-free carrying during play.

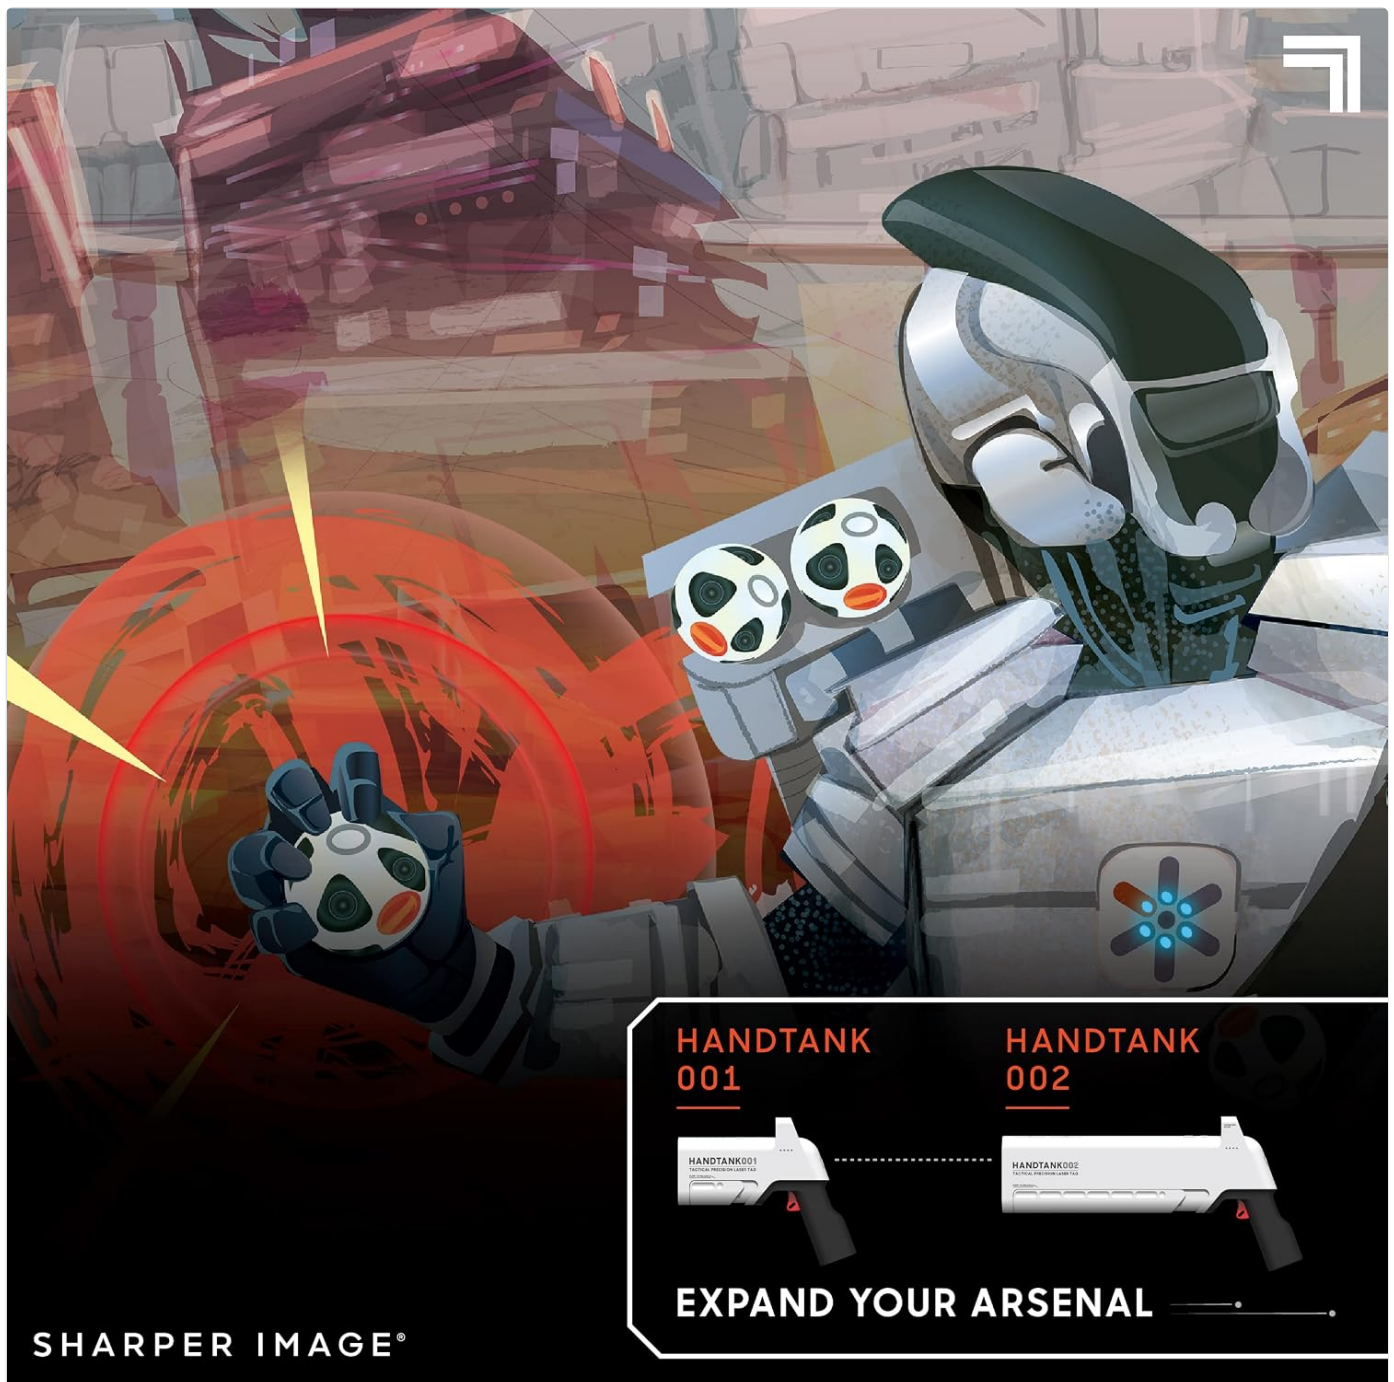


Image: The Blast Orb displayed alongside Handtank 001 and Handtank 002 blasters, illustrating how it expands your laser tag arsenal.

MAINTENANCE

To ensure the longevity and optimal performance of your Handtank Blast Orb, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the orb with a soft, dry cloth to remove dust and debris. Do not use abrasive cleaners or immerse the device in water.
- **Storage:** Store the orb in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Handling:** While designed to be shock-resistant, avoid dropping the orb from significant heights or subjecting it to excessive force.

TROUBLESHOOTING

If you encounter any issues with your Handtank Blast Orb, please refer to the following common solutions:

- **Orb not activating:** Ensure the power button (if present) is pressed firmly. Check for any visible damage.
- **Infrared beams not detected by laser taggers:** Ensure the orb is within range and line of sight of the laser taggers. Verify that the laser taggers are functioning correctly.
- **Motion sensor not responding:** Ensure the orb is placed on a stable surface and there are no obstructions blocking the sensor. Test in different lighting conditions.

If problems persist, please contact Sharper Image customer support.

SPECIFICATIONS

Product Dimensions	3.82 x 7.56 x 10.04 inches
Item Weight	11.1 ounces
Manufacturer Recommended Age	6 years and up
Release Date	March 8, 2022
Manufacturer	Merchsource



SHARPER IMAGE®

Image: The Handtank Blast Orb shown with its approximate dimensions of 3.2 inches in both width and height.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: Sharper Image Brand Video 2022. This video provides an overview of the Sharper Image brand and its product philosophy, showcasing various innovative products including the Handtank Blast Orb.

WARRANTY AND SUPPORT

For warranty information and customer support, please visit the official Sharper Image website or refer to the product packaging for specific details. You can also visit the [Sharper Image Store on Amazon](#) for more products and support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09V3HRRSQ>

More documents and user manuals: <https://manuals.plus/>